

## **UDC2300 Universal Digital Controller Product Manual**

51-52-25-73A  
06/99

---

## **Copyright, Notices, and Trademarks**

**– © Copyright 1999 by Honeywell Inc.**

**Revision A – 6/99**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customer.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

UDC2300 is a Trademark of Honeywell, Inc.

---

# About This Document

## Abstract

This document provides descriptions and procedures for the Installation, Configuration, Operation, and Troubleshooting of your UDC2300 Controller.

## Revision Notes

The following list provides notes concerning all revisions of this document.

Rev. ID	Date	Notes
51-52-25-73	5/99	This document is solely intended for the purpose of supporting the UDC2300 controller.
51-52-25-73A	6/99	Updated Wiring Diagrams for Open Collector Outputs

## Warranty

The device described herein has been manufactured and tested for correct operation and is warranted as follows:

The UDC 2300 Universal Digital Controller carries a two year warranty. This warranty includes immediate technical assistance via a toll free telephone number and complete replacement of parts or the controller, if necessary.

## Conventions

The following conventions are used throughout this manual to alert users of potential hazards and unusual operating conditions:

### **WARNING**

A "warning" indicates actions or procedures which, if not performed correctly, may lead to personal injury or present a safety hazard.

Please follow the instructions described in the warning with care.

### **CAUTION**

A "caution" indicates actions or procedures which, if not performed correctly, may lead to faulty operation or damage to the control equipment.




### **ATTENTION**

An "attention" indicates actions or procedures which may indirectly affect operation or lead to an unexpected control system response.

Note: Notes are used to provide important information which is helpful in maintaining optimum operating performance of the control equipment.

---

## Symbol Meanings

Symbol	What it means
	Protective ground terminal. Provided for connection of the protective earth green (green or green/yellow) supply system conductor.
	WARNING. Risk of electric shock. This symbol warns the user of a potential shock hazard where voltages greater than 30 Vrms, 42.4 Vpeak, or 60 Vdc may be accessible.
	CAUTION. When this symbol appears on the product, see the user manual for more information. This symbol appears next to the required information in the manual.

## Contacts

The following list identifies important contacts within Honeywell.

For this service	Call this number
Technical support  An engineer will discuss your problem with you. <b>Please have your complete model number, serial number, and software version available.</b> Model number and serial number are located on the chassis nameplate.  If it is determined that a hardware problem exists, a replacement instrument or part will be shipped with instructions for returning the defective unit. Do not return your instrument without authorization from Honeywell's Technical Assistance Center or until the replacement has been received.	800-423-9883
To receive a faxed list of frequently asked questions and their answers, dial Honeywell's TACFACS.	1-888-423-9883
To see frequently asked questions and their answers, visit our Internet site	<a href="http://support.totalplant.honeywell.com">http://support.totalplant.honeywell.com</a>



---

# Contents

<b>1</b>	<b>INTRODUCTION .....</b>	<b>1</b>
1.1	Overview .....	1
1.2	CE Conformity (Europe) .....	2
<b>2</b>	<b>INSTALLATION.....</b>	<b>3</b>
2.1	Overview .....	3
2.2	Model Number Interpretation.....	5
2.3	Preliminary Checks .....	6
2.4	Control and Alarm Relay Contact Information.....	8
2.5	Mounting .....	9
2.6	Wiring.....	11
2.7	Wiring Diagrams .....	12
<b>3</b>	<b>INITIAL START-UP .....</b>	<b>21</b>
3.1	Overview .....	21
3.2	Powering Up the Controller .....	21
3.3	Operator Interface and Key Functions .....	22
3.4	Key Error Message .....	22
<b>4</b>	<b>CONFIGURATION .....</b>	<b>24</b>
4.1	Overview .....	24
4.2	Configuration Prompt Hierarchy .....	25
4.3	Configuration Procedure .....	27
4.4	Timer Set Up Group .....	28
4.5	Tuning Set Up Group .....	29
4.6	SP Ramp Set Up Group .....	33
4.7	Accutune Set Up Group .....	37
4.8	Algorithm Set Up Group .....	38
4.9	Input 1 Set Up Group .....	39
4.10	Input 2 Set Up Group .....	43
4.11	Control Set Up Group.....	45
4.12	Options Set Up Group .....	48
4.13	Communications Set Up Group.....	49
4.14	Alarms Set Up Group .....	51
4.15	Configuration Record Sheet .....	53

---

<b>5</b>	<b>MONITORING THE CONTROLLER .....</b>	<b>56</b>
5.1	Overview .....	56
5.2	Operator Interface.....	57
5.3	Entering a Security Code.....	57
5.4	Lockout Feature.....	58
5.5	Monitoring Your Controller .....	60
<b>6</b>	<b>OPERATION .....</b>	<b>64</b>
6.1	Overview .....	64
6.2	Single Display Functionality .....	65
6.3	Start Up Procedure for Operation.....	67
6.4	Control Modes.....	68
6.4.1	Mode Definitions .....	68
6.4.2	What happens when you change modes.....	69
6.5	Setpoints .....	69
6.6	Timer .....	71
6.7	Accutune II .....	73
6.8	Fuzzy Overshoot Suppression .....	76
6.9	Using Two Sets of Tuning Constants.....	76
6.10	Alarm Setpoints .....	78
6.11	Three Position Step Control Algorithm .....	79
6.12	Setting a Failsafe Output Value for Restart After a Power Loss .....	80
6.13	Setting Failsafe Mode.....	81
<b>7</b>	<b>SETPOINT RATE/RAMP/PROGRAM OPERATION.....</b>	<b>83</b>
7.1	Overview .....	83
7.2	Setpoint Rate .....	84
7.3	Setpoint Ramp .....	84
7.4	Setpoint Ramp/Soak Programming .....	86
<b>8</b>	<b>INPUT CALIBRATION .....</b>	<b>93</b>
8.1	Overview .....	93
8.2	Minimum and Maximum Range Values .....	94
8.3	Preliminary Information .....	95
8.4	Input 1 Set Up Wiring .....	97
8.5	Input 1 Calibration Procedure .....	101
8.6	Input 2 Set Up Wiring .....	103
8.7	Input 2 Calibration Procedure .....	105
8.8	Restore Factory Calibration .....	106

---

<b>9</b>	<b>OUTPUT CALIBRATION .....</b>	<b>109</b>
9.1	Overview .....	109
9.2	Current Proportional Output Calibration .....	110
9.3	Auxiliary Output Calibration .....	112
9.4	Three Position Step Output Calibration .....	114
<b>10</b>	<b>TROUBLESHOOTING/SERVICE .....</b>	<b>115</b>
10.1	Overview .....	115
10.2	Troubleshooting Aids .....	116
10.3	Power-up Tests .....	118
10.4	Status Tests .....	118
10.5	Background Tests .....	119
10.6	Controller Failure Symptoms .....	121
10.7	Troubleshooting Procedures .....	122
<b>11</b>	<b>PARTS LIST .....</b>	<b>129</b>
11.1	Exploded View .....	129
<b>12</b>	<b>FUNCTION PARAMETER REFERENCE GUIDE .....</b>	<b>131</b>
12.1	Overview .....	131
12.2	Function Prompts .....	133
12.2.1	0 PCT (AUXILIARY OUTPUT LOW SCALING FACTOR) .....	133
12.2.2	100 PCT (AUXILIARY OUTPUT HIGH SCALING FACTOR) .....	133
12.2.3	4-20 RG (CURRENT DUPLEX RANGE) .....	133
12.2.4	A TUNE (AUTOTUNE KEY LOCKOUT) .....	134
12.2.5	ACTION (CONTROL OUTPUT DIRECTION) .....	134
12.2.6	ALARM1 (LATCHING ALARM FOR OUTPUT) .....	134
12.2.7	ALHYST (ALARM HYSTERESIS) .....	135
12.2.8	AT ERR (ACCUTUNE ERROR CODES) .....	135
12.2.9	AUTOMA (AUTO/MANUAL KEY LOCKOUT) .....	135
12.2.10	AUX OUT (AUXILIARY OUTPUT) .....	136
12.2.11	AxSxEV (ALARMx SETPOINTx EVENT - X = 1 OR 2) .....	137
12.2.12	AxSxHL (ALARMx SETPOINTx STATE - X = 1 OR 2) .....	137
12.2.13	AxSxTY (ALARMx SETPOINTx TYPE - X = 1 OR 2) .....	138
12.2.14	AxSxVA (ALARMx SETPOINTx VALUE - X = 1 OR 2) .....	139
12.2.15	BAUD (BAUD RATE) .....	139
12.2.16	BIAS 1 (INPUT 1 BIAS) .....	139
12.2.17	BIAS 2 (INPUT 2 BIAS) .....	139
12.2.18	BLOCK (ALARM BLOCKING) .....	140
12.2.19	BRNOUT (BURNOUT PROTECTION - SENSOR BREAK) .....	140
12.2.20	ComADD (STATION ADDRESS) .....	141
12.2.21	ComSTA (COMMUNICATIONS STATE) .....	141
12.2.22	CSP BI (COMPUTER SETPOINT BIAS) .....	141
12.2.23	CTRALG (CONTROL ALGORITHM) .....	141

---

12.2.24	CSRATO (COMPUTER SETPOINT RATIO) .....	143
12.2.25	CYC T1 or CT1 X3 (CYCLE TIME - HEAT).....	143
12.2.26	CYC2T2 or CT2 X3 (CYCLE TIME2 - COOL).....	144
12.2.27	DBAND (DEADBAND) .....	144
12.2.28	DECMAL (DECIMAL POINT LOCATION).....	144
12.2.29	DI COM (DIGITAL INPUT COMBINATIONS) .....	145
12.2.30	DIG IN (DIGITAL INPUT).....	145
12.2.31	DISPLAY (SINGLE DISPLAY DEFAULT).....	147
12.2.32	EMISS (EMISSIVITY) .....	147
12.2.33	ENDSEG (END SEGMENT).....	147
12.2.34	EUHRDN (RATE DOWN VALUE).....	147
12.2.35	EUHRUP (RATE UP VALUE) .....	147
12.2.36	FAILSF (FAILSAFE OUTPUT VALUE) .....	148
12.2.37	FILTR1 (INPUT 1 FILTER) .....	148
12.2.38	FILTR2 (INPUT 2 FILTER) .....	148
12.2.39	FINLSP (SINGLE SETPOINT RAMP FINAL SETPOINT).....	148
12.2.40	FREQ (POWER LINE FREQUENCY) .....	149
12.2.41	FSMODE ( FAILSAFE MODE).....	149
12.2.42	FUZZY (FUZZY OVERSHOOT SUPPRESSION).....	149
12.2.43	HYST (HYSTERESIS - OUTPUT RELAY ONLY) .....	149
12.2.44	I MIN or I RPM (RESET - INTEGRAL TIME) .....	151
12.2.45	I2 MIN or I2 RPM (RESET2 - INTEGRAL TIME) .....	151
12.2.46	INCRMT (TIME COUNT INCREMENT) .....	151
12.2.47	IN1 HI (INPUT 1 HIGH RANGE VALUE) .....	153
12.2.48	IN1 LO (INPUT 1 LOW RANGE VALUE) .....	153
12.2.49	IN1TYP (INPUT 1 ACTUATION TYPE).....	154
12.2.50	IN2 HI (INPUT 2 HIGH RANGE VALUE) .....	155
12.2.51	IN2 LO (INPUT 2 LOW RANGE VALUE) .....	155
12.2.52	IN2TYP (INPUT 2 ACTUATION TYPE).....	156
12.2.53	L DISP (DISPLAY FOR TIMER OPTION) .....	156
12.2.54	LNGUAG (LANGUAGE).....	156
12.2.55	LOCK (LOCKOUT) .....	157
12.2.56	LOOPBACK (LOCAL LOOPBACK TEST).....	157
12.2.57	LSP'S (LOCAL SETPOINT SOURCE) .....	157
12.2.58	MANRST (MANUAL RESET) .....	158
12.2.59	MINRPM (RESET UNITS) .....	158
12.2.60	OUTALG (OUTPUT ALGORITHM) .....	158
12.2.61	OUT Hi (HIGH OUTPUT LIMIT).....	159
12.2.62	OUT Lo (LOW OUTPUT LIMIT).....	159
12.2.63	PARITY (PARITY).....	159
12.2.64	PB or GAIN (PROPORTIONAL BAND or GAIN).....	160
12.2.65	PB 2 or GAIN 2 (PROPORTIONAL BAND 2 or GAIN 2).....	160
12.2.66	PBorGN (PROPORTIONAL BAND UNITS) .....	161
12.2.67	PERIOD (TIMEOUT PERIOD).....	161
12.2.68	PG END (PROGRAM TERMINATION STATE) .....	161
12.2.69	PIDSET (NUMBER OF TUNING PARAMETER SETS) .....	162
12.2.70	PWROUT (THREE POSITION STEP CONTROL OUTPUT START-UP MODE) .....	163
12.2.71	PWR UP (POWER UP CONTROLLER MODE RECALL) .....	163
12.2.72	RATE T (RATE TIME) .....	164
12.2.73	RATE2T (RATE2 TIME) .....	164

---

12.2.74	RATIO1 (INPUT 1 RATIO) .....	164
12.2.75	RATIO2 (INPUT 2 RATIO) .....	164
12.2.76	RECYCL (RECYCLES) .....	164
12.2.77	RLY TY (RELAY CYCLE TIME INCREMENT) .....	165
12.2.78	RESET (TIMER RESET CONTROL) .....	165
12.2.79	RN HLD (RUN/HOLD KEY LOCKOUT) .....	165
12.2.80	RPUNIT (ENGINEERING UNITS FOR RAMP SEGMENTS) .....	166
12.2.81	RSPSRC (REMOTE SETPOINT SOURCE) .....	166
12.2.82	SECUR (SECURITY CODE) .....	166
12.2.83	SGx RP (SEGMENT RAMP - x = Segment Number 1 THROUGH 12) .....	167
12.2.84	SGx SP (SEGMENT SETPOINT - x = Segment Number 1 THROUGH 12) .....	167
12.2.85	SGx TI (SEGMENT DURATION - x = Segment Number 1 THROUGH 12) .....	167
12.2.86	SDMODE (SHED MODE) .....	168
12.2.87	SHD_SP (SHED SETPOINT RECALL) .....	168
12.2.88	SHDTIM (SHED TIME) .....	168
12.2.89	SOKDEV (GUARANTEED SOAK DEVIATION) .....	169
12.2.90	SP Hi (SETPOINT HIGH LIMIT) .....	169
12.2.91	SP Lo (SETPOINT LOW LIMIT) .....	169
12.2.92	SPPROG (SETPOINT RAMP/SOAK PROGRAM) .....	170
12.2.93	SPRAMP (SINGLE SETPOINT RAMP) .....	170
12.2.94	SPRATE (SETPOINT RATE) .....	170
12.2.95	SP SEL (SETPOINT SELECT FUNCTION LOCKOUT) .....	171
12.2.96	SP TRK (SETPOINT TRACKING) .....	171
12.2.97	START (TIMER START SELECTION) .....	171
12.2.98	STATE (PROGRAM STATE AT PROGRAM END) .....	171
12.2.99	STRSEG (START SEGMENT) .....	172
12.2.100	SW VAL (AUTOMATIC SWITCHOVER VALUE) .....	172
12.2.101	TI MIN (SINGLE SETPOINT RAMP TIME) .....	172
12.2.102	TIMER (TIMER OPTION) .....	172
12.2.103	ToBEGN (RESET PROGRAMMING TO BEGINNING) .....	172
12.2.104	TUNE (ACCUTUNE - DEMAND TUNING) .....	173
12.2.105	TX DLY (RESPONSE DELAY) .....	173
12.2.106	UNITS (COMMUNICATION OVERRIDE UNITS) .....	173
12.2.107	UNITS (TEMPERATURE UNITS) .....	173
12.2.108	XMITR1 (TRANSMITTER CHARACTERIZATION) .....	174
12.2.109	XMITR2 (TRANSMITTER CHARACTERIZATION) .....	175
<b>13</b>	<b>INDEX .....</b>	<b>178</b>

## Tables

Table 2-1	Condensed Specifications	4
Table 2-2	Preliminary Checks	6
Table 2-3	Control Relay Contact Information	8
Table 2-4	Alarm Relay Contact Information	8
Table 2-5	Mounting Procedure	10
Table 2-6	Permissible Wiring Bundling	12
Table 2-7	Universal Output Functionality and Restrictions	12
Table 4-1	Configuration Prompt Hierarchy	25
Table 4-2	Configuration Procedure	27
Table 4-3	TIMER Group (Numeric Code 100) Function Prompts	28
Table 4-4	TUNING Group (Numeric Code 200) Function Prompts	29
Table 4-5	SPRAMP Group (Numeric Code 300) Function Prompts	33
Table 4-6	ATUNE Group (Numeric Code 400) Function Prompts	37
Table 4-7	ALGOR Group (Numeric Code 500) Function Prompts	38
Table 4-8	INPUT1 Group (Numeric Code 600) Function Prompts	39
Table 4-9	INPUT2 Group (Numeric Code 700) Function Prompts	43
Table 4-10	CONTRL Group (Numeric Code 800) Function Prompts	45
Table 4-11	Options Group (Numeric Code 900) Function Prompts	48
Table 4-12	Communications Group (Numeric Code 1000)	49
Table 4-13	ALARMS Group (Numeric Code 1100) Function Prompts	51
Table 5-1	Procedure to Enter a Security Code	58
Table 5-2	Annunciators	60
Table 5-3	Lower Display Key Parameter Prompts	61
Table 5-4	Error Messages	62
Table 6-1	Single Display Parameters	66
Table 6-2	Procedure for Starting Up the Controller	67
Table 6-3	Control Mode Definitions	68
Table 6-4	Changing Control Modes (Dual Display Only)	69
Table 6-5	Procedure for Changing the Local Setpoints	69
Table 6-6	Procedure for Switching Between Setpoints	71
Table 6-7	Procedure for Starting "TUNE"	73
Table 6-8	Procedure for Using TUNE at Start-up for Duplex Control	74
Table 6-9	Procedure for Accessing Accutune Error Codes	75
Table 6-10	Accutune Error Codes	75
Table 6-11	Set Up Procedure	77
Table 6-12	Procedure for Switching PID SETS from the Keyboard	77
Table 6-13	Procedure for Displaying Alarm Setpoints	78
Table 6-14	Procedure for Displaying 3Pstep Motor Position	79
Table 6-15	Procedure for Setting a Failsafe Value	80
Table 6-16	Procedure for Setting a Failsafe Mode	81
Table 7-1	Running A Setpoint Ramp	85
Table 7-2	Program Contents	87
Table 7-3	Run/Monitor Functions	91
Table 8-1	Voltage and Resistance Equivalents for Input 1 Range Values	94
Table 8-2	Equipment Needed	96
Table 8-3	Set Up Wiring Procedure for Thermocouple Inputs Using an Ice Bath	97
Table 8-4	Set Up Wiring Procedure for Thermocouple Inputs using Thermocouple Source	97

---

Table 8-5	Set Up Wiring Procedure for RTD Inputs	99
Table 8-6	Set Up Wiring Procedure for Radiamatic, Milliampere, Millivolts, or Volts Inputs (Except 0-10 Volts)	99
Table 8-7	Set Up Wiring Procedure for 0 to 10 Volts	101
Table 8-8	Input 1 Calibration Procedure	102
Table 8-9	Input 2 Calibration Procedure	106
Table 8-10	Restore Factory Calibration	107
Table 9-1	Set Up Wiring Procedure for Current Proportional Output	110
Table 9-2	Current Proportional Output Calibration Procedure	111
Table 9-3	Set Up Wiring Procedure for Auxiliary Output	112
Table 9-4	Auxiliary Output Calibration Procedure	113
Table 9-5	Three Position Step Output Calibration Procedure	114
Table 10-1	Procedure for Identifying the Software Version	117
Table 10-2	Procedure for Displaying the Status Test Results	118
Table 10-3	Background Tests	119
Table 10-4	Controller Failure Symptoms	121
Table 10-5	Troubleshooting Power Failure Symptoms	123
Table 10-6	Troubleshooting Current Proportional Output Failure	123
Table 10-7	Troubleshooting Time Proportional Output Failure	124
Table 10-8	Troubleshooting Current/Time or Time/Current Proportional Output Failure	125
Table 10-9	Troubleshooting Alarm Relay Output Failure	126
Table 10-10	Troubleshooting a Keyboard Failure	127
Table 11-1	Parts Identification	129
Table 11-2	Parts Not Shown	130
Table 12-1	Function Parameter Look-up Table	132

## Figures

Figure 1-1 UDC 2300 Operator Interface	1
Figure 2-1 Model Number Interpretation	5
Figure 2-2 Jumper Placements	7
Figure 2-3 Mounting Dimensions (not to scale)	9
Figure 2-4 Mounting Method	10
Figure 2-5 Composite Wiring Diagram	13
Figure 2-6 Mains Power Supply	13
Figure 2-7 Input 1 Connections	14
Figure 2-8 Input 2 Connections	14
Figure 2-9 Electromechanical Relay Output	14
Figure 2-10 Solid State Relay Output	15
Figure 2-11 Open Collector Relay Output	15
Figure 2-12 Current Output	16
Figure 2-13 External Solid State Relay Option (Internal Open Collector Output)	16
Figure 2-14 Three Position Step Control Connections	17
Figure 2-15 Alarm and Duplex Output Connections	17
Figure 2-16 External Interface Option Connections	18
Figure 2-17 Transmitter Power for 4-20 mA — 2 wire Transmitter Using Open Collector Alarm 2 Output (Model DC230B-XT-XX-XX-XXXXXXX-XX-X)	19
Figure 2-18 Transmitter Power for 4-20 mA — 2 Wire Transmitter Using Auxiliary Output (Model DC230B-XX-2X-XX-XXXXXXX-XX-X)	19
Figure 3-1 Operator Interface and Key Functions	22
Figure 5-1 Operator Interface	57
Figure 7-1 Ramp/Soak Profile Example	89
Figure 7-2 Program Record Sheet	90
Figure 8-1 Input 1 and Input 2 Wiring Terminals	95
Figure 8-2 Wiring Connections for Thermocouple Inputs Using an Ice Bath	97
Figure 8-3 Wiring Connections for Thermocouple Inputs Using Thermocouple Source	98
Figure 8-4 Wiring Connections for RTD (Resistance Thermometer Device)	99
Figure 8-5 Wiring Connections for Radiamatic, Milliampere, Millivolts, or Volts (Except 0 to 10 Volts)	101
Figure 8-6 Wiring Connections for 0 to 10 Volts	101
Figure 8-7 Wiring Connections for 4 to 20 mA Input – Input 2	104
Figure 8-8 Wiring Connections for 1 to 5 Volt Input – Input 2	105
Figure 9-1 Wiring Connections for Calibrating Current Proportional Output	110
Figure 9-2 Wiring Connections for Calibrating Auxiliary Output	112
Figure 11-1 UDC2300 Exploded View	129



# 1 Introduction

## 1.1 Overview

The UDC 2300 is a microprocessor-based stand-alone controller. It combines reliability and operating simplicity in a cost-effective 1/4-DIN size controller.

The UDC 2300 monitors and controls temperatures and other variables in applications such as environmental chambers, plastic processing machines, furnaces and ovens, and packaging machinery.

Its features include:

- *Universal AC Power Supply,*
- *Input/Output Isolation,*
- *Isolated Auxiliary Current Output / Digital Input*
- *Modbus and ASCII Communications*
- *Timer*
- *Accutune II Tuning with Fuzzy Logic Overshoot Suppression.*
- *2<sup>nd</sup> Input (Remote Setpoint)*
- *Setpoint Ramp/Rate/Program*
- *Three Position Step Control*
- *Duplex (Heat/Cool)*

The UDC 2300 is also downward compatible with existing UDC 2000 applications and installations **except** for RTD and 0-10 Volt inputs.

See wiring diagrams in Section 2 - Installation.

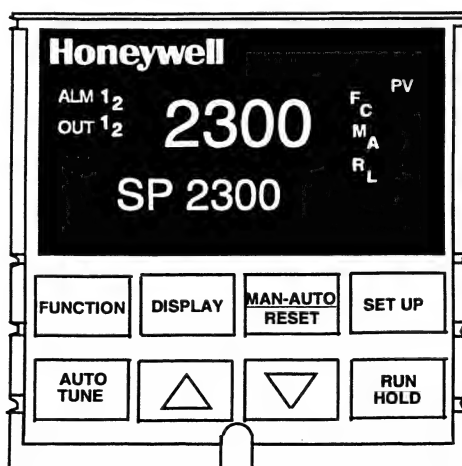


Figure 1-1 UDC 2300 Operator Interface

## 1.2 CE Conformity (Europe)

This product is in conformity with the protection requirements of the following European Council Directives: **73/23/EEC**, the Low Voltage Directive, and **89/336/EEC**, the EMC Directive. Conformity of this product with any other “CE Mark” Directive(s) shall not be assumed.

*Product Classification:* Class I: Permanently connected, panel-mounted Industrial Control Equipment with protective earthing (grounding). (EN61010-1).

*Enclosure Rating:* Panel-mounted equipment, IP 00. This controller must be panel-mounted. Terminals must be enclosed within the panel. Front panel IP 65 (IEC 529).

*Installation Category (Overvoltage Category):* Category II: Energy-consuming equipment supplied from the fixed installation, local level appliances, and Industrial Control Equipment. (EN61010-1)

*Pollution Degree:* Pollution Degree 2: Normally non-conductive pollution with occasional conductivity caused by condensation. (Ref. IEC 664-1)

*EMC Classification:* Group 1, Class A, ISM Equipment (EN55011, emissions), Industrial Equipment (EN50082-2, immunity)

*Method of EMC Assessment:* Technical File (TF)

*Declaration of Conformity:* 51309602-000

Deviation from the installation conditions specified in this manual, and the special conditions for CE conformity in Section 2.1, may invalidate this product’s conformity with the Low Voltage and EMC Directives.

## 2 Installation

### 2.1 Overview

#### Introduction

Installation of the UDC 2300 consists of mounting and wiring the controller according to the instructions given in this section. Read the pre-installation information, check the model number interpretation (Subsection 2.2) , and become familiar with your model selections, then proceed with installation.

#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
2.1 Overview	3
2.2 Model Number Interpretation	5
2.3 Preliminary Checks	6
2.4 Control and Alarm Relay Contact Information	8
2.5 Mounting	9
2.6 Wiring	11
2.7 Wiring Diagrams	12
Composite Wiring Diagram	13
AC Line Voltage	13
Input 1 Connections	14
Input 2 Connections	14
Relay Output	
Electromechanical	14
Solid State	15
Open Collector	15
Current Output Connections	16
External Solid State Relay Output Option	16
Three Position Step Control Connections	17
Alarm and Duplex Output Connections	17

## Pre-installation Information

If the controller has not been removed from its shipping carton, inspect the carton for damage then remove the controller.

- Inspect the unit for any obvious shipping damage and report any damage due to transit to the carrier.
- Make sure a bag containing mounting hardware is included in the carton with the controller.
- Check that the model number shown on the inside of the case agrees with what you have ordered.

## Condensed Specifications

Honeywell recommends that you review and adhere to the operating limits listed in Table 2-1 when you install your controller.

**Table 2-1 Condensed Specifications**

<b>Operating Limits</b>	<b>Ambient Temperature:</b> 32 to 131°F (0 to 55°C) <b>Relative Humidity:</b> 5 to 90% RH up to 104°F (40°C) <b>Vibration:</b> <i>Frequency:</i> 0 to 200 Hz <i>Acceleration:</i> 0.6g <b>Mechanical Shock:</b> <i>Acceleration:</i> 5g <i>Duration:</i> 30 ms <b>Power:</b> 90 to 264 Vac, 50/60 Hz (CSA models rated to 250 Vac maximum) <b>Power Consumption:</b> 12 VA maximum
<b>Accuracy</b>	±0.25% of span typical ±1 digit for display 15-bit resolution typical
<b>CE Conformity Special Conditions (Europe)</b>	Shielded twisted-pair cables are required for all analog I/O, process variable, RTD, thermocouple, dc millivolt, low level signal, 4-20 mA, digital I/O, and computer interface circuits.  <i>Refer to 51-52-05-01, How to Apply Digital Instrumentation in Severe Electrical Noise Environments, for additional information.</i>



## 2.3 Preliminary Checks

### Introduction

Before you install the controller, remove the chassis and make any preliminary checks necessary that are listed in Table 2-2. Figure 2-2 shows the locations for jumper placements.


**Table 2-2 Preliminary Checks**

Check Number	Preliminary Check	Description
1	Input 1 Jumper Placement	Check the internal jumper for <b>INPUT 1</b> to make sure it is set for the correct input type. The jumper is located at position S101 on the printed wiring board. Figure 2-2 shows the location of the jumper and position selections.
2	Optional Input 2 (RSP) Jumper Placement	Check the internal jumper for <b>INPUT 2</b> to make sure it is set for the correct input type. The jumper is located at position S201 on the printed wiring board. Figure 2-2 shows the location of the jumper and position selections.
3	Control Relay 1 and Current Output	Check the internal jumper (W101) for <b>CONTROL</b> . The relay is shipped as N.O. (Normally Open). Figure 2-2 shows the location of the jumper and position selections.  See Table 2-3 for <b>Control Relay</b> contact information
4	Control Relay 2 and Alarm Relay Action.	The controller has been shipped with <b>ALARM</b> relays configured for N.C. (Normally Closed). If you want to change to N.O. refer to Figure 2-2, Jumper positions W201 and W202:  W201 is the <b>ALARM RELAY 1</b> jumper.  W202 is the jumper for <b>CONTROL RELAY #2</b> for Duplex Output or 3 position step control and an <b>ALARM RELAY 2</b> for all others.  See Table 2-3 for <b>Control Relay</b> contact information, and Table 2-4 for <b>Alarm Relay</b> contact information.  See Alarm Relay Caution Note, Page 8.

**Note:** Solid State and Open Collector must have jumper set to N.O. (Normally Open).

3 Position Step and Time Duplex must have Output 2 jumper (W202) set to N.O.

## Jumper Placements

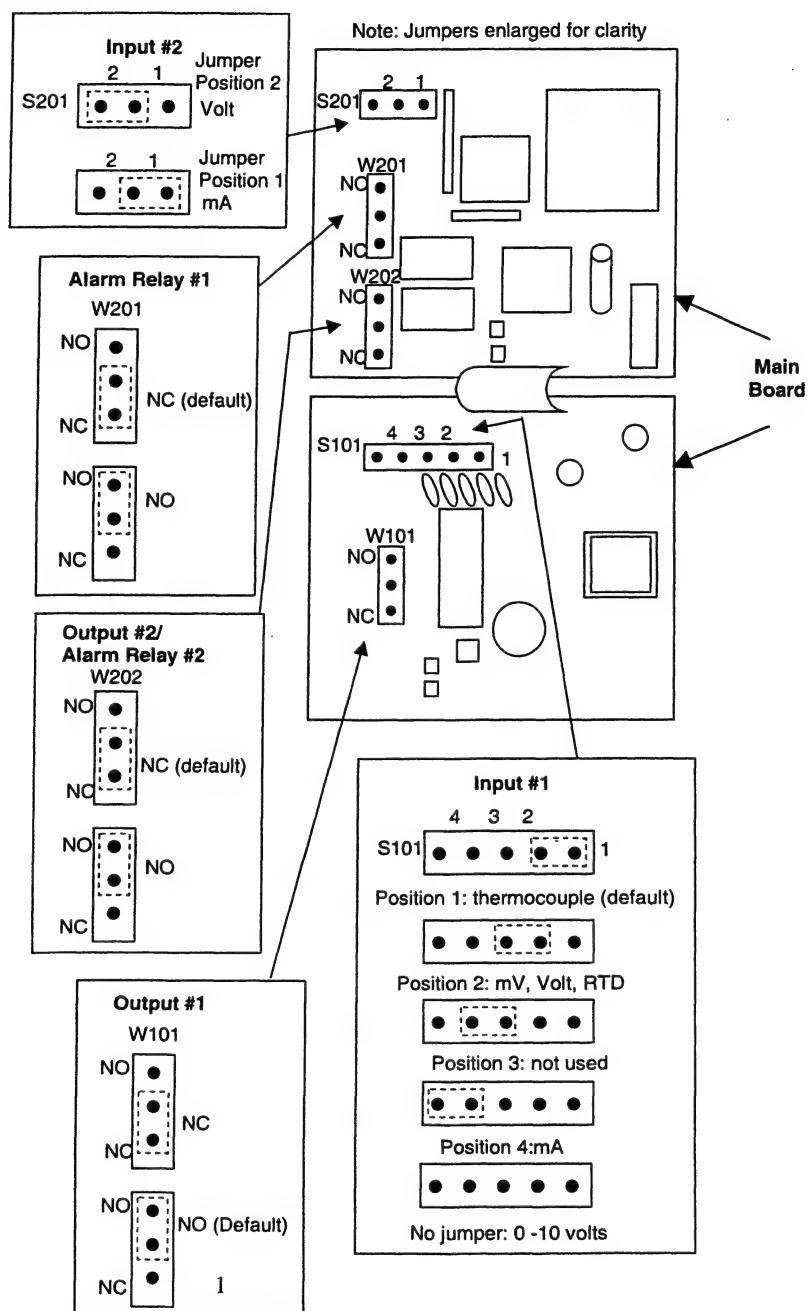

1. For Current Output use the N.O. position (Default)

Figure 2-2 Jumper Placements

## 2.4 Control and Alarm Relay Contact Information

### Control Relays

#### ATTENTION

Control relays operate in the standard control mode (that is, energized when output state is on).

**Table 2-3 Control Relay Contact Information**

Unit Power	Control Relay Wiring	Control Relay Contact	#1 or #2 Output Indicator Status
Off	N.O.	Open	Off
	N.C.	Closed	
On	N.O.	Open Closed	Off On
	N.C.	Closed Open	Off On

### Alarm Relays

#### ATTENTION

Alarm relays are designed to operate in a failsafe mode (that is, de-energized during alarm state). This results in alarm actuation when power is OFF or when initially applied, until the unit completes self diagnostics. If power is lost to the unit, the alarms will function.

**Table 2-4 Alarm Relay Contact Information**

Unit Power	Alarm Relay Wiring	Variable NOT in Alarm State		Variable in Alarm State	
		Relay Contact	Indicators	Relay Contact	Indicators
Off	N.O.	Open	Off	Open	Off
	N.C.	Closed		Closed	
On	N.O.	Closed	Off	Open	On
	N.C.	Open		Closed	



## 2.5 Mounting

### Physical Considerations

The controller can be mounted on either a vertical or tilted panel using the mounting kit supplied. Adequate access space must be available at the back of the panel for installation and servicing activities.

- Overall dimensions and panel cutout requirements for mounting the controller are shown in Figure 2-3.
- The controller's mounting enclosure must be grounded according to CSA standard C22.2 No. 0.4 or Factory Mutual Class No. 3820 paragraph 6.1.5.
- The front panel is moisture rated NEMA 3/IP65 (IEC) when properly installed with panel gasket.

### Overall Dimensions

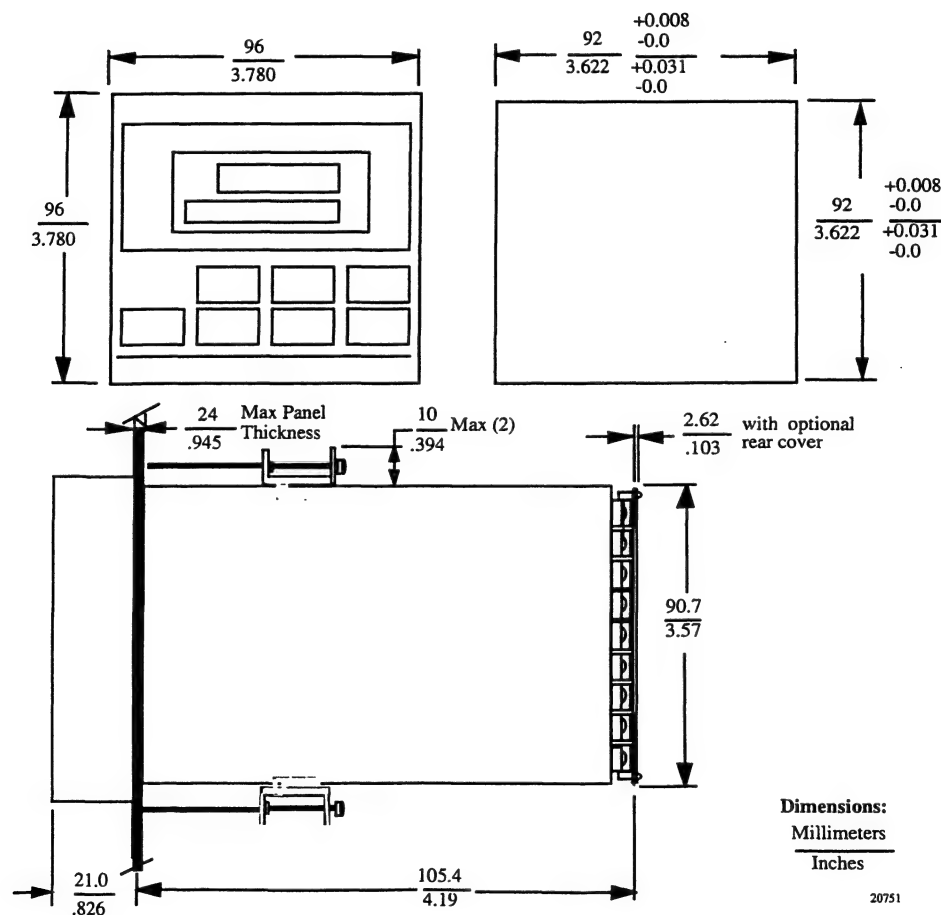


Figure 2-3 Mounting Dimensions (not to scale)

## Mounting Method

Before mounting the controller, refer to the nameplate on the outside of the case and make a note of the model number. It will help later when selecting the proper wiring configuration.

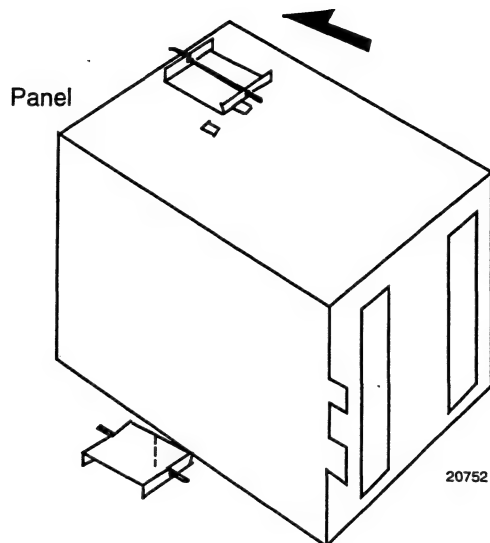


Figure 2-4 Mounting Method

## Mounting Procedure

Table 2-5 Mounting Procedure

Step	Action
1	Mark and cut out the controller hole in the panel according to the dimension information in Figure 2-3.
2	Remove the screw cover and loosen the screw on the front of the controller. Pull the chassis out of the case.
3	Orient the case properly and slide it through the panel hole from the front.
4	Remove the mounting kit from the shipping container and install the kit as follows: <ul style="list-style-type: none"><li>• Install the screws into the threaded holes of the clips.</li><li>• Insert the prongs of the clips into the two holes in the top and bottom of the case.</li><li>• Tighten both screws to secure the case against the panel.</li><li>• Carefully slide the chassis assembly into the case, press to close, and tighten the screw. Replace the screw cover.</li></ul>

## 2.6 Wiring

### Electrical Considerations



The controller is considered “rack and panel mounted equipment” per EN61010-1, Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use, Part 1: General Requirements. Conformity with 72/23/EEC, the Low Voltage Directive requires the user to provide adequate protection against a shock hazard. The user shall install this controller in an enclosure that limits OPERATOR access to the rear terminals.

### Mains Power Supply

This equipment is suitable for connection to 90 to 264 Vac, 50/60 Hz, power supply mains. It is the user's responsibility to provide a switch and non-time delay (North America), quick-acting, high breaking capacity, Type F (Europe), 1/2A, 250V fuse(s), or circuit-breaker, as part of the installation. The switch or circuit-breaker shall be located in close proximity to the controller, within easy reach of the OPERATOR. The switch or circuit-breaker shall be marked as the disconnecting device for the controller.

### Controller Grounding

PROTECTIVE BONDING (grounding) of this controller and the enclosure in which it is installed shall be in accordance with National and Local electrical codes. To minimize electrical noise and transients that may adversely affect the system, supplementary bonding of the controller enclosure to a local ground, using a No. 12 (4 mm<sup>2</sup>) copper conductor, is recommended.

### Control/Alarm Circuit Wiring

The insulation of wires connected to the Control/Alarm terminals shall be rated for the highest voltage involved. Extra Low Voltage (ELV) wiring (input, current output, and low voltage Control/Alarm circuits) shall be separated from HAZARDOUS LIVE (>30 Vac, 42.4 Vpeak, or 60 Vdc) wiring per Permissible Wiring Bundling, Table 2-6.

### Electrical Noise Precautions

Electrical noise is composed of unabated electrical signals which produce undesirable effects in measurements and control circuits.

Digital equipment is especially sensitive to the effects of electrical noise. Your controller has built-in circuits to reduce the effect of electrical noise from various sources. If there is a need to further reduce these effects:

- *Separate External Wiring*—Separate connecting wires into bundles (See Permissible Wiring Bundling - Table 2-6) and route the individual bundles through separate conduit metal trays.  
*Use Suppression Devices*—For additional noise protection, you may want to add suppression devices at the external source. Appropriate suppression devices are commercially available.

---

### ATTENTION

For additional noise information, refer to Document #51-52-05-01, *How to Apply Digital Instrumentation in Severe Electrical Noise Environments*.

---

## Permissible Wiring Bundling

**Table 2-6 Permissible Wiring Bundling**

Bundle No.	Wire Functions
1	<ul style="list-style-type: none"> <li>• Line power wiring</li> <li>• Earth ground wiring</li> <li>• Control relay output wiring</li> <li>• Line voltage alarm wiring</li> </ul>
2	<b>Analog</b> signal wire, such as: <ul style="list-style-type: none"> <li>• Input signal wire (thermocouple, 4 to 20 mA, etc.)</li> <li>• 4-20 mA output signal wiring</li> </ul> <b>Digital</b> input signals
3	<ul style="list-style-type: none"> <li>• Low voltage alarm relay output wiring</li> <li>• Low voltage wiring to solid state type control circuits</li> </ul>

## 2.7 Wiring Diagrams

### Identify Your Wiring Requirements

To determine the appropriate diagrams for wiring your controller, refer to the model number interpretation in this section. The model number of the controller can be found on the outside of the case.

### Universal Output Functionality and Restrictions

**Table 2-7 Universal Output Functionality and Restrictions**

Output Type	Output/Socket				
	Current Output	Relay #1	Relay #2	Relay #3	Auxiliary Output
Time Simplex 1	N/I	Output 1	Alarm 2	Alarm 1	Not Needed
Time Simplex 2	N/A	N/I	Output	Alarm 1	Not Needed
Current Simplex	Output	N/I	Alarm 2	Alarm 1	Not Needed
Time Duplex or TPSC	N/I	Output 1	Output 2	Alarm 1	Not Needed
Current Dup. 100%	Output 1	N/I	Alarm 2	Alarm 1	Not Needed
Current Dup. 50%	Output 1	N/I	Alarm 2	Alarm 1	Output 2
Current/Time	Output 1	N/I	Output 2	Alarm 1	Not Needed
Time/Current	Output 2	N/I	Output 1	Alarm 1	Not Needed


N/I = Not Installed

N/A = The output form or the individual output is Not Available or is not used for this output form.

Not Needed = Auxiliary Output is not needed to provide the desired output function and can be used for another purpose. Auxiliary Output could also be used as a substitute for current Output 1.

## Wiring the Controller


Using the information contained in the model number, select the appropriate wiring diagrams from the composite wiring diagram below. Refer to the individual diagrams listed to wire the controller according to your requirements.

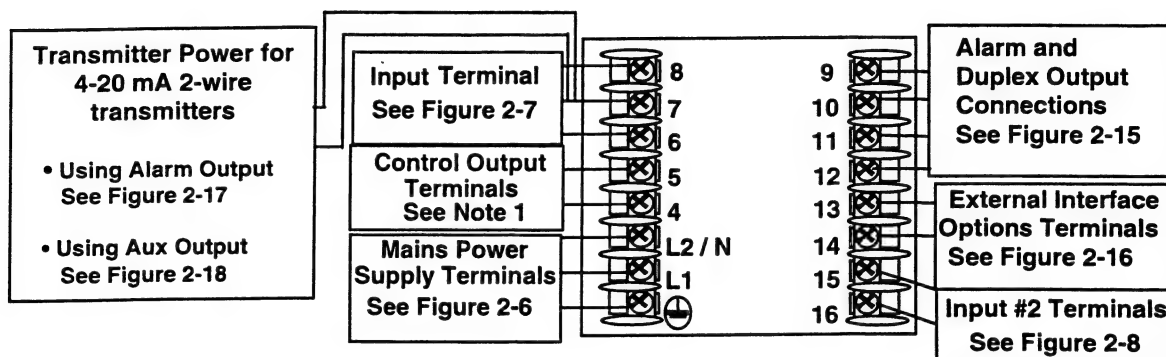

NOTE1: Time Proportional Electromechanical Relay Output – See Figure 2-9  
 Time Proportional Solid State Relay Output – See Figure 2-10  
 Time Proportional Open Collector Output – See Figure 2-11  
 Current Output – See Figure 2-12  
 External Solid State Relay Output – See Figure 2-13  
 Three Position Step Control Output – See Figure 2-14

24855


**Figure 2-5 Composite Wiring Diagram**

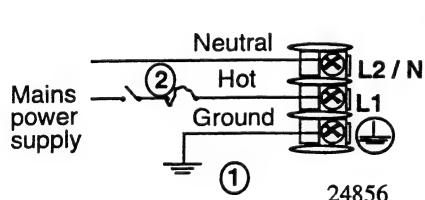

① **PROTECTIVE BONDING** (grounding) of this controller and the enclosure in which it is installed, shall be in accordance with National and Local electrical codes. To minimize electrical noise and transients that may adversely affect the system, supplementary bonding of the controller enclosure to a local ground, using a No. 12 (4 mm<sup>2</sup>) copper conductor, is recommended. **Before powering the controller, see "Preliminary Checks" in this section of the Product manual for switch and jumper settings.**


② Provide a switch and non-time delay (North America), quick-acting, high breaking capacity, type F (Europe), 1/2 A, 250 V fuse(s), or circuit-breaker as part of the installation.

**Figure 2-6 Mains Power Supply**

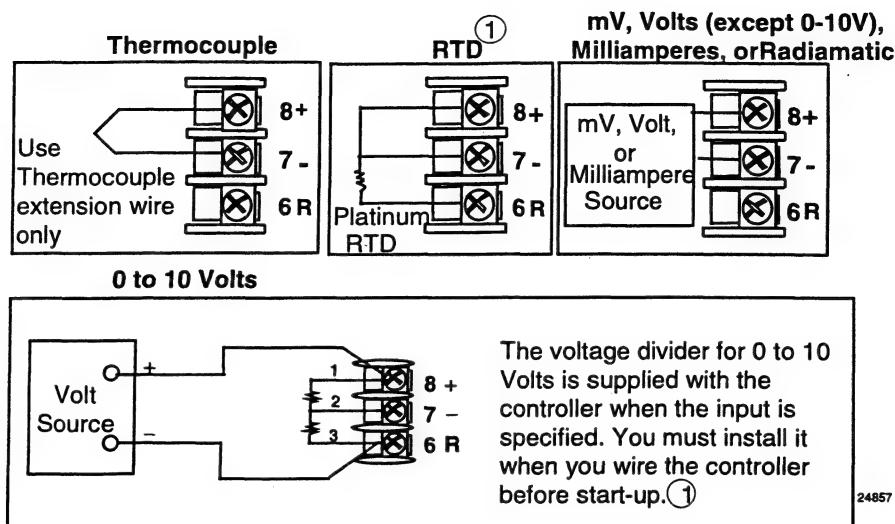


① These inputs are wired differently than the UDC2000

**Figure 2-7 Input 1 Connections**

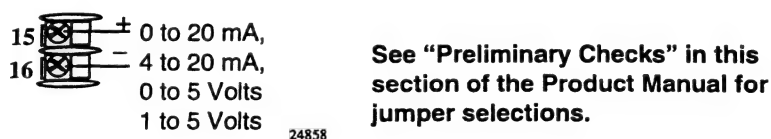


**Figure 2-8 Input 2 Connections**

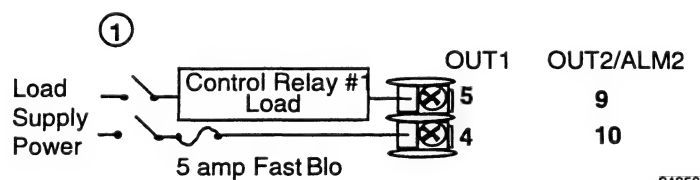

See Figure 2-15 for Alarm and Duplex Output Connections.  
See Table 2-3 and Table 2-4 for Control and Alarm Relay Contact information.


**Figure 2-9 Electromechanical Relay Output**

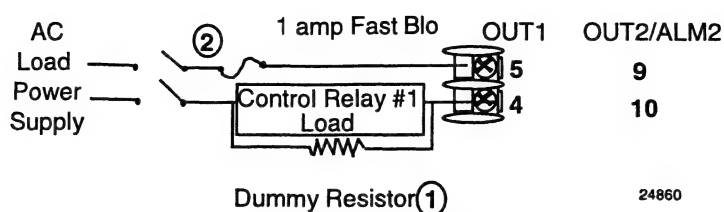

- ① If the load current is less than the minimum rated value of 20 mA, there may be a residual voltage across both ends of the load even if the relay is turned off. Use a dummy resistor as shown to counteract this. The total current through the resistor and the load current must exceed 20 mA.
- ② Solid State relay is rated at 1 Amp at 25°C, linearly derated to 0.5 Amp at 55°C. Customer should size fuse accordingly.

See Figure 2-15 for Alarm and Duplex Output Connections.  
See Table 2-3 and Table 2-4 for Control and Alarm Relay Contact information.

**Figure 2-10 Solid State Relay Output**

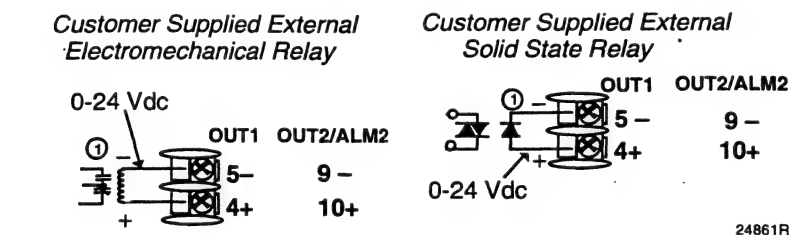

- ① **CAUTION** Open collector outputs are internally powered at 24 Vdc. Connecting an external supply will damage the controller. External relays should be fused between power and relay load.

See Figure 2-15 for Alarm and Duplex Output Connections.  
See Tables 2-3 and 2-4 for Control and Alarm Relay Contact information.

**Figure 2-11 Open Collector Relay Output**

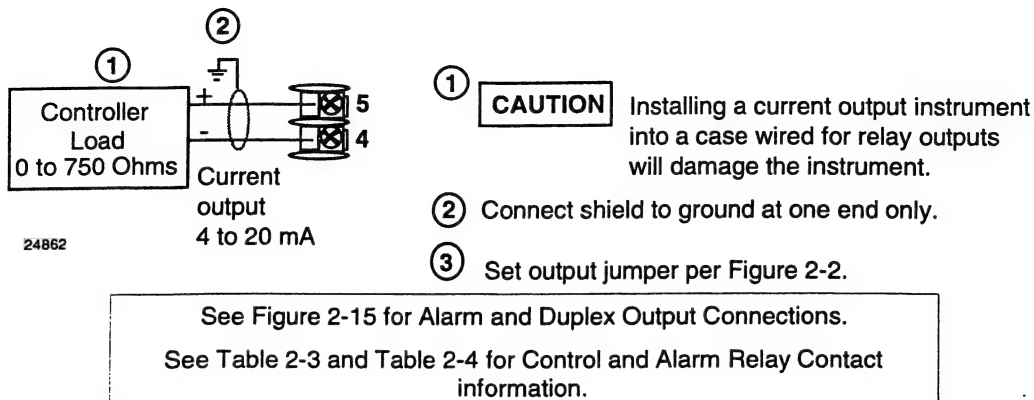


Figure 2-12 Current Output


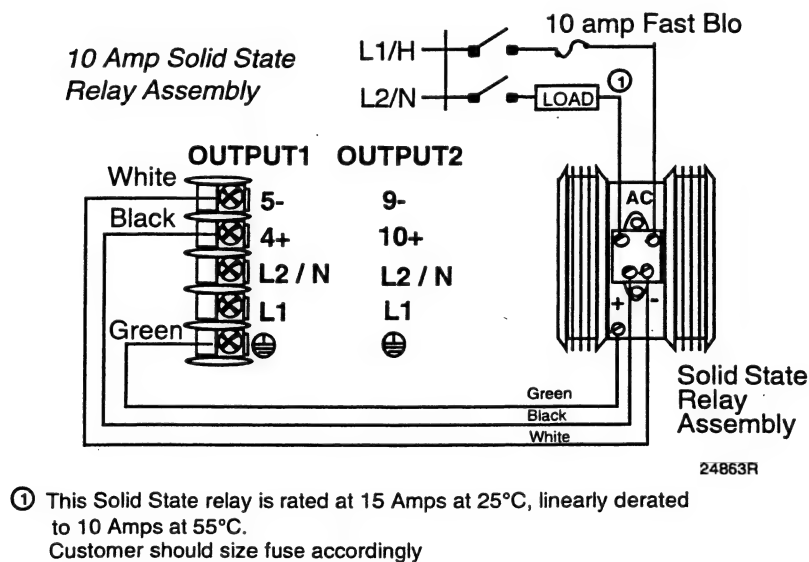


Figure 2-13 External Solid State Relay Option (Internal Open Collector Output)



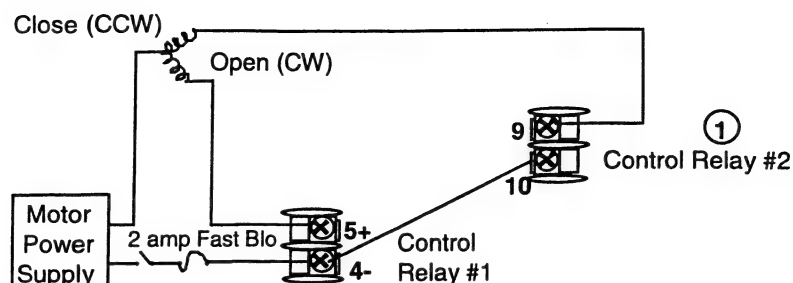


24864

- ① Alarm #2 is not available with Three Position Step Control.

See Figure 2-15 for Alarm and Duplex Output Connections.


**Figure 2-14 Three Position Step Control Connections**

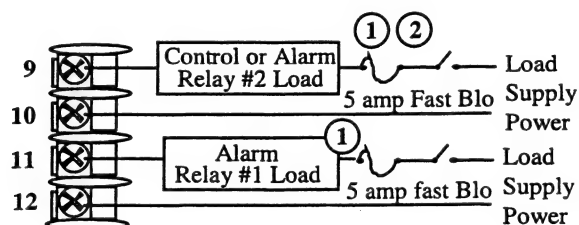

24867


- ① Control relays 1 and 2 are configured N.O. as shipped. Alarm relays 1 and 2 are configured N.C. as shipped. N.O. or N.C. configurations are selectable by jumpers on main printed wiring boards. See "Preliminary Checks" in this sections of the Product Manual for details. Each SPST relay is rated at 5 A, 120 Vac and 24 Vdc, 2.5 A, 240 Vac.
- ② Alarm #2 not available for Time Proportional Duplex or Three Position Step Control.

**Figure 2-15 Alarm and Duplex Output Connections**

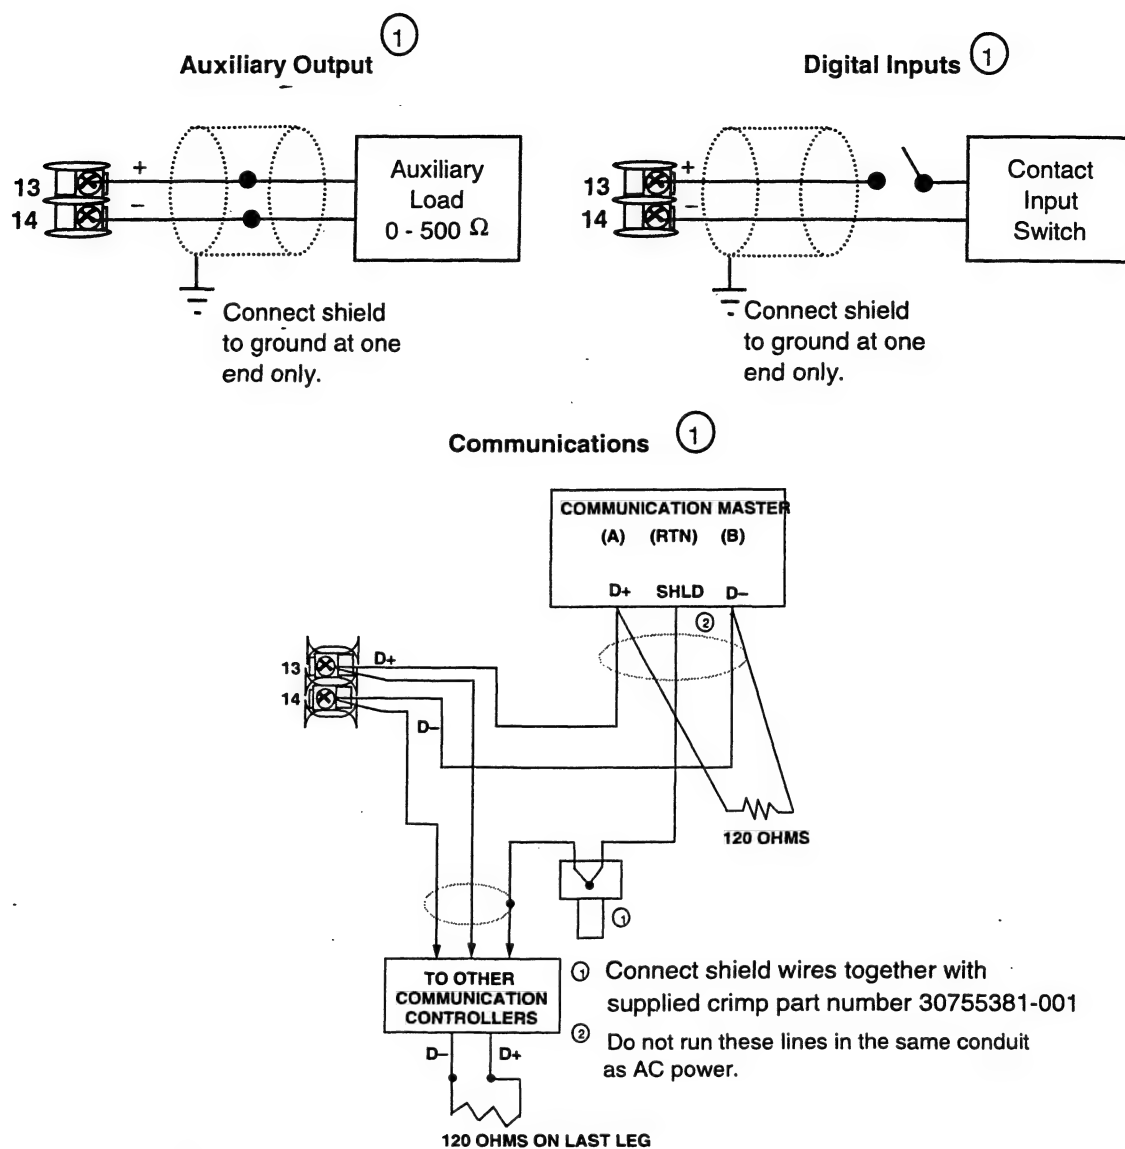


① AuxOut , Digital Input and Communications are mutually exclusive.

**Figure 2-16 External Interface Option Connections**

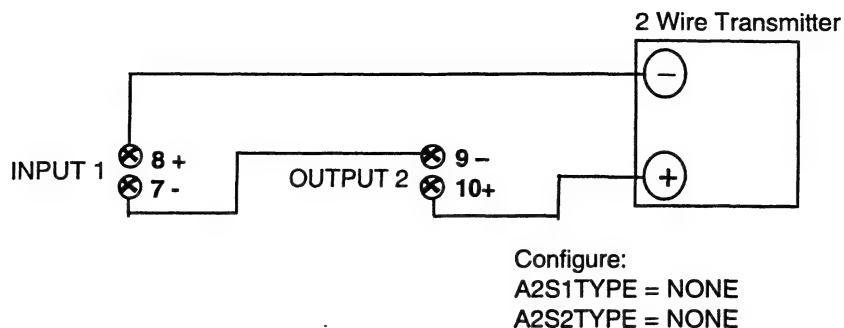

**Figure 2-17 Transmitter Power for 4-20 mA — 2 wire Transmitter Using Open Collector Alarm 2 Output  
(Model DC230B-XT-XX-XX-XXXXXXX-XX-X)**

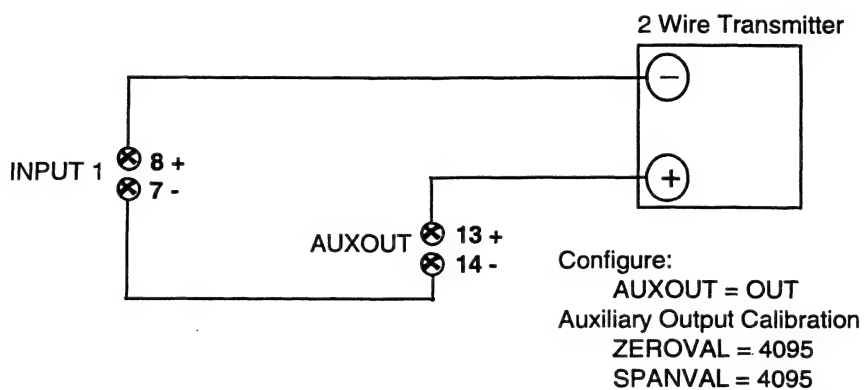

**Figure 2-18 Transmitter Power for 4-20 mA — 2 Wire Transmitter  
Using Auxiliary Output  
(Model DC230B-XX-2X-XX-XXXXXXX-XX-X)**



## **3 Initial Start-up**

### **3.1 Overview**

This section gives you the information necessary to start up your controller prior to configuration. Review the Operator Interface portion to make sure you are familiar with the indicator definitions and key functions.

### **3.2 Powering Up the Controller**


#### **Apply Power**

When power is applied, the controller will run three diagnostic tests. After these tests are completed, "TEST DONE" is displayed.

#### **Test Failures**

If one or more of these tests fail, the controller will go to the Failsafe Manual Mode, and FAILSF will flash in the lower display and a message indicating which test failed will appear in the lower display. Then, "DONE" will appear in the lower display.

### 3.3 Operator Interface and Key Functions

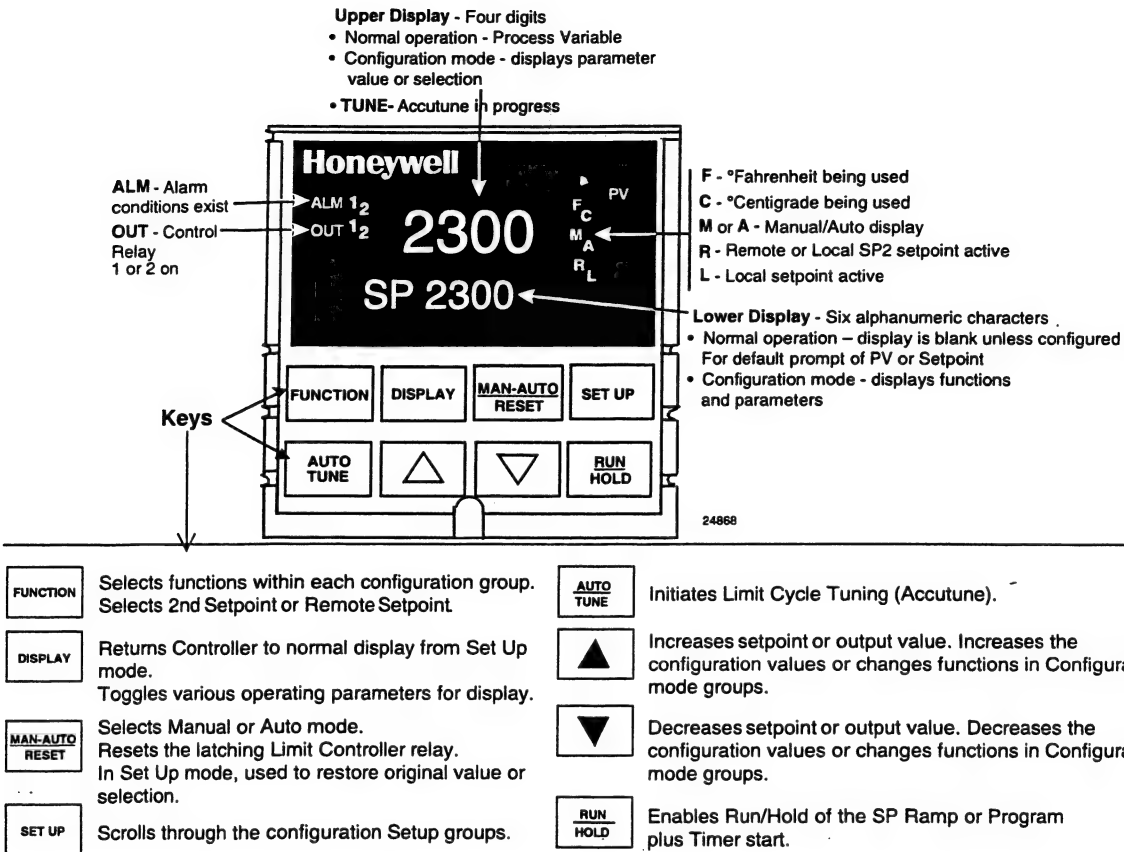

**Figure 3-1 Operator Interface and Key Functions**

### 3.4 Key Error Message

When a key is pressed and the prompt KEYERR appears in the lower display, it will be for one of the following reasons:

- parameter is not available,
- not in Set Up mode, press [SET UP] key first,
- key malfunction.

## 4 Configuration

### 4.1 Overview

#### Introduction

Configuration is a dedicated operation where you use straightforward keystroke sequences to select and establish (configure) pertinent control data best suited for your application.

To assist you in the configuration process, there are prompts that appear in the upper and lower displays. These prompts let you know what group of configuration data (Set Up prompts) you are working with and also, the specific parameters (Function prompts) associated with each group.

Figure 3-1 shows you an overview of the prompt hierarchy as they appear in the controller.

As you will see, the configuration data is divided into 11 main Set Up groups plus prompts for calibration and prompts that show the status of the continuous background tests that are being performed.


#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
4.1 Overview	24
4.2 Configuration Prompt Hierarchy	25
4.3 Configuration Procedure	27
4.4 Timer Set Up Group	28
4.5 Tuning Set Up Group	29
4.6 SP Ramp Set Up Group	33
4.7 Accutune Set Up Group	37
4.8 Algorithm Set Up Group	38
4.9 Input 1 Set Up Group	39
4.10 Input 2 Set Up Group	43
4.11 Control Set Up Group	45
4.12 Options Set Up Group	48
4.13 Communications Set Up Group	49
4.14 Alarms Set Up Group	51
4.15 Configuration Record Sheet	53

## 4.2 Configuration Prompt Hierarchy

Table 4-1 Configuration Prompt Hierarchy

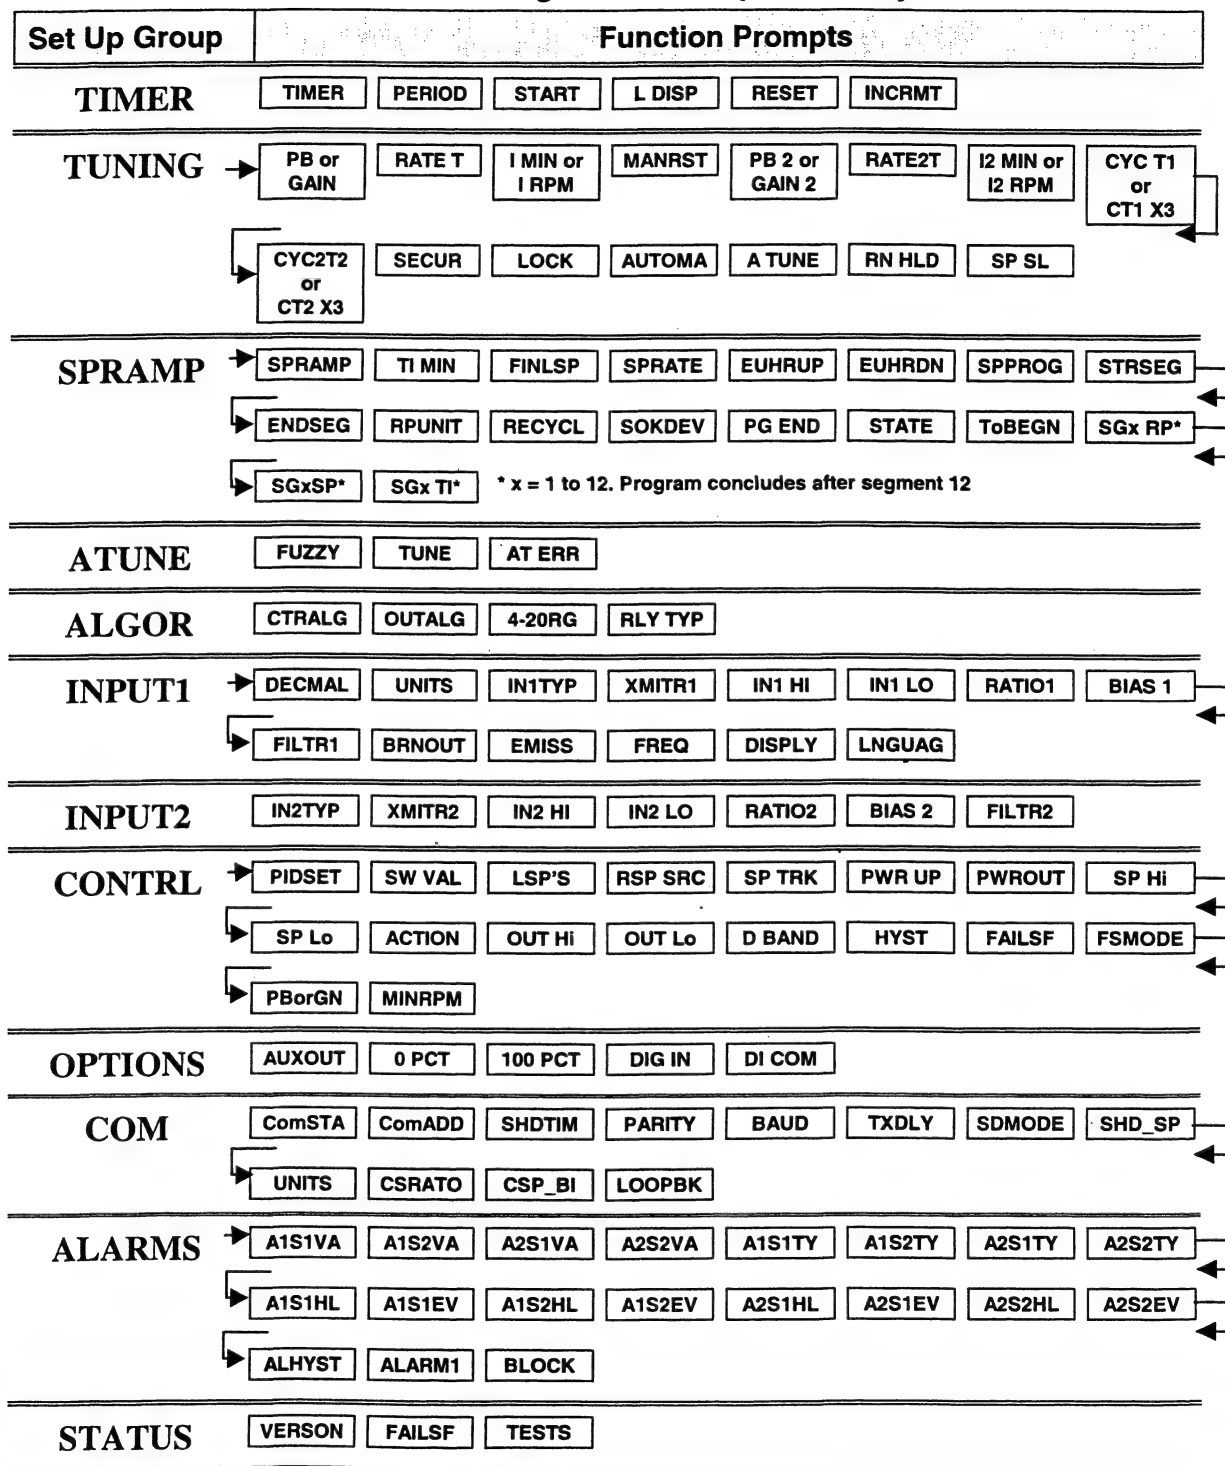



## 4.3 Configuration Procedure

### Introduction

Each of the Set Up groups and their functions are pre-configured at the factory. The factory settings are shown in Table 4-3 through Table 4-13 that follow this procedure.

If you want to change any of these selections or values, follow the procedure in Table 4-2. This procedure tells you the keys to press to get to any Set Up group and any associated Function parameter prompt.

**If you need a detailed explanation of any prompt, refer to Section 12 – Function Parameter Reference Guide.**

### Procedure

#### ATTENTION

The prompting scrolls at a rate of 2/3 seconds when the **SET UP** or **FUNCTION** key is held in. Also, [▲] [▼] keys will move group prompts forward or backward at a rate twice as fast.

**Table 4-2 Configuration Procedure**

Step	Operation	Press	Result
1	Enter Set Up Mode	SET UP	Upper Display = <b>SET</b> Lower Display = <b>TIMER</b> (This is the first Set Up Group title)
2	Select any Set Up Group	SET UP	Sequentially displays the other Set Up group titles shown in the prompt hierarchy in Table 4-1 Configuration Prompt Hierarchy. You can also use the [▲] [▼] keys to scan the Set Up groups in both directions. Stop at the Set Up group title that describes the group of parameters you want to configure. Then proceed to the next step.
3	Select a Function Parameter	FUNCTION	Upper Display = the current value or selection for the first function prompt of the selected Set Up group. Lower Display = the first Function prompt within that Set Up group. Sequentially displays the other function prompts of the Set Up group you have selected. Stop at the function prompt that you want to change, then proceed to the next step.
4	Change the Value or Selection	[▲] [▼]	Increments or decrements the value or selection that appears for the selected function prompt. If you change the value or selection of a parameter while in Set Up mode then decide not to enter it, press <b>[MAN-AUTO/RESET]</b> once—the original value or selection is recalled.
5	Enter the Value or Selection	FUNCTION	Enters value or selection made into memory after another key is pressed.
6	Exit Configuration	DISPLAY	Exits configuration mode and returns controller to the same state it was in immediately preceding entry into the Set Up mode. It stores any changes you have made. If you do not press any keys for 30 seconds, the controller times out and reverts to the mode and display used prior to entry into Set Up mode.

## 4.4 Timer Set Up Group

### Introduction

The Timer Set Up group allows you to configure a time-out period and to select the timer start by either the keyboard ([**RUN/HOLD**] key) or Alarm 2. The optional digital input can also be configured to the start the timer. The timer display is selectable as either “time remaining” (*see TREM*) or “elapsed time” (*see ET*).

Alarm 1 is activated at the end of the time-out period. When the timer is enabled, it has exclusive control of the alarm 1 relay—any previous alarm 1 configuration is ignored. At time-out, the timer is ready to be activated again by whatever action has been configured.

### Function Prompts

**Table 4-3 TIMER Group (Numeric Code 100) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
<b>TIMER</b>	<b>101</b>	Enable or Disable Timer	0 1	DIS ENAB	DIS	172
<b>PERIOD</b>	<b>102</b>	Time-out Period		0:00 to 99:59 Select length of time in Hours and Minutes, or minutes and seconds.	0:01	161
<b>START</b>	<b>103</b>	Timer Function Start	0 1	KEY (RUN/HOLD key) AL2 (Alarm 2)	KEY	171
<b>L DISP</b>	<b>104</b>	Timer Display	0 1	TREM (time remaining) ET (elapsed time)	TREM	156
<b>RESET</b>	<b>105</b>	Timer Reset Control	0 1	Key (Run/Hold key) AL1 (Alarm 1 or Key)	KEY	172
<b>INCRMT</b>	<b>106</b>	Timer Count Increment	0 1	MIN (Counts HR/MIN) SEC (Counts MIN/SEC)	MIN	151

## 4.5 Tuning Set Up Group

### Introduction

Tuning consists of establishing the appropriate values for the tuning constants you are using so that your controller responds correctly to changes in process variable and setpoint. You can start with predetermined values but you will have to watch the system to see how to modify them. The Accutune feature automatically selects Gain, Rate, and Reset on demand.

### ATTENTION

Because this group contains functions that have to do with security and lockout, we recommend that you configure this group last, after all other configuration data has been loaded.

### Function Prompts

**Table 4-4 TUNING Group (Numeric Code 200) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
PB or GAIN	201	Proportional Band or Gain		PB = 0.1 to 1000% Gain = 0.01 to 1000	1.0	159
RATE T	202	Rate in Minutes		0.00 to 10.00 minutes 0.08 or less = OFF	0.00	164
I MIN or I RPM	203	Reset in minutes/repeat. Reset in repeats/minute		0.02 to 50.00 0.02 to 50.00	1.0 1.0	151
MANRST	204	Manual Reset		-100 to 100% Output	0.0	158
PB 2 or GAIN 2	205	Proportional Band 2 or Gain 2		PB = 0.1 to 1000% Gain = 0.01 to 1000	1.0	160
RATE2T	206	Rate 2 in Minutes		0.00 to 10.00 minutes 0.08 or less = OFF	0.00	164
I2 MIN or I2 RPM	207	Reset in minutes/repeat Reset in repeats/minute		0.02 to 50.00 0.02 to 50.00	1.0 1.0	151

*Table continued next page*

Table 4-4 TUNING Group (Numeric Code 200) Function Prompts, continued

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
CYC T1 or CT1X3	208	Cycle Time (Heat)		1 to 120 <i>Cycle times are in either second or 1/3 second increments depending upon the configuration of RLY TYP in the "Algorithm" Set Up group.</i>	20	143
CYC2T2 or CT2 X3	209	Cycle Time (Cool)		1 to 120 <i>Cycle times are in either second or 1/3 second increments depending upon the configuration of RLY TYP in the "Algorithm" Set Up group.</i>	20	144
SECUR	210	Security Code		0 to 4095	0	166
LOCK	211	Lockout	0 1 2 3 4	NONE CAL CONF VIEW ALL	CAL	157
AUTOMA	212	Auto/Manual Key Lockout	0 1	DIS ENAB	ENAB	135
A TUNE	213	Autotune Key Lockout	0 1	DIS ENAB	ENAB	134
RN HLD	214	Run/Hold Key Lockout	0 1	DIS ENAB	ENAB	165
SP SEL	215	Setpoint Select Function Lockout	0 1	DIS ENAB	ENAB	171

## 4.6 SP Ramp Set Up Group

### Introduction

A *single setpoint ramp* [SPRAMP] can be configured to occur between the current local setpoint and a final local setpoint over a time interval of from 1 to 255 minutes.

SPRATE lets you configure a *specific rate of change* for any local setpoint change.

You can also configure a 12-segment program from a *Ramp/Soak profile*.

You can start and stop the ramp/program using the **RUN/HOLD** key.

*PV Hot Start* is standard and means that at power up, the setpoint is set to the current PV value and the Ramp or Rate or Program then starts from this value.

### Function Prompts

**Table 4-5 SPRAMP Group (Numeric Code 300) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
SP RAMP	301	Single Setpoint Ramp	0 1	DIS ENAB <i>Rate and Program must be disabled</i>	DIS -	170
TI MIN	302	Single Setpoint Ramp Time		0 to 255 Minutes	3	172
FINLSP	303	Setpoint Ramp Final Setpoint		Enter a value within the setpoint limits	1000	148
SPRATE	304	Setpoint Rate	0 1	DIS ENAB <i>Ramp and Program must be disabled</i>	DIS	170
EUHRUP	305	Rate Up		0 to 9999 in Engineering units per hour	0	147
EUHRDN	306	Rate Down		0 to 9999 in Engineering units per hour	0	147
SPPROG	307	Setpoint Ramp/Soak Programming	0 1	DIS ENAB <i>Rate and Ramp must be disabled</i>	DIS	170
STRSEG	308	Start Segment Number		1 to 11	- - -	172
ENDSEG	309	End Segment Number		2 to 12 (always end in a soak segment 2, 4, ... 12)	- - -	147
			2	SOK 2		
			4	SOK 4		
			6	SOK 6		
			8	SOK 8		
			10	SOK 10		
			12	SOK 12		

Table 4-5 SPRAMP Group (Numeric Code 300) Function Prompts, continued

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
RPUNIT	310	Engineering units for Ramp Segments	0 1 2	TIME (hours:minutes) EU-M (Rate EU/Minute) EU-H (Rate EU/Hour)	TIME	166
RECYCL	311	Number of Program Recycles		0 to 99 recycles	---	164
SOKDEV	312	Guaranteed Soak Deviation Value		0 to 99 0 = No Soak	---	168
PG END	313	Program Termination State	0 1	LAST (Hold at last SP) FSAF (Manual mode/failsafe)	---	161
STATE	314	Program State at Program End	0 1	DIS HOLD	DIS	171
ToBEGN	315	Reset Program to the Beginning	0 1	DIS KEY (Keyboard)	DIS	172
SGx RP		Segment Ramp or Rate Time		0-99hours:0-59minutes Engineering Units/minute or Engineering Units /hour	---	167
SG1	316	x = 1 through 11				
SG3	319					
SG5	322					
SG7	325					
SG9	328					
SG11	331					
SGx SP		Segment Soak Setpoint Value		Enter a Value within the Setpoint Limits	---	167
SG2	317	x = 2 through 12				
SG4	320					
SG6	323					
SG8	326					
SG10	329					
SG12	332					
SGx TI		Segment Soak Duration		0-99 Hours: 0-59 Minutes	---	167
SG2	318	x = 2 through 12				
SG4	321					
SG6	324					
SG8	327					
SG10	330					
SG12	333					

## 4.7 Accutune Set Up Group

### Introduction

*Accutune II* automatically calculates GAIN, RATE, and RESET TIME (PID) tuning constants for your control loop. When initiated on demand, the Accutune algorithm measures a process step response and automatically generates the PID tuning constants needed for no overshoot on your process.

*Fuzzy Overshoot Suppression*, when enabled, will suppress or eliminate any overshoot that may occur as a result of the existing tuning parameters, as the PV approaches the setpoint.

### Function Prompts

**Table 4-6 ATUNE Group (Numeric Code 400) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
<b>FUZZY</b>	<b>401</b>	Fuzzy Overshoot Suppression	0 1	DIS ENAB	DIS	149
<b>TUNE</b>	<b>402</b>	Demand Tuning	0 1	DIS TUNE	TUNE	173
<b>AT ERR</b>	<b>403</b>	Accutune Error Codes (Read Only)	0 3 4 5	NONE IDFL ABRT RUN	---	135

## 4.8 Algorithm Set Up Group

### Introduction

This data deals with various algorithms in the controller: Control algorithm, Output algorithm, Current Duplex Range, and Relay Cycle Time Increment.

### Function Prompts

**Table 4-7 ALGOR Group (Numeric Code 500) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
<b>CTRALG</b>	<b>501</b>	Control Algorithm	0	ONOF	PIDA	141
			1	PIDA		
			2	PIDB		
			3	PDMR		
			4	TPSC (3 position step)		
<b>OUTALG</b>	<b>502</b>	Output Algorithm	0	RLY (Time simplex Relay 1)	depends on model	158
			1	RLY2 (Time simplex Relay 2)		
			2	CUR (Current simplex)		
			3	TPSC (3 Position step)		
			4	RLYD (Time duplex)		
			5	CURD (Current duplex)		
			6	CURT (Current/time duplex)		
			7	TCUR (Time/current duplex)		
<b>4-20RG</b>	<b>503</b>	Current Duplex Range	0	100 (Full)	100	133
			1	50 (Split)		
<b>RLY TYP</b>	<b>504</b>	Relay Cycle Time Increment	0	MECH (one sec. increments)	MECH	165
			1	S S (1/3 sec increments)		



## 4.9 Input 1 Set Up Group

### Introduction

This data deals with various parameters required to configure Input 1.

### Function Prompts

**Table 4-8 INPUT1 Group (Numeric Code 600) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
DECIMAL	601	Decimal Point Selection	0 1 2	8888 (none) 888.8 88.88	8888	145
UNITS	602	Temperature Units	1 2 0	F C NONE	F	173
IN1TYP	603	Input 1 Actuation Type				
			XMITR1	604	Transmitter Characterization	

Table 4-8 INPUT1 Group (Numeric Code 600) Function Prompts, continued

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
IN1 HI	605	Input 1 High Range Value		–999 to 9999 floating in engineering units	2400	151
IN1 LO	606	Input 1 Low Range Value		–999 to 9999 floating in engineering units	0	153
RATIO1	607	Ratio on Input 1		–20.0 to 20.0	1.00	164
BIAS 1	608	Bias on Input 1		–999 to 9999	0.0	139
FILTR1	609	Filter for Input 1		0 to 120 seconds 0 = No Filter	1.0	148
BRNOUT	610	Burnout Protection (Sensor Break)	0 1 2 3	NONE UP (Upscale) DOWN (Downscale) NOFS (No Failsafe)	UP	140
EMISS	611	Emissivity		0.01 to 1.00 (RADH & RADL only)	1.0	147
FREQ	612	Power Line Frequency	0 1	60 50	60	149
DISPLY	613	Default Display (Single Display models only)	0 1 2	SP (Setpoint) PRY (PV with Label) PRN (PV without Label)	PRN	—
LANGUAG	614	Language Selection	0 1 2 3 4 5	ENGL FREN GERM SPAN ITAL NUMB (Numeric)	ENGL	156

## 4.10 Input 2 Set Up Group

### Introduction

This data deals with various parameters required to configure Input 2.

### Function Prompts

**Table 4-9 INPUT2 Group (Numeric Code 700) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
IN2TYP	701	Input 2 Type	0 25 26 29 30 34	DIS 0-20 (mA) 4-20 (mA) 0-5 (Volts) 1-5 (Volts) 0-2 (Volts)	1-5V	156
XMTR2	702	Transmitter Characterization for Input 2			LIN	175
IN2 HI	703	Input 2 High Range Value		-999 to 9999 floating in engineering units	2400	155
IN2 LO	704	Input 2 Low Range Value		-999 to 9999 floating in engineering units	0	155
RATIO2	705	Ratio on Input 2		-20.0 to 20.0	1.00	164
BIAS 2	706	Bias on Input 2		-999 to 9999	0.0	139
FILTR2	707	Filter for Input 2		0 to 120 seconds 0 = No Filter	1.0	148

## 4.11 Control Set Up Group

### Introduction

The functions listed in this group deal with how the controller will control the process including: Number of Tuning Parameter Sets, Setpoint Source, Tracking, Power-up Recall, Setpoint Limits, Output Direction and Limits, Deadband, and Hysteresis.

### Function Prompts

**Table 4-10 CONTRL Group (Numeric Code 800) Function Prompts**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
PIDSET	801	Number of Tuning Parameter Sets	0	ONE	ONE	162
			1	2KBD (Keyboard)		
			2	2 PR (PV switch)		
			3	2 SP (SP switch)		
SW VAL	802	Automatic Switchover Value		Value in engineering units within PV or SP range limits	0.00	172
LSP'S	803	Local Setpoint Source	0	ONE	ONE	157
			1	TWO		
RSPSRC	804	Remote Setpoint Source	0	NONE	NONE	166
			1	INP2		
SP TRK	805	Setpoint Tracking	0	NONE	NONE	171
			1	PROC (LSP tracks PV—manual)		
			2	RSP (LSP tracks RSP—auto)		
PWR UP	806	Power Up Controller Mode Recall	0	MAN (Manual/LSP/failsafe)	ALSP	163
			1	ALSP (Auto/last LSP)		
			2	ARSP (Auto/last RSP)		
			3	AMSP (Last mode/last SP)		
			4	AMLS (Last mode/last LSP)		
PWROUT	807	TPSC (Three Position Step Control) Output Start-up Mode	0	LAST (Last output)	LAST	163
			1	FSAF (Failsafe output)		
SP Hi	808	Setpoint High Limit		0 to 100% of the PV range	2400	169
SP Lo	809	Setpoint Low Limit		0 to 100% of the PV range	0	169
ACTION	810	Control Output Direction	0	DIR	REV	134
			1	REV		

Table 4-10 CONTRL Group (Numeric Code 800) Function Prompts, continued

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
OUT Hi	811	High Output Limit		-5 to 105% of Output (Current) 0.0 to 100.0% of Output (Relay)	100	159
OUT Lo	812	Low Output Limit		-5 to 105% of Output (Current) 0.0 to 100.0% of Output (Relay)	0	159
D BAND	813	Deadband		-5 to 25.0% (Time Duplex) 0.5 to 5.0% (3 position step)	2.0	144
HYST	814	Hysteresis (Output Relay Only)		0.0 to 100.0% of PV	0.5	149
FAILSF	815	Failsafe Output Value		0 to 100%	0.0	148
	816			<b>For 3 Position Step</b> 0 (Closed position) 100 (Open position)		
FSMODE	817	Failsafe Mode	0 1	No L (Mode does not clear once unit goes to FS Output) LACH (Unit goes to manual and FS output)	NO_L	149
PBorGN	818	Proportional Band Units	0 1	GAIN PB	GAIN	161
MINRPM	819	Reset Units	0 1	MIN RPM	MIN	158

## 4.12 Options Set Up Group

### Introduction

The Options group lets you configure the remote mode switch (Digital Inputs) to a specific contact closure response, or configure the Auxiliary Output to be a specific selection with desired scaling.

### Function Prompts

**Table 4-11 Options Group (Numeric Code 900) Function Prompts**

Prompt		Description	Selection or Range of Setting			Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English			
AUXOUT	901	Auxiliary Output	0	DIS	Disabled	DIS	136
			1	IN1	Input 1		
			2	IN2	Input 2		
			3	PROC	Process Variable		
			4	DEV	Deviation		
			5	OUT	Output		
			6	SP	Setpoint		
			7	LSP1	Local Setpoint 1		
0 PCT	902	Auxiliary Output Low Scaling Factor		Value in Engineering Units		0	133
100 PCT	903	Auxiliary Output High Scaling Factor		Value in Engineering Units		100	133
DIG IN	904	Digital Input	0	None		NONE	145
			1	MAN	To Manual		
			2	LSP	To Local SP 1		
			3	SP2	To Local SP 2		
			4	DIR	Direct Control		
			5	HOLD	Hold SPP/SP Ramp		
			6	PID2	PID Set 2		
			7	RUN	Start a stopped SPP/SP Ramp		
			8	Begn	SPP Reset		
			9	NO I	Inhibit Integral		
			10	MNFS	Manual, Failsafe Output		
			11	LOCK	Keyboard Disable		
			12	TIMR	Start Timer		
			13	TUNE	Start Tune		
			14	INIT	Init SP to PV		
			15	RSP	Remote SP		
			16	MNLT	Latching Manual		
			17	TRAK	Output tracks Input 2		
DI COM	905	Digital Input Combinations	0	DIS	Disable	DIS	145
			1	+ PD2	PID Set 2		
			2	+DIR	Direct		
			3	+SP2	Set Point 2		
			4	+SP1	Set Point 1		
			5	+RUN	Start SPP		

## 4.13 Communications Set Up Group

### Introduction

The Communications group lets you configure the controller to be connected to a host computer via RS422/486 or Modbus® protocol.

### Function Prompts

**Table 4-12 Communications Group (Numeric Code 1000)**

Prompt		Description	Selection or Range of Setting		Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English		
COMSTA	1001	Communications State	0	DIS	DIS	—
			1	R422		
			2	MODB		
ComADD	1002	Station Address		1 to 99	0	
SHDTIM	1003	Shed Time		0 to 255 Sample Periods	0	
PARITY	1004	Parity	0	Odd	Odd	
			1	Even		
BAUD	1005	Baud Rate	0	2400 Baud	2400	
			1	4800 Baud		
			2	9600 Baud		
			3	19200 Baud		
TX_DLY	1006	Response Delay		1 to 500 milliseconds	1	
SDMODE	1007	Shed Output Mode	0	LAST Same Mode & Output	LAST	
			1	MAN_Manual Mode, Same Output		
			2	FSAF Man Mode, Failsafe Output		
			3	AUTOAuto Mode, Failsafe Output		
SHD_SP	1008	Shed Setpoint Recall	0	LSP Last Local or remote used	LSP	
			1	CSP last Computer Setpoint		
UNITS	1009	Communications Override Units	0	PCT Percent	PCT	
			1	Eng Engineering Units		
CSRATIO	1010	Computer Setpoint Ratio		-20.0 to 20.0	1.0	
CSP_BI	1011	Computer Setpoint Bias		-999 to 9999 in Engineering Units	0	
LOOPBK	1012	Local Loopback Test	0	DIS	DIS	
			1	EnAB		

## 4.14 Alarms Set Up Group

### Introduction

An alarm is an indication that an event that you have configured (for example—Process Variable) has exceeded one or more alarm limits. There are two alarms available. Each alarm has two setpoints. You can configure each of these two setpoints to alarm on various controller parameters.

There are two alarm output selections, High and Low. You can configure each setpoint to alarm either High or Low. These are called single alarms.

You can also configure the two setpoints to alarm on the same event and to alarm both high and low. A single adjustable Hysteresis of 0 to 100% is configurable for the alarm setpoint.

See Table 2-4 in the *Installation* section for Alarm relay contact information.

The prompts for the Alarm Outputs appear whether or not the alarm relays are physically present. This allows the Alarm status to be shown on the display and/or sent via communications to a host computer.

### Function Prompts

**Table 4-13 ALARMS Group (Numeric Code 1100) Function Prompts**

Prompt		Description	Selection or Range of Setting			Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English			
AxSxVA		Alarm Setpointx Value		within the range of the selected parameter or of the PV Span for Deviation configurations		90	139
A1S1	1101	X = 1 or 2					
A1S2	1102						
A2S1	1103						
A2S2	1104						
AxSxTY		Alarmx Setpointx Type	0	NONE	No Alarm	NONE	138
A1S1	1105	X = 1 or 2	1	IN 1	Input 1		
A1S2	1106		2	IN 2	Input 2		
A2S1	1107		3	PROC	Process Variable		
A2S2	1108		4	DE	Deviation		
			5	OUT	Output		
			6	SHED	ShedCommunications		
			7	E-ON	Event ON(SP Prog)		
			8	E-OFF	Event OFF(SP Prog)		
			9	MAN	Alarm on Manual		
			10	RSP	Remote Setpoint		
			11	FSAF	Failsafe		
			12	PrRT	PV Rate of Change		
			13	DI	Alarm on Digital Input		
			14	DE 11	DEV Alarm based on SP2		
			15	BRAK	Loop break alarm		



Table 4-13 ALARMS Group (Numeric Code 1100) Function Prompts, continued

Prompt		Description	Selection or Range of Setting			Factory Setting	Reference Guide Page
English	Numeric Code		Numeric Code	English			
AxSxHL		Alarmx Setpoint	0	LOW	Low Alarm	HIGH	137
A1S1	1109	State	1	HIGH	High Alarm		
A1S2	1110	X = 1 or 2					
A2S1	1111						
A2S2	1112						
AxSxEV		Alarmx Segment	0	BEGN	Beginning of	BEGN	137
A1S1	1109	Event x		Segment			
A1S2	1110	X = 1 or 2	1	END	End of Segment		
A2S1	1111						
A2S2	1112						
ALHYST	1113	Alarm Hysteresis		0.0 to 100.0% of span or full output as appropriate		0.0	135
ALARM1	1114	Latching Alarm Output	0 1	NO L LACH		NO L	134
BLOCK	1115	Alarm Blocking	0 1 2 3	DIS BK1 only BK2 only BK12 Alarms	Disable Blocking Block Alarm 1 Block Alarm 2 Blocks both	DIS	140

## 4.15 Configuration Record Sheet

Enter the value or selection for each prompt on this sheet so you will have a record of how your controller was configured.

Group Prompt	Function Prompt	Value or Selection	Factory Setting	Group Prompt	Function Prompt	Value or Selection	Factory Setting
<b>TIMER</b>	TIMER PERIOD START L DISP RESET INCRMT	_____ _____ _____ _____ _____ _____	DIS 0:01 KEY TREM KEY MIN	<b>ATUNE</b>	FUZZY TUNE AT ERR	_____ _____ _____	DIS TUNE ---
<b>TUNING</b>	PB or GAIN RATE T I MIN or I RPM MANRST PB2 or GAIN 2 RATE2T I2 MIN or I2 RPM CYCT1 or CT1 X3 CYC2T2 or CT2 X3 SECUR LOCK AUTOMA A TUNE RN HLD SP SEL	_____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____	1.0 0.00 1.0 1.0 0.0 0.00 1.0 20 20 0 CAL ENAB ENAB ENAB ENAB	<b>ALGOR</b>	CTRALG OUTALG 4-20RG RLY TY	_____ _____ _____ _____	PIDA (MOXL) 100 127
<b>SPRAMP</b>	SPRAMP ATI MIN FINLSP SPRATE EUHRUP EUHRDN SPPROG	_____ _____ _____ _____ _____ _____ _____	DIS 3 1000 DIS 0 0 DIS	<b>INPUT1</b>	DECIMAL UNITS IN1TYP XMTR1 IN1 HI IN1 LO RATIO1 BIAS 1 RILTR1 BRNOUT EMIS FREQ DISPLY LNGUAG	_____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____ _____	8888 DegF KH LIN 2400 0 1.00 0.0 1.0 UP 1.0 60 SP ENGL

*Configuration Record Sheet continued on next page*

Group Prompt	Function Prompt	Value or Selection	Factory Setting	Group Prompt	Function Prompt	Value or Selection	Factory Setting
INPUT2	IN2TYP	_____	1-5V	COM	ComSTA	_____	Disable
	LIN	_____	LIN		ComADR	_____	0
	IN2 HI	_____	2400		SHDTIM	_____	0
	IN2 LO	_____	0		PARITY	_____	Odd
	RATIO2	_____	1.00		BAUD	_____	9600
	BIAS 2	_____	0.0		TX_DLY	_____	1
	FILTR2	_____	1.0		SDMODE	_____	Last
CONTRL	PIDSET	_____	ONE		SHDSP	_____	LSP
	SW VAL	_____	0.00		UNITS	_____	PCT
	LSP'S	_____	ONE		CSRATO	_____	1.0
	RSPSRC	_____	NONE		CSP_BI	_____	0
	SP TRK	_____	NONE		LOOPBACK	_____	Disable
	PWR UP	_____	MAN	ALARMS	A1S1VA	_____	90
	PWROUT	_____	LAST		A1S2VA	_____	90
	SP Hi	_____	2400		A2S1VA	_____	90
	SP Lo	_____	0		A2S2VA	_____	90
	ACTION	_____	REV		A1S1TY	_____	NONE
	OUT Hi	_____	100		A1S1TY	_____	NONE
	OUT Lo	_____	0		A2S1TY	_____	NONE
	D BAND	_____	2.0		A2S2TY	_____	NONE
	HYST	_____	0.5		A1S1HL	_____	HIGH
	FAILSF	_____	0.0		A1S1EV	_____	BEGN
	FSMODE	_____	NOL		A1S2HL	_____	HIGH
	PBorGN	_____	GAIN		A1S2EV	_____	BEGN
	MINRPM	_____	MIN		A2S1HL	_____	HIGH
OPTIONS	AUXOUT	_____	DIS		A2S1EV	_____	BEGN
	0 PCT	_____	0		A2S2HL	_____	HIGH
	100 PCT	_____	100		A2S2EV	_____	BEGN
	DIG IN	_____	NONE		ALHYST	_____	0.0
	DIG COM	_____	DIS		ALARM1	_____	NOL
					BLOCK	_____	DIS



## 5 Monitoring the Controller

### 5.1 Overview

#### Introduction

This section gives you all the information necessary to help you monitor your controller including an Operator Interface overview, how to lockout changes to the controller, entering a security code, and monitoring the displays.

#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
5.2 Operator Interface	57
5.3 Entering A Security Code	57
5.4 Lockout Feature	58
5.5 Monitoring The Controller	60

## 5.2 Operator Interface

### Introduction

Figure 5-1 is a view of the Operator Interface. A description of the displays and indicators is included.

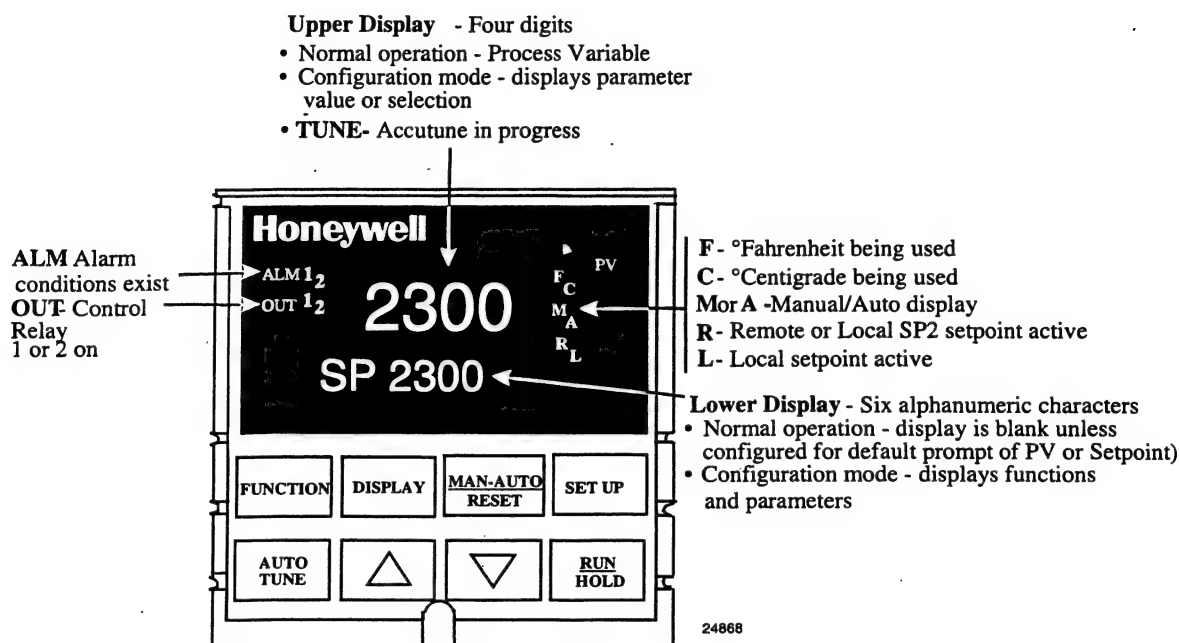


Figure 5-1 Operator Interface

## 5.3 Entering a Security Code

### Introduction

The level of keyboard lockout may be changed in the Set Up mode. However, knowledge of a security code number (0 to 4095) may be required to change from one level of lockout to another. When a controller leaves the factory, it has a security code of 0 which permits changing from one lockout level to another without entering any other code number.

### Procedure

If you require the use of a security code, select a number from 0001 to 4095 and enter it when the lockout level is configured as NONE. Thereafter, that selected number must be used to change the lockout level from something other than NONE.

**CAUTION** Write the number on the Configuration Record Sheet in the configuration section so you will have a permanent record.

Table 5-1 Procedure to Enter a Security Code

Step	Operation	Press	Result
1	Enter Set Up Mode	<b>SET UP</b>	<i>Upper Display = SET UP</i> <i>Lower Display = TUNING</i>
2	Select any Set Up Group	<b>FUNCTION</b>	<i>Upper Display = 0</i> <i>Lower Display = SECUR</i>
3	Security Code Entry	<b>[▲] [▼]</b>	To enter a four digit number in the upper display (0001 to 4095)  This will be your security code.

## 5.4 Lockout Feature

### Introduction

The lockout feature in the UDC2300 is used to inhibit changes (via keyboard) of certain functions or parameters by unauthorized personnel.

### Lockout levels

There are different levels of Lockout depending on the level of security required. These levels are:

- **NONE** No Lockout. All groups Read/Write.
- **CAL** Calibration prompts are deleted from the Setup List.
- **CONF** Timer, Tuning, SP Ramp, and Accutune are Read/Write. All other Setup groups are Read only. Calibration Group is not available.
- **VIEW** Timer, Tuning, and SP Ramp are Read/Write. No other parameters are available.
- **ALL** Timer, Tuning, and SP Ramp are Read only. No other parameters are viewable.

See *Subsection 4.5 - Tuning Parameters Set Up Group* prompts to select one of the above.

Security Code (See section 5.3)

## Individual key lockout

There are four keys that can be disabled to prevent unauthorized changes to the parameters associated with these keys. *First set the "Lock" prompt to NONE.*

These keys are:

- |                 |     |  |
|-----------------|-----|--|
| <b>AUTOTUNE</b> | Key | -you can disable the Autotune key at configuration Set Up, group prompt "Tuning", function prompt "A TUNE"                           |
| <b>RUN/HOLD</b> | Key | -you can disable the Run/Hold key for Set Point Programming at configuration Set Up group prompt "Tuning," function prompt "RN HLD." |
| <b>AUTO/MAN</b> | Key | - you can disable the Auto/Manual key at configuration Set Up, group prompt "Tuning", function prompt "AUTOMA"                       |
| <b>FUNCTION</b> | Key | -you can disable the Set Point Select function key at configuration Set Up group prompt "Tuning," function prompt "SP SEL."          |

See *Subsection 4.5 - Tuning Parameters Set Up Group* prompts to enable or disable these keys.

## Key error

When a key is pressed and the prompt "Key Error" appears in the lower display, it will be for one of the following reasons:

- Parameter not available or locked out
- Not in setup mode, press **SET UP** key first
- Individual key locked out.



## 5.5 Monitoring Your Controller

### Annunciators

The following annunciator functions have been provided to help monitor the controller:



**Table 5-2 Annunciators**

Annunciator	Indication
<b>ALM 1 2</b>	<i>A visual indication of each alarm</i>  Blinking 1 indicates alarm latched and needs to be acknowledged before extinguishing when the alarm condition ends
<b>OUT 1 2</b>	<i>A visual indication of the control relays</i>
<b>A or M</b>	<i>A visual indication of the mode of the controller</i>  <b>A</b> —Automatic Mode  <b>M</b> —Manual Mode
<b>F or C</b>	<i>A visual indication of the temperature units</i>  <b>F</b> —Degrees Fahrenheit  <b>C</b> —Degrees Celsius
<b>L or R</b>	<i>A visual indication of setpoint being used</i>  <b>L</b> — Local Setpoint is active  <b>R</b> — RSP or LSP 2 is active  <i>The upper display is used to show other annunciator functions</i> <b>TUNE</b> —Accutuning in progress <b>RUN</b> —SP Program in progress <b>HOLD</b> —SP Program on hold <b>CSP</b> —Controlling to the Computer Setpoint <b>LOOPBK</b> —Loopback Test running

## Viewing the operating parameters

Press the **DISPLAY** key to scroll through the operating parameters listed in Table 5-3. The lower display will show only those parameters and their values that apply to your specific model.

**Table 5-3 Lower Display Key Parameter Prompts**

Lower Display	Description
OT	OUTPUT—Output value is percent; for Three Position Step control, this is an estimated motor position when no slidewire exists.
SP	LOCAL SETPOINT #1—Also current setpoint when using SP Ramp.
2L	LOCAL SETPOINT #2
RS	REMOTE SETPOINT
2ND	INPUT 2
DE	DEVIATION—Maximum negative display is -999.9.
PIDSX	TUNING PARAMETER SELECTED SET—where X is either 1 or 2.
 <input type="checkbox"/> . <input type="checkbox"/> <input type="checkbox"/>	TIME REMAINING—Time that remains on timer in Hours.Minutes
 <input type="checkbox"/> . <input type="checkbox"/> <input type="checkbox"/>	ELAPSED TIME—Time that has elapsed on timer in Hours.Minutes.
RPXXM	SETPOINT RAMP TIME—Time remaining in the setpoint ramp in minutes.
AX	AUXILIARY OUTPUT
Sn	SP RATE SETPOINT—Current setpoint for setpoint rate applications
BI	BIAS—Displays the manual reset value for algorithm PD+MR.
To BGn	TO BEGIN—Resets Setpoint Program back to beginning of the program.

## Diagnostic Error Messages

The UDC 2300 performs background tests to verify data and memory integrity. If there is a malfunction, an error message will be displayed. In the case of more than one simultaneous malfunction, the messages will be displayed sequentially on the lower display. If any of these error messages in Table 5-4 occur, refer to *Section 10 - Troubleshooting* for information to correct the failure.

**Table 5-4 Error Messages**

Prompt	Description
<b>EE FAIL</b>	Unable to write to nonvolatile memory.
<b>IN1FL</b>	Two consecutive failures of input 1 integration.
<b>IN2FL</b>	Two consecutive failures of input 2 integration.
<b>CFGERR</b>	Configuration Errors—Low limit greater than high limit for PV, SP, Reset, or Output.
<b>IN1RNG</b>	Input 1 Out-of-Range Out-of-range criteria: Linear range: $\pm 10\%$ out-of-range Characterized range: $\pm 1\%$ out-of-range
<b>IN2RNG</b>	Input 2 Out-of-Range—Same as Input 1.
<b>PV LIM</b>	PV Out-of-Range $PV = (PV \text{ source} \times PV \text{ source ratio}) + PV \text{ source bias}$
<b>FAILSF</b>	Failsafe — conditions for failsafe are: ... EEROM Test Failed ... Scratch Pad RAM Test Failed ... Configuration Test Failed ... Field or Factory Cal Test Failed  Check the "Status" group.
<b>RV LIM</b>	Remote Variable Out-of-Range $RV = (RV \text{ source} \times RV \text{ source ratio}) + RV \text{ source bias}$
<b>SEG ERR</b>	Segment Error—SP Program starting segment number is less than ending segment number.
<b>LOCK</b>	The lockout feature has been enabled to prevent unauthorized changes of certain functions or parameters.



## 6 Operation

### 6.1 Overview

#### Introduction

This section gives you all the information necessary to operate your controller. Review the Operator Interface and Key Functions shown in Figure 3-1. Make sure you are familiar with the indicator definitions listed in Table 5-2.

#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
6.1 Overview	64
6.2 Single Display Functionality	65
6.3 Start Up Procedure for Operation	65
6.4 Control Modes	68
0 Setpoints	69
6.6 Timer	71
6.7 Accutune	73
6.8 Fuzzy Overshoot Suppression	76
6.9 Using Two Sets Of Tuning Constants	76
6.10 Alarm Setpoints	78
6.11 Three Position Step Control Algorithm	79
6.12 Setting A Failsafe Output Value For Restart After A Power Loss	80
6.13 Setting Failsafe Mode	81

## 6.2 Single Display Functionality

### Introduction

A UDC2300 instrument, which has been configured with a '0' for software options (i.e., DC230x-xx-x0-xx), will only have a single display capability. This means that the displayed value of PV, Setpoint, Setpoint2, Remote Setpoint, Input 2, Output, Bias, Aux Out, and Deviation will appear on the top display and a prompt identifying the value will appear on the bottom display.

### Access the Values

Pressing the **DISPLAY** key will cycle through all applicable values (configuration dependent). One minute after the last press of the display key, the display will revert back to a configured default display. The default display is configured in the Input 1 Setup Group, and has three selections:

- Active Setpoint (**SP**)
- Process Variable (**PR Y**)
- Process Variable with no bottom display prompt (**PR n**).

### Exceptions

*There are three exceptions to the above rules.* The displays for PID SET, Timer and Setpoint Ramp will appear the same as on a dual display model and, when displaying Timer or Ramp values, the default display switchover feature is disabled.

### Auto-only Mode

The single display model is *Auto only* mode. The Auto/Manual key has no effect on controller mode. As a result of this, the failsafe mode is always non-latching.

While a failsafe condition exists, the controller output will assume the failsafe value. When the failsafe condition goes away, normal automatic operation continues.

## Single Display Parameters

**Table 6-1 Single Display Parameters**

Lower Display Prompt	Upper Display Value	Comments
(blank)	Process Variable	Default selection
PV	Process Variable	Default selection
SP	Local Setpoint #1	Default selection
2SP	Local Setpoint #2	Default selection
RSP	Remote Setpoint	Default selection
OUT	Output	
DEV	Deviation	
2IN	Input #2	
AUX	Aux Output value	
BIA	PD+MR bias value	
PIDS x	Process Variable	Active PID set
RP xxxM	Process Variable	SP Ramp time left
HH.MM or MM.SS	Process Variable	Timer display

### 6.3 Start Up Procedure for Operation

**Table 6-2 Procedure for Starting Up the Controller**

Step	Operation	Press	Result
1	Select Manual Mode	<b>MAN/AUTO RESET</b>	Until "M" indicator is ON. The controller is in manual mode.  <b>N/A for Single Display model.</b>
2	Adjust the Output	<b>[▲] [▼]</b>	To adjust the output value and ensure that the final control element is functioning correctly.  <i>Upper Display = Pv Value</i> <i>Lower Display = OT and the output value in %</i>
3	Tune the Controller	<b>SET UP</b>	Make sure the controller has been configured properly and all the values and selections have been recorder on the Configuration Record Sheet.  Refer to Tuning Set Up group to ensure that the selections for PBoR GAIN, RATE T, and I MIN, or I RPM have been entered.  <b>Use Accutune to tune the controller; see the procedure in this section.</b>
4	Enter the Local Setpoint	<b>DISPLAY</b>  <b>[▲] [▼]</b>	<i>Upper Display = Pv Value</i> <i>Lower Display = SP and the Local Setpoint Value</i>  to adjust the local setpoint to the value at which you want the process variable maintained.  The local setpoint cannot be changed if the Setpoint Ramp function is running.
5	Select Automatic Mode	<b>MAN/AUTO RESET</b>	Until "A" indicator is ON. The controller is in Automatic mode.  The controller will automatically adjust the output to maintain the process variable at setpoint.  <b>N/A for Single Display model.</b>



## 6.4 Control Modes

### ATTENTION

After changing a Local Setpoint value, if no other key is pressed, it then takes a minimum of thirty (30) seconds elapsed time before the new value is stored in non-volatile memory. If controller power is removed before this time, the new setpoint value is lost and the previous setpoint value is used at power-up. If, after changing the LSP value, another key is pressed, then the value is stored immediately.

### 6.4.1 Mode Definitions

**Table 6-3 Control Mode Definitions**

Control Mode	Definition
<b>AUTOMATIC with LOCAL SETPOINT</b>	In automatic local mode, the controller operates from the local setpoints and automatically adjusts the output to maintain the PV at the desired value. In this mode you can adjust the setpoint. <i>See Subsection 0 - Setpoints.</i>
<b>AUTOMATIC with REMOTE SETPOINT</b>	In automatic remote mode, the controller operates from the setpoint measured at the remote setpoint input. Adjustments are available to ratio this input and add a constant bias before it is applied to the control equation. <i>See Subsection 4.9 or 4.10 , Input 1 or Input 2</i>
<b>MANUAL</b>	In the manual mode, the operator directly controls the controller output level. The process variable and the percent output are displayed. The configured High and Low Output Limits are disregarded and the operator can change the output value, using the increment and decrement keys, to the limits allowed by the output type (0 to 100% for a time proportioning output or -5 to 105% for a current output).  <b>Manual not available with Single Display model.</b>

## 6.4.2 What happens when you change modes

**Table 6-4 Changing Control Modes (Dual Display Only)**

Control Mode	Definition
<b>Manual to Automatic Local Setpoint</b>	The Local Setpoint is usually the value previously stored as the Local Setpoint. PV tracking is a configurable feature which modifies this. For this configuration, when the controller is in manual mode, the local setpoint value tracks the process variable value continuously.
<b>Manual or Auto Local to Automatic Remote SP</b>	The Remote Setpoint uses the stored ratio and bias to calculate the control setpoint.
<b>Automatic Remote Setpoint to Manual or Auto Local Setpoint</b>	If configured for local setpoint tracking, RSP, when the controller transfers out of remote setpoint the last value of the remote setpoint is inserted into the local setpoint. If LSP tracking is not configured, the local setpoint will not be altered when the transfer is made.

## 6.5 Setpoints

### Introduction

You can configure the following setpoints for the UDC2300 controller.

- A Single Local Setpoint
- 2 Local Setpoints
- a Local Setpoint and a Remote Setpoint

Refer to Subsection 4.11-Control Set Up Group for configuration details.

### Changing the Setpoints

**Table 6-5 Procedure for Changing the Local Setpoints**

Step	Operation	Press	Result
1	Select the Setpoint	<b>DISPLAY</b>	Until you see: <i>Upper Display = PV</i> <i>Lower Display = SP or 2L (Value)</i>
2	Change the Value	<b>[▲] [▼]</b>	To change the Local Setpoint to the value at which you want the process maintained. The display "blinks" if you attempt to enter setpoint values beyond the high and low limits..
3	Return to PV Display	<b>DISPLAY</b>	To store immediately or will store after 30 seconds.

## Switching between setpoints

You can switch Local and Remote setpoints or between two Local setpoints when configured.

**ATTENTION** The REMOTE SETPOINT value cannot be changed at the keyboard.

**Table 6-6 Procedure for Switching Between Setpoints**

Step	Operation	Press	Result
1	Select the Setpoint	<b>FUNCTION</b>	<p>To alternately select Local Setpoint 1 (LSP) and the Remote Setpoint (RSP) or switch between the 2 Local Setpoints (LSP and 2L)</p> <p><b>ATTENTION</b> "KEY ERROR" will appear in the lower display, if:</p> <ul style="list-style-type: none"> <li>the remote setpoint or 2<sup>nd</sup> local setpoint is not configured as a setpoint source</li> <li>you attempt to change the setpoint while a setpoint ramp is enabled, or</li> <li>if you attempt to change the setpoint with the setpoint select function key disabled.</li> </ul>

## 6.6 Timer

### Introduction

The Timer provides a configurable Time-out period of from 0 to 99 hours:59 minutes or 0 to 99 min: 99 sec.

Timer "Start" is selectable as either the RUN/HOLD key or Alarm 2.

The Timer display can be either "Time Remaining" or "Elapsed Time".

### Configuration check

Make sure:

- TIMER is enabled,
- A TIMEOUT period has been selected (in hours and minutes or minutes and seconds),
- A TIMER FUNCTION START has been selected (KEY or AL2)
- A TIMER display has been selected (Time remaining or Elapsed time)
- A timer increment selected
- Timer reset selected

Refer to Subsection 4.4 - Timer Set Up Group for details.

### Viewing Times

The times are viewed on the lower display as follows:

TIME REMAINING will show as a *decreasing* Hrs:Min value (HH:MM) or Min:Sec value (MM:SS) plus a *counterclockwise* rotating clock face.

ELAPSED TIME will show as an *increasing* Hrs:Min value (HH:MM) or Min:Sec value (MM:SS) plus a *clockwise* rotating clock face.

### Operation

When the Timer is enabled (RUN/HOLD key or ALARM 2), it has exclusive control of Alarm 1 relay.

At "TIME-OUT":

- Alarm 1 is active
- The clock character has stopped moving
- The Time display shows either 00:00 or the time-out period depending on the configuration selection
- The Timer is ready to be reset.

At "RESET":

- Alarm 1 relay is inactive
- The time display shows the time-out period
- The time-out period can be changed at this time using the ▲ or ▼ keys.
- The Timer is ready to be activated.

## 6.7 Accutune II

### Introduction

AccutuneII (TUNE) may be used for self-regulating and single integrating processes. This autotuning method is initiated on-demand, typically at initial start-up.

There are no other requirements necessary, such as prior knowledge to the process dynamics or initial or post tune process line-out to setpoint or manual output.

Also, the setpoint value is not required to change in order to initiate the tuning process, but the controller must be in the Automatic mode to start tuning.

### Configuration check

Make sure:

- TUNE has been enabled see to subsection 4.7 - Accutune Set Up Group for details.
- Key Enabled – see subsection 4.5 – Tuning Set Up Group for details.

### Tuning indicators

“TUNE” will flash in the upper display until tuning is completed.

### Operation

“TUNE” (Accutune II) algorithm provides foolproof, trouble-free on-demand tuning in the UDC2300 controller. No knowledge of the process is required at start-up. The operator simply initiates the tuning while in the automatic mode.

The UDC controller immediately starts controlling to the setpoint while it identifies the process, calculates the tuning constants and enters them into the Tuning group, and begins PID control with the correct tuning parameters. This works with any process, including integrating type processes, and allows retuning at a fixed setpoint.

The tuning sequence will cycle the controller’s output two full cycles between 0% and 100 % (or low and high output limits) while allowing only a very small Process Variable change above and below the SP during each cycle. “TUNE” flashes in the upper display until tuning is completed.

After “TUNE” has been enabled, you can start Accutune as shown in Table 6-7.

**Table 6-7 Procedure for Starting “TUNE”**

Step	Operation	Press	Result
1	Switch to “Automatic” Mode	MAN/AUTO RESET	Until you “A” indicator is lit.
2	Initiate Accutune	AUTO TUNE	

## Tune for Duplex (Heat/Cool)

“TUNE” can be done for applications using Duplex (Heat/Cool) control.

During tuning, Accutune II assumes SP 1 will cause a Heating demand, and then the calculated tuning parameters will be automatically entered as PID SET 1. Likewise, it assumes tuning at Local SP 2 will cause a Cooling demand, and the cooling parameters will be entered as PID SET 2.

## Configuration Check for Duplex

Make sure:

- TUNE has been enabled see to subsection 4.7 - Accutune Set Up Group for details.
- Key Enabled – see subsection 4.5 – Tuning Set Up Group for details.

## Using TUNE at start-up for Duplex (Heat/Cool)

**Table 6-8 Procedure for Using TUNE at Start-up for Duplex Control**

Step	Action
1	<p><b>Heat Zone:</b></p> <p>a. Adjust the <b>Local SP1</b> to a value within the <b>Heat Zone</b>.</p> <p>b. Insure that the UDC is in <i>Automatic</i> mode.</p> <p>c. Press the <b>Autotune</b> key to initiate <b>Heat</b> zone tuning.</p> <p>The output will cycle between 50% and 100% (or high output limit).</p> <p>“TUNE” flashes in the upper display until tuning is completed and final <b>Heat</b> parameters are entered for <b>PID Set 1</b> in the Tuning group.</p>
2	<p><b>Cool Zone:</b></p> <p>a. Adjust the <b>Local SP2</b> to a value within the <b>Cool Zone</b>.</p> <p>b. Insure that the UDC is in <i>Automatic</i> mode.</p> <p>c. Press the <b>Autotune</b> key to initiate <b>Cool</b> tuning.</p> <p>The output will cycle between 0% and 50% (or low output limit).</p> <p>“TUNE” FLASHES IN THE UPPER DISPLAY UNTIL TUNING IS COMPLETED AND FINAL <b>COOL</b> PARAMETERS ARE ENTERED FOR <b>PID SET 2</b> IN THE TUNING GROUP.</p>

## Error Codes

**Table 6-9 Procedure for Accessing Accutune Error Codes**

Step	Operation	Press	Result
1	Select Accutune Set-up Group	<b>SET UP</b>	Upper Display = SET Lower Display = ATUNE
2	Go to Error Code Prompt	<b>FUNCTION</b>	Upper Display = (an error code) Lower Display = ATERR

Table 6-10 lists all the error codes, definitions, and fixes.

**Table 6-10 Accutune Error Codes**

Error Code (Upper Display)	Definition	Fix
RUN	ACCUTUNE RUNNING	The Accutune process is still active (Read Only)
NONE	NO ERRORS OCCURRED DURING LAST ACCUTUNE PROCEDURE	None
IDFL	PROCESS IDENTIFICATION FAILURE Autotune has aborted because an illegal value of GAIN, RATE, or reset was calculated.	<ul style="list-style-type: none"> <li>Illegal Values – try Accutune again.</li> <li>untunable process -- contact local application engineer.</li> </ul>
ABRT	CURRENT ACCUTUNE PROCESS ABORTED caused by the following conditions: <i>a. Operator changed to Manual mode</i> <i>b. Digital Input detected</i> <i>c. In Heat region of output and a Cool output calculated or vice versa.</i>	Try Accutune again

## Aborting Accutune

To abort Accutune and return to the last previous operation (SP or output level), press

**MAN-AUTO/RESET** key to abort the Accutune process.

## Completing Accutune

When Accutune is complete, the calculated tuning parameters are stored in their proper memory location in the controller, and the controller will control at the local setpoint using the newly calculated tuning constants.

## 6.8 Fuzzy Overshoot Suppression

### Introduction

Fuzzy Overshoot Suppression minimizes Process Variable overshoot following a setpoint change or a process disturbance. This is especially useful in processes which experience load changes or where even a small overshoot beyond the setpoint may result in damage or lost product.

### How it works

The fuzzy logic observes the speed and direction of the PV signal as it approaches the setpoint and temporarily modifies the internal controller response action as necessary to avoid an overshoot. There is no change to the PID algorithm, and the fuzzy logic does not alter the PID tuning parameters. This feature can be independently Enabled or Disabled as required by the application to work with “TUNE” (On-Demand) Accutune II tuning algorithm.

### Configuration

To configure this item, refer to Section 4 - Configuration:

Set Up Group “**ATUNE**”

Function Prompt “**FUZZY**”

Select “**ENAB**”(enable) or “**DIS**” ( disable) - Use ▲ or ▼.

## 6.9 Using Two Sets of Tuning Constants

### Introduction

You can use two sets of tuning constants for single output types and choose the way they are to be switched. (Does not apply for Duplex control.)

The sets can be:

- keyboard selected,
- automatically switched when a predetermined process variable value is reached,
- automatically switched when a predetermined setpoint value is reached.

### Set up Procedure

The following procedure (Table 6-11) to:

- select two sets,
- set the switch-over value,
- set tuning constant value for each set



Table 6-11 Set Up Procedure

Step	Operation	Press	Result
1	Select Control Set-up Group	SET UP	Until you see: <i>Upper Display</i> = SET <i>Lower Display</i> = CONTRL
2	Select PID SETS	FUNCTION	Until you see: <i>Upper Display</i> = (available selections) <i>Lower Display</i> = PID SETS
3	Select PID SETS Function	[▲] [▼]	To select the type of function. Available selections are: ONE—1 set of constants 2 KBD—2 sets, keyboard selectable 2 PR—2 sets, auto switch at PV value 2 SP—2 sets, auto switch at SP value
4	Set Tuning Values for Each Set		Refer to "TUNING" Set up group, subsection 4.5 and set the following tuning parameters:  PB or GAIN* RATE T* I MIN or I RPM* CYCT1 or CTIX3* PB2 or GAIN2** RATE 2T** I2MIN or I2RPM** CYC2T2 or CT2X3**  *PIDSET1 will be used when PV or SP, whichever is selected, is <b>greater</b> than the switchover value.  **PIDSET2 will be used when PV or SP, whichever is selected, is <b>less</b> than the switchover value.
5	Set Switchover Value for 2PR or 2SP Selection	FUNCTION	Until you see: <i>Upper Display</i> = (the switchover value) <i>Lower Display</i> = SW VAL
		[▲] [▼]	To select the switchover value in the upper display.

## Switch between two sets via keyboard (without automatic switch-over)

Table 6-12 Procedure for Switching PID SETS from the Keyboard

Step	Operation	Press	Result
1	Select Control Set-up Group	DISPLAY	Until you see: <i>Upper Display</i> = (the PV value) <i>Lower Display</i> = PIDS X (X= 1 or 2)
2		[▲] [▼]	To change PID SET 1 to PID SET2 or Vice Versa. You can use Accutune on each set.

## 6.10 Alarm Setpoints

### Introduction

An alarm consists of a relay contact and an operator interface indication. The alarm relay is de-energized if setpoint 1 or setpoint 2 is exceeded.

The alarm relay is energized when the monitored value goes into the allowed region by more than the hysteresis.

The relay contacts can be wired for normally open (NO) energized or normally closed (NC) de-energized using internal jumper placement. See Table 2-4 in the *Section 2 – Installation* for alarm relay contact information.

There are four alarm setpoints, two for each alarm. The type and state (High or Low) is selected during configuration. See *Subsection 4.13 – Configuration* for details.

### Alarm Setpoints Display

**Table 6-13 Procedure for Displaying Alarm Setpoints**

Step	Operation	Press	Result
1	Select Alarm Set-up Group	SET UP	Until you see: <i>Upper Display = SET</i> <i>Lower Display = ALARMS</i>
2	Access the Alarm Setpoint Values	FUNCTION	To successively display the alarm setpoints and their values. Their order of appearance is shown below. <i>Upper Display = (the alarm setpoint value)</i> <i>Range values are within the range of the selected parameters except:</i> <b>DEVIATION (DE)</b> value = PV Span <b>EVENTS (E-ON/E-OFF)</b> value = Event Segment Number <b>PV RATE OF CHANGE (PVRT)</b> = The amount of PV change in one minute in engineering units. <b>LOOP BREAK ALARMS (BRAK)</b> = The timer value may be changed only for controllers configured for ON/OFF. <i>Lower Display = A1S1VA = Alarm 1, Setpoint 1</i> <i>A1S2VA = Alarm 1, Setpoint 2</i> <i>A2S1VA = Alarm 2, Setpoint 1</i> <i>A2S2VA = Alarm 2, Setpoint 2</i>  NOTES: <b>With 3 position step control, the alarms set for “output” will not function.</b> <b>MAN, RSP, AND FSAF selections do not have setpoint values.</b>
3	Change a value	[▲] [▼]	To change any alarm setpoint value in the upper display.
4	Return to Normal Display	DISPLAY	

## 6.11 Three Position Step Control Algorithm

### Introduction

The Three Position Step Control algorithm allows the control of a valve (or other actuator) with an electric motor driven by two controller output relays; one to move the motor upscale, the other to move it downscale, without a feedback slidewire linked to the motor shaft.

### Estimated Motor Position

The Three Position Step control algorithm provides an output display ("OT") which is an estimated motor position since the motor is not using any feedback.

- Although this output indication is only accurate to a few percent, it is corrected each time the controller drives the motor to one of its stops (0% or 100%).
- It avoids all the control problems associated with the feedback slidewire (wear, dirt, and noise).
- When operating in this algorithm, the estimated "OT" display is shown to the nearest percent (that is, no decimal).

Refer to Subsection 9.4- to set the Motor Travel Time (the time it takes the motor to travel from 0% to 100%).

### Motor Position Display

**Table 6-14 Procedure for Displaying 3Pstep Motor Position**

Step	Operation	Press	Result
1	Access the Displays	DISPLAY	Until you see: <i>Upper Display = PV</i> <i>Lower Display = OT (The estimated motor position in %)</i>

## 6.12 Setting a Failsafe Output Value for Restart After a Power Loss

### Introduction

If the power to the controller fails and power is reapplied, the controller goes through the power up tests, then goes to a user configured FAILSAFE OUTPUT VALUE.

### Set a Failsafe Value

**Table 6-15 Procedure for Setting a Failsafe Value**

Step	Operation	Press	Result
1	Select Control Set-up Group	<b>SET UP</b>	Until you see: <i>Upper Display = SET</i> <i>Lower Display = CONTRL</i>
2	Select Failsafe Function Prompt	<b>FUNCTION</b>	You will see: <i>Upper Display = (range)</i> <i>within the range of the Output 0 to 100 for all output types except 3 Position Step</i> <b>3 Position Step</b> <i>0 = motor goes to closed position</i> <i>100 = motor goes to open position</i> <i>Lower Display = FAILSF</i>
3	Select a value	<b>[▲] [▼]</b>	To select a failsafe output value in the upper display
4	Return to Normal Display	<b>DISPLAY</b>	At power up, the output will go to the value set.

---

## 6.13 Setting Failsafe Mode

### Introduction

You can set the Failsafe Mode to be Latching or Non-Latching.

### Set Failsafe Mode

**Table 6-16 Procedure for Setting a Failsafe Mode**

Step	Operation	Press	Result
1	Select Control Set-up Group	SET UP	Until you see: <i>Upper Display</i> = <b>SET</b> <i>Lower Display</i> = <b>CONTRL</b>
2	Select Failsafe Function Prompt	FUNCTION	You will see: <i>Upper Display</i> = <b>LACH</b> (Controller goes to manual and output goes to failsafe value) <b>NO L</b> (controller mode does not change and output goes to failsafe value) <i>Lower Display</i> = <b>FSMODE</b>
3	Select a value	[▲] [▼]	To select a failsafe mode in the upper display.
4	Return to Normal Display	DISPLAY	At power up, the output will go to the value set.



## 7 Setpoint Rate/Ramp/Program Operation

### 7.1 Overview

#### Introduction

The Setpoint Ramp configuration group lets you enable and configure any of the following:

- **SPRATE** – a specific rate of change for any local setpoint change. (Subsection 7.2)
- **SPRAMP** – a single setpoint ramp that occurs between the current local setpoint and a final local setpoint over a time interval of 1 to 255 minutes. (Subsection 7.3)
- **SPPROG** – a ramp/soak profile in a 12-segment program. (Subsection 7.4)

This section explains the operation of each selection and configuration reference where necessary.

---

#### ATTENTION

For any option to function, the other options must be disabled (see Subsection 4.6– Configuration).

---

#### PV Hot Start

This is a standard feature. At power-up, the setpoint is set to the current PV value and the Rate or Ramp or Program then starts from this value.

#### RUN/HOLD key

You can start or stop the Ramp or Program using the RUN/HOLD key.

#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
7.2 Setpoint Rate	84
7.3 Setpoint Ramp	84
7.4 Setpoint Ramp/Soak Programming	86

## 7.2 Setpoint Rate

### Introduction

When you have configured a SETPOINT RATE, it will apply immediately to local setpoint change.

### Configuration check

Make sure:

- SPRATE is enabled
- SPRAMP and SPPROG are disabled
- A Rate Up (EUHRUP) or Rate Down (EUHRDN) value has been configured in Engineering units per hour.

**ATTENTION:** A value of 0 will imply an immediate change in setpoint, that is, NO RATE applies. See Subsection 4.6– Configuration group “SPRAMP” for details.)

### Operation

When a change to local setpoint is made, this controller will ramp from the original setpoint to the “target” setpoint at the rate specified.

The current setpoint value can be viewed at Sn on the lower display.

### Power outages

If power is lost before the “target” setpoint is reached, upon power recovery, the controller powers up with Sn = Current PV value and it automatically “Restarts” from Sn = current PV value up to the original “target” setpoint.

## 7.3 Setpoint Ramp

### Introduction

When you have configured a SETPOINT RAMP, the ramp will occur between the current local setpoint and a final local setpoint over a time interval of from 1 to 255 minutes. You can RUN or HOLD the ramp at any time.

### Configuration Check

Make sure

- SPRAMP is enabled
- SP RATE and SPPROG are disabled
- A Ramp Time (TIMIN) in minutes has been configured
- A final setpoint value (FINLSP) has been configured. See Subsection 4.6 – Configuration group “SPRAMP” for details.



## Operation

Running a Setpoint Ramp includes starting, holding, viewing the ramp, ending the ramp and disabling it. See Table 7-1 Running A Setpoint Ramp.

**Table 7-1 Running A Setpoint Ramp**

Step	Operation	Press	Result
1	Select Automatic Mode	MAN/AUTO	"A" indicator is on. <i>Upper Display</i> = Hold and PV value <i>Lower Display</i> = SP and Present value
2	Set Start Setpoint	DISPLAY	Until start SP value is in lower display <i>Upper Display</i> = Hold and PV value <i>Lower Display</i> = SP and start SP value
3	Start the Ramp	RUN/HOLD	You will see <i>Upper Display</i> = Run and a changing PV value <i>Lower Display</i> = SP and a changing SP value increasing or decreasing toward a final SP value
4	Hold/Run the Ramp	RUN/HOLD	This holds the ramp at the current setpoint value. Press again to continue.
5	View the remaining ramp time	DISPLAY	Until you see <i>Upper Display</i> = RUN or HOLD and the PV value <i>Lower Display</i> = RP xx HH.MM (time remaining)
6	End the Ramp		When the final setpoint is reached, "RUN" changes to "HOLD" in the upper display and the controller operates at the new final setpoint.
7	Disable SPRAMP		See Section 4 – Configuration group "SPRAMP" for details.

## Power Outage

If power is lost during a ramp, upon power-up the controller will be in HOLD and the setpoint value will be the setpoint value prior to the beginning of the setpoint ramp.

The ramp is placed in hold at the beginning.

Configure the mode at Set Up Group "CONTROL", function prompt "PWRUP". See Section 4.11– CONTRL GROUP FUNCTION Prompts.

## 7.4 Setpoint Ramp/Soak Programming

### Introduction

The term “programming” is used here to identify the process for selecting and entering the individual ramp and soak segment data needed to generate the rEquired setpoint versus time profile (also called a program).

A segment is a ramp or soak function which together make up a setpoint program. Setpoint Ramp/Soak Programming lets you configure six ramp and six soak segments to be stored for use as one program or several small programs. You designate the beginning and end segments to determine where the program is to start and stop.

### Review program data and configuration

While the procedure for programming is straightforward, and aided by prompts, we suggest you read “Program Contents”. Table 7-2 lists the program contents and an explanation of each to aid you in configuration. Then refer to Subsection 4.6—Configuration to do the setpoint program.

Make sure SPRATE and SPRAMP are disabled.

### Fill out the worksheet

Refer to the example in Figure 7-1 and draw a Ramp/Soak Profile on the worksheet provided (Figure 7-2) and fill in the information for each segment. This will give you a record of how the program was developed.

### Operation

Refer to Table 7-3 Run/Monitor the program.

### Program Contents

Table 7-2 lists all the program contents and a description of each.

Table 7-2 Program Contents

Contents	Definition
<b>Ramp time or rate segments</b>	<p>A ramp segment is the time or rate of change it takes to change the setpoint to the next setpoint value in the program.</p> <ul style="list-style-type: none"> <li>Ramps are odd number segments. Segment #1 will be the initial ramp time.</li> <li>Ramp time is determined in either: <ul style="list-style-type: none"> <li>TIME* - Hours:Minutes      Range = 0-99 hrs:59 min.</li> <li>or</li> <li>EU-M* - Degrees/Minute Range = 0 to 999</li> <li>EU-H* - Degrees/Hour</li> </ul> </li> </ul> <p>*The selection of time or rate is made at prompt "RP UNIT"  - Set this prompt before entering any Ramp information.</p> <p><b>ATTENTION</b> Entering "0" will imply an immediate step change in setpoint to the next soak.</p>
<b>Ramp unit</b>	<p>The ramp unit selection determines the engineering units for the ramp segments.</p> <p>The selections are:</p> <ul style="list-style-type: none"> <li>TIME = Hours:Minutes (XX:XX) Range: 0-99 hrs: 0-59 min</li> <li>EU-H = Degrees/Hour    OR    EU-M = Degrees/Minute (Range – 0-999)</li> </ul>
<b>Soak segments</b>	<p>A soak segment is a combination of soak setpoint (value) and a soak duration (time).</p> <ul style="list-style-type: none"> <li>Soaks are even number segments.</li> <li>Segment 2 will be the initial soak value and soak time.</li> <li>The soak setpoint range value must be within the setpoint high and low range limits in engineering units.</li> <li>Soak time is the duration of the soak and is determined in: <ul style="list-style-type: none"> <li>TIME - Hours:Minutes      Range = 0-99 hrs:59 min.</li> </ul> </li> </ul>
<b>Start segment number</b>	The start segment number designates the number of the first segment. Range = 1 to 11
<b>End segment number</b>	The end segment number designates the number of the last segment, it must be a soak segment (even number). Range = 2 to 12
<b>Recycle number</b>	The recycle number allows the program to recycle a specified number of times from beginning to end. Range = 0 to 99
<b>Guaranteed soak</b>	<p>All soak segments can have a deviation value of from 0 to <math>\pm 99</math> (specified by SOK DEV) which guarantees the value for that segment.</p> <p><b>Guaranteed</b> soak deviation values <math>&gt;0</math> guarantee that the soak segment's process variable is within the <math>\pm</math> deviation for the configured soak time. Whenever the <math>\pm</math> deviation is exceeded, soak timing is frozen.</p> <p>There are no guaranteed soaks whenever the deviation value is configured to 0, (that is, soak segments start timing soak duration as soon as the soak setpoint is first reached, regardless of where the process variable remains relative to the soak segment).</p>

<b>Contents</b>	<b>Definition</b>
	The soak deviation value is the number in engineering units, above or below the setpoint, outside of which the timer halts. The range is 0 to $\pm 99$ .
	The decimal location corresponds to input 1 decimal selection.
<b>Program state</b>	<p>The program state selection determines the program state after completion.</p> <p>The selections are:</p> <ul style="list-style-type: none"><li>• DIS = program is disabled (so program value changed to DIS)</li><li>• HOLD = program on hold</li></ul>
<b>Program termination state</b>	<p>The program termination state function determines the status of the controller upon completion of the program.</p> <p>The selections are:</p> <ul style="list-style-type: none"><li>• LAST = controls to last setpoint</li><li>• FSAF = manual mode and failsafe output.</li></ul>
<b>Reset Program to Beginning</b>	When enabled, this selection allow you to reset the program to the beginning from the keyboard.

---

### **Ramp/soak profile example**

Before you perform the actual configuration, we recommend that you draw a Ramp/Soak profile in the space provided on the “*Program Record Sheet*” (Figure 7-2) and fill in the associated information. An example of a Ramp-Soak Profile is shown in Figure 7-1. Start setpoint is at 200 degrees F.

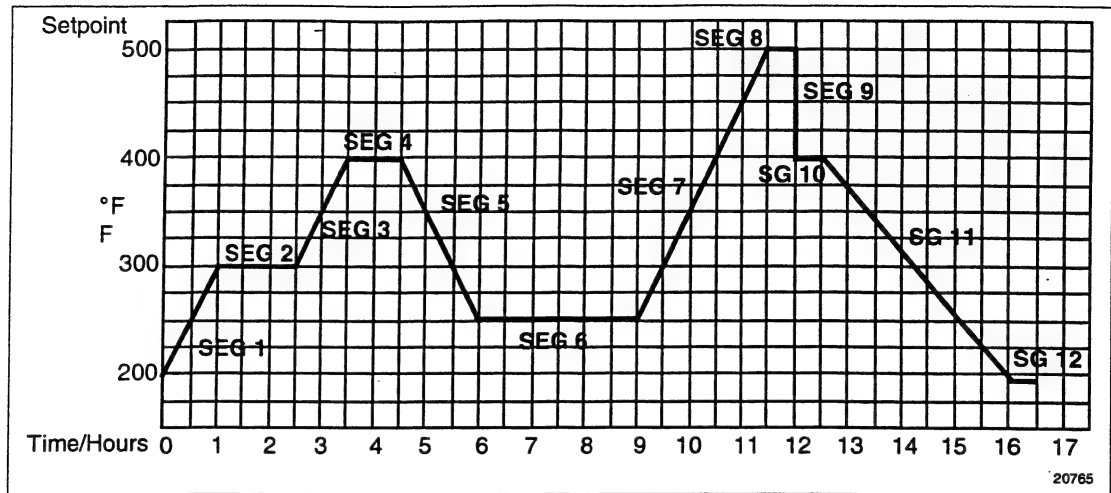



Figure 7-1 Ramp/Soak Profile Example

Ramp/Soak Profile Example

Prompt	Function	Segment	Value	Prompt	Function	Segment	Value
<b>STRSEG</b>	Start Seg.		1	<b>SG4 TI</b>	Soak Time	4	1 hr.
<b>ENDSEG</b>	End Seg.		12	<b>SG5 RP</b>	Ramp Time	5	1hr.:30 min.
<b>RP UNIT</b>	Engr. Unit for Ramp		TIME	<b>SG6 SP</b>	Soak SP	6	250
<b>PG END</b>	Controller Status		LAST SP	<b>SG6 TI</b>	Soak Time	6	3hrs.:0min.
<b>STATE</b>	Controller State at end		HOLD	<b>SG7 RP</b>	Ramp Time	7	2hrs.:30min.
<b>TO BEGIN</b>	Reset SP Program		DIS	<b>SG8 SP</b>	Soak SP	8	500
<b>RECYCL</b>	Number of Recycles		2	<b>SG8 TI</b>	Soak Time	8	0hr.:30 min.
<b>SOKDEV</b>	Deviation Value		0	<b>SG9 RP</b>	Ramp Time	9	0
<b>SG1 RP</b>	Ramp Time	1	1 hr.	<b>SG10 SP</b>	Soak SP	10	400
<b>SG2 SP</b>	Soak SP	2	300	<b>SG10 TI</b>	Soak Time	10	0hr.:30 min.
<b>SG2 TI</b>	Soak Time	2	1hr.:30 min.	<b>SG11 RP</b>	Ramp Time	11	3hrs.:30min.
<b>SG3 RP</b>	Ramp Time	3	1hr.	<b>SG12 SP</b>	Soak SP	12	200
<b>SG4 SP</b>	Soak SP	4	400	<b>SG12TI</b>	Soak Time	12	0hr.:30 min.

## Program record sheet

Draw your ramp/soak profile on the record sheet shown in Figure 7-2 and fill in the associated information in the blocks provided. This will give you a permanent record of your program and will assist you when entering the Setpoint data.

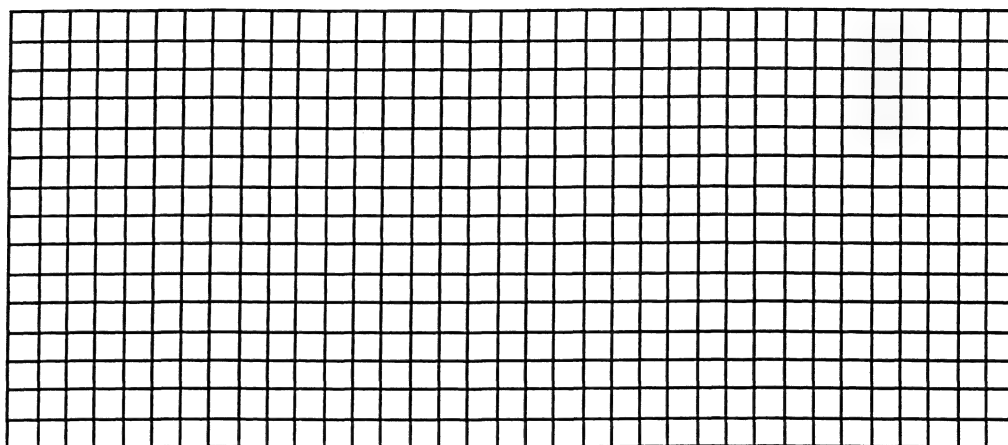

20766

**Figure 7-2 Program Record Sheet**

Prompt	Function	Segment	Value	Prompt	Function	Segment	Value
<b>STRSEG</b>	Start Seg.			<b>SG4 TI</b>	Soak Time	4	
<b>ENDSEG</b>	End Seg.			<b>SG5 RP</b>	Ramp Time	5	
<b>RP UNIT</b>	Engr. Unit for Ramp			<b>SG6 SP</b>	Soak SP	6	
<b>RECYCL</b>	Number of Recycles			<b>SEG6 TI</b>	Soak Time	6	
<b>SOKDEV</b>	Deviation Value			<b>SG7 RP</b>	Ramp Time	7	
<b>PG END</b>	Controller Status			<b>SG8 SP</b>	Soak SP	8	
<b>STATE</b>	Program Controller State			<b>SG8 TI</b>	Soak Time	8	
<b>TO BEGIN</b>	Reset SP Program			<b>SG9 RP</b>	Ramp Time	9	
<b>SG1 RP</b>	Ramp Time	1		<b>SG10 SP</b>	Soak SP	10	
<b>SG2 RP</b>	Soak SP	2		<b>SG10 TI</b>	Soak Time	10	
<b>SG2 TI</b>	Soak Time	2		<b>SG11RP</b>	Ramp Time	11	
<b>SG3 RP</b>	Ramp Time	3		<b>SG12SP</b>	Soak SP	12	
<b>SG4 SP</b>	Soak SP	4		<b>SG12TI</b>	Soak Time	12	

## Run/Monitor the program

Prior to running the program, make sure all the “SP PROG” function prompts under the Set Up group “SP RAMP” have been configured with the required data.

“HOLD” appears periodically in the upper display indicating that the program is in the HOLD state.

**ATTENTION** SP Programmer parameter *cannot* be changed during RUN state (must be in HOLD state).

## Run/Monitor functions

Table 7-3 lists all the functions required to run and monitor the program.

**Table 7-3 Run/Monitor Functions**

Function	Press	Result
Set the Local Setpoint	DISPLAY	Upper Display = PV value Lower Display = SP
	▲ or ▼	To set the Local Setpoint value to where you want the program to start out.
Run State	RUN/HOLD	Initiates the setpoint program. “RUN” appears in the upper display indicating that the program is running.
Hold State	RUN/HOLD	Holds the setpoint program. “HOLD” appears in the upper display indicating that the program is in the HOLD state. The setpoint holds at the current setpoint.
External Hold		If Remote Switching (Digital Input Option) is present on your controller, contact closure places the controller in the HOLD state, if the setpoint program is running. The “HOLD” in the upper display will be displayed periodically in lower case. <b>ATTENTION</b> The keyboard takes priority over the external switch for the RUN/HOLD function. Contact reopening runs program.
Viewing the present ramp or soak segment number and time	DISPLAY until you see	Upper Display = PV value Lower Display = XXHH.MM Time remaining in the SEGMENT in hours and minutes. XX = 1 to 12

*continued*

Function	Press	Result
Viewing the number of cycles left in the program	<b>DISPLAY</b> until you see	<i>Upper Display = PV value</i> <i>Lower Display = REC_XX</i>  Number of cycles remaining in the setpoint program. X = 0 to 99
End Program		When the final segment is completed, the "RUN" in the upper display either changes to "HOLD" (if configured for HOLD state), or disappears (if configured for disable of setpoint programming).  • The controller either operates at the last setpoint in the program or goes into manual mode/failsafe output.
Disable Program		See Section 4 – Configuration Group "SPPROG" for details.

---

## Power outage

**ATTENTION** If power is lost during a program, upon power-up the controller will be in hold and the setpoint value will be the setpoint value prior to the beginning of the setpoint program. The program is placed in hold at the beginning. The mode will be as configured under "PWR UP" in the "CONTROL" group.

## Digital input (remote) operation

Program can be placed in RUN or HOLD state through a remote dry contact connected to optional digital input terminals, as follows:

RUN—contact closure places Program in RUN state, OR

HOLD—contact closure places Program in HOLD state

Opening contact reverts to original state.



## 8 Input Calibration

### 8.1 Overview

#### Introduction

This section describes the field calibration procedures for Input 1 and Input 2.

- Every UDC 2300 controller contains all input actuation ranges which are fully factory-calibrated and ready for configuration to range by the user.
- However, these procedures can be implemented if the factory calibration of the desired range is not within specification.

#### CAUTION

The field calibration will be lost if a change in input type configuration is implemented at a later time. The original factory calibration data remains available for later use after a field calibration is done. See subsection 8.8 if you want to restore factory calibration values.

#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
8.1 Overview	93
8.2 Minimum and Maximum Range Values	94
8.3 Preliminary Information	95
8.4 Input #1 Set Up Wiring	97
8.5 Input #1 Calibration Procedure	101
0 Input #2 Set Up Wiring	103
8.7 Input #2 Calibration Procedure	105
8.8 Restore Factory Calibration	106



**WARNING—SHOCK HAZARD**



INPUT CALIBRATION MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE CALIBRATION.

## Calibration Steps

Use the following steps when calibrating an input.

Step	Action
1	Find the minimum and maximum range values for your PV input range from Table 8-1.
2	Disconnect the field wiring and find out what equipment you will need to calibrate.
3	Wire the calibrating device to your controller according to the set up wiring instructions for your particular input (Subsection 8.4 or 8.6).
4	Follow the calibration procedure given for Input #1 or Input #2 (Subsection 8.5 or 8.7).

## 8.2 Minimum and Maximum Range Values

### Select the Range Values

You should calibrate the controller for the minimum (0%) and maximum (100%) range values of your particular controller. If you have a two input controller, calibrate each input separately.

Select the Voltage or Resistance equivalent for 0% and 100% range values from Table 8-1. Use these values when calibrating your controller.

**Table 8-1 Voltage and Resistance Equivalents for Input 1 Range Values**


Sensor Type	PV Input Range		Range Values	
	°F	°C	0%	100%
<b>Thermocouples</b>				
<b>B</b>	0 to 3300	-18 to 1816	-0.100 mV	13.769 mV
<b>E</b>	-454 to 1832	-270 to 1000	-9.835 mV	76.373 mV
<b>E (low)</b>	-200 to 1100	-129 to 593	-6.472 mV	44.455 mV
<b>J</b>	0 to 1600	-18 to 871	-0.886 mV	50.060 mV
<b>J (low)</b>	20 to 770	-7 to 410	-0.334 mV	22.400 mV
<b>K</b>	0 to 2400	-18 to 1816	-0.692 mV	52.952 mV
<b>K (low)</b>	-20 to 1000	-29 to 538	-1.114 mV	22.255 mV
<b>NiNiMoly (NNM68)</b>	32 to 2500	0 to 1371	0.000 mV	71.330 mV
<b>NiNiMoly (low)</b>	32 to 1260	0 to 682	0.000 mV	31.820 mV
<b>NiMo-NiCo (NM90)</b>	32 to 2500	0 to 1371	0.000 mV	71.773 mV
<b>NiMo-NiCo (low)</b>	32 to 1260	0 to 682	0.000 mV	31.825 mV
<b>Nicrosil Nisil (Nic)</b>	0 to 2372	-18 to 1300	-0.461 mV	47.513 mV
<b>R</b>	0 to 3100	-18 to 1704	-0.090 mV	20.281 mV
<b>S</b>	0 to 3100	-18 to 1704	-0.092 mV	17.998 mV

Sensor Type	PV Input Range		Range Values	
	°F	°C	0%	100%
T	-300 to 700	-184 to 371	-5.341 mV	19.097 mV
T (low)	-200 to 500	-129 to 260	-4.149 mV	12.574 mV
W5W26	0 to 4200	-18 to 2315	-0.234 mV	37.075 mV
W5W26 (low)	0 to 2240	-18 to 1227	-0.234 mV	22.283 mV
Honeywell Radianatic  Type RH Type RI	0 to 3400 0 to 3200	-18 to 1871 -18 to 1760	0.00 mV 0.00 mV	57.12 mV 60.08 mV
RTD (IEC Alpha=0.00385)				
100 ohms	-300 to 1200	-184 to 649	25.18 ohms	274.96 ohms
100 ohms (low)	-300 to 300	-184 to 149	25.18 ohms	156.90 ohms
200 ohms	-300 to 900	-184 to 482	50.36 ohms	549.92 ohms
500 ohms	-300 to 900	-184 to 482	125.90 ohms	1374.80 ohms
Linear				
Milliamps (impedance – 249 Ω)	4 to 20 mA 0 to 20 mA		4.00 mA 0.00 mA	20.00 mA 20.00 mA
Millivolts	0 to 10 mV 0 to 50 mV 0 to 100 mV		0.00 mV 0.00 mV 0.00 mV	10.00 mV 50.00 mV 100.00 mV
Volts	1 to 5 Volts 0 to 2 Volts 0 to 5 Volts 0 to 10 Volts		1.00 Volts 0.00 Volts 0.00 Volts 0.00 Volts	5.00 Volts 2.00 Volts 5.00 Volts 10.00 Volts

### 8.3 Preliminary Information

#### Disconnect the Field Wiring

Tag and disconnect any field wiring connected to the input (#1 or #2) terminals on the rear of the controller.

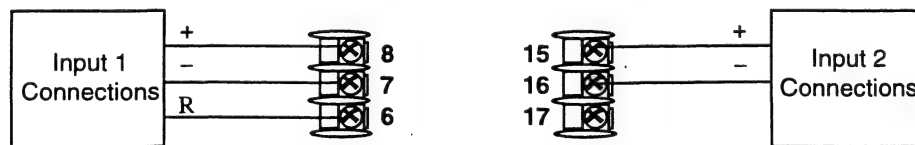

24869

Figure 8-1 Input 1 and Input 2 Wiring Terminals

### Check the Jumper for Input 1

Before you calibrate Input #1, check the internal jumper for Input 1 to make sure it is set for the correct input type. The jumper is located at position S101 on the printed wiring board. Figure 2-2 shows the location of the jumper and position selections.

### Check the Jumper for Input 2

Before you calibrate Input #2, check the internal jumper for Input 2 to make sure it is set for the correct input type. The jumper is located at position S201 on the printed wiring board. Figure 2-2 shows the location of the jumper and position selections.

### Equipment Needed

Table 8-2 lists the equipment you will need to calibrate the specific types of inputs that are listed in the table. You will need a screwdriver to connect these devices to your controller.

**Table 8-2 Equipment Needed**

Type of Input	Equipment Needed
Thermocouple Inputs (Ice Bath)	<ul style="list-style-type: none"><li>• A calibrating device with <math>\pm 0.02\%</math> accuracy for use as a signal source such as a millivolt source.</li><li>• Thermocouple extension wire that corresponds with the type of thermocouple that will be used with the controller input.</li><li>• Two insulated copper leads for connecting the thermocouple extension wire from the ice baths to the mV source.</li><li>• Two containers of crushed ice.</li></ul>
Thermocouple Inputs (T/C Source)	<ul style="list-style-type: none"><li>• A calibrating device with <math>\pm 0.02\%</math> accuracy for use as a signal source such as a millivolt source.</li><li>• Thermocouple extension wire that corresponds with the type of thermocouple that will be used with controller input.</li></ul>
RTD (Resistance Thermometer Device)	<ul style="list-style-type: none"><li>• A decade box, with <math>\pm 0.02\%</math> accuracy, capable of providing stepped resistance values over a minimum range of 0 to 1400 ohms with a resolution of 0.1 ohm.</li><li>• Three insulated copper leads of equal length for connecting the decade box to the controller.</li></ul>
Milliampere, Millivolt, Volts, and Radiamatic	<ul style="list-style-type: none"><li>• A calibrating device with <math>\pm 0.02\%</math> accuracy for use as a signal source.</li><li>• Two insulated copper leads for connecting the calibrator to the controller.</li><li>• Place current source at zero before switching ON.</li><li>• Do not switch current sources OFF/ON while connected to the UDC 2300 input.</li></ul> <p>ATTENTION: For radiamatic inputs only, set emissivity value to 1.0. See <i>Section 4.9— Configuration Set Up</i> prompt INPUT1, Function prompt EMISS.</p>


## 8.4 Input 1 Set Up Wiring

### Thermocouple Inputs Using an Ice Bath

Refer to Figure 8-2 and wire the controller according to the procedure given in Table 8-3. Make sure the jumper at S101 is in the #1 position. See Figure 2-2 Jumper Placements.

**Table 8-3 Set Up Wiring Procedure for Thermocouple Inputs Using an Ice Bath**

Step	Action
1	Connect the copper leads to the calibrator.
2	Connect a length of thermocouple extension wire to the end of each copper lead and insert the junction points into the ice bath.
3	Connect the thermocouple extension wires to the terminals for Input #1. See Figure 8-2.

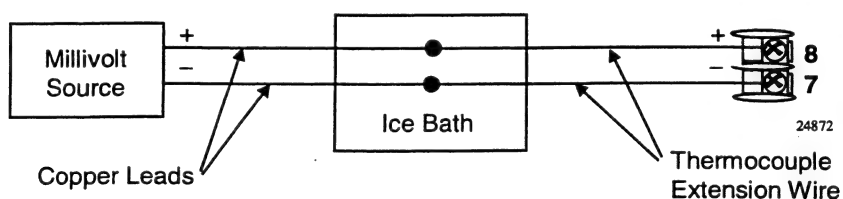


**Figure 8-2 Wiring Connections for Thermocouple Inputs Using an Ice Bath**

### Thermocouple Inputs Using a Thermocouple Source

Refer to Figure 8-3 and wire the controller according to the procedure given in Table 8-4. Make sure the jumper at S101 is in the #1 position. See Figure 2-2 Jumper Placements.

**Table 8-4 Set Up Wiring Procedure for Thermocouple Inputs using Thermocouple Source**

Step	Action
1	Connect the thermocouple extension wires to the terminals for Input #1 as shown in Figure 8-3.

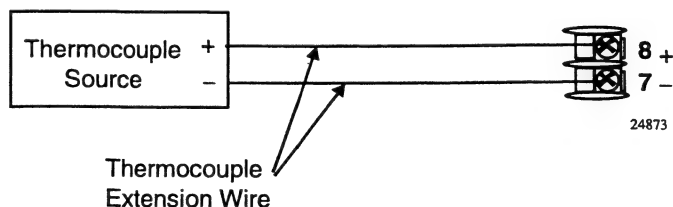


**Figure 8-3 Wiring Connections for Thermocouple Inputs Using Thermocouple Source**

## RTD Inputs

Refer to Figure 8-4 and wire the controller according to the procedure given in Table 8-5. Make sure the jumper at S101 is in the #2 position. See Figure 2-2 Jumper Placements

**Table 8-5 Set Up Wiring Procedure for RTD Inputs**

Step	Action
1	Connect the copper leads from the calibrator to the Input #1 terminals as shown in Figure 8-4.
2	Place current source at zero before switching on.
3	Do not switch current sources ON/OFF while connected to the UDC 2300 input.

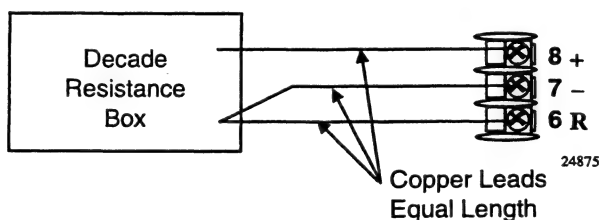

**Figure 8-4 Wiring Connections for RTD (Resistance Thermometer Device)**

## Radiamatic, Millivolts, Milliampere, or Volts

Refer to Figure 8-5 and wire the controller according to the procedure given in Table 8-6. Make sure the jumper at S101 is in the #2 position for, mV, Volts, or the #4 position for mA. See Figure 2-2 Jumper Placements.


**Table 8-6 Set Up Wiring Procedure for Radiamatic, Milliampere, Millivolts, or Volts Inputs (Except 0-10 Volts)**

Step	Action
1	Connect the copper leads from the calibrator to the Input #1 terminals as shown in Figure 8-5.
2	Place current source at zero before switching on.
3	Do not switch current sources ON/OFF while connected to the UDC 2300 input.

### ATTENTION

For radiamatic inputs only, set emissivity value to 1.0. See *Section 4.9 – Configuration Set Up* prompt INPUT1, function prompt EMISS.

*Continued next page*

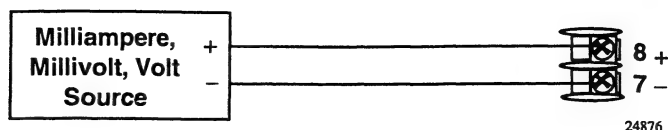


**Figure 8-5 Wiring Connections for Radiamatic, Milliampere, Millivolts, or Volts (Except 0 to 10 Volts)**

## 0 to 10 Volts

Refer to Figure 8-6 and wire the controller according to the procedure given in Table 8-7. Make sure the jumper at S101 is in parked position. See Figure 2-2 Jumper Placements

**Table 8-7 Set Up Wiring Procedure for 0 to 10 Volts**

Step	Action
1	Connect the copper leads from the calibrator to the Input #1 terminals as shown in Figure 8-6.
2	Place current source at zero before switching on.
3	Do not switch current sources ON/OFF while connected to the UDC 2300 input.

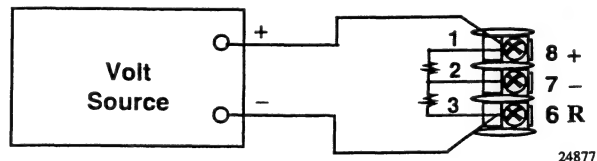

**Figure 8-6 Wiring Connections for 0 to 10 Volts**

## 8.5 Input 1 Calibration Procedure

### Preliminary Steps

- Apply power and allow the controller to warm up for 30 minutes before you calibrate.
- Please read "*Section 8.4 – Input 1 Set Up Wiring*" before beginning the procedure.
- Make sure you have **LOCK** set to **NONE**. See *Section 4.5 - Tuning Set Up Group*.
- See Table 8-1 for Voltage vs. Resistance equivalents or 0% and 100% range values.

### CAUTION

- For linear inputs, avoid step changes in inputs. Vary smoothly from initial value to final 100% value.
- Make sure that the input 2 is disabled or shorted.

## Procedure

The calibration procedure for Input #1 is listed in Table 8-8. The numeric codes are also listed.

**Table 8-8 Input 1 Calibration Procedure (Numeric Code 10000)**

Step	Operation	Press	Result						
1	Enter Calibration Mode	SET UP	Upper Display = CAL ( - - - - ) Lower Display = INPUT1 (10000)						
			until you see						
		FUNCTION	You will see: Upper Display = DIS ( 0 ) Lower Display = CALIN1 (10001)						
		▲	The calibration sequence is enabled and you will see: Upper Display = BEGN ( 1 ) Lower Display = CALIN1 (10001)  At the completion of the sequence, the selection automatically reverts to disable.						
2	Calibrate 0%	FUNCTION	You will see: Upper Display = APLY ( 2 ) Lower Display = IN1ZRO (10002)  <ul style="list-style-type: none"><li>Adjust your calibration device to an output signal equal to the 0% range value for your particular input sensor. See Table 8-1 for Voltage, Degrees, or Resistance equivalents for 0% range values.</li><li>Wait 15 seconds, then go to the next step.</li></ul>						
3	Calibrate 100%	FUNCTION	You will see: Upper Display = APLY ( 2 ) Lower Display = IN1SPN (10003)  <ul style="list-style-type: none"><li>Adjust your calibration device to an output signal equal to the 100% range value for your particular input sensor. See Table 8-1 for Voltage, Degrees, or Resistance equivalents for 100% range values.</li><li>Wait 15 seconds, and</li></ul>						
			<table><tr><th>If ...</th><th>Then ...</th></tr><tr><td>you are calibrating a Thermocouple input</td><td>go to step 4</td></tr><tr><td>you are calibrating other than a Thermocouple input</td><td>go to step 5</td></tr></table>	If ...	Then ...	you are calibrating a Thermocouple input	go to step 4	you are calibrating other than a Thermocouple input	go to step 5
If ...	Then ...								
you are calibrating a Thermocouple input	go to step 4								
you are calibrating other than a Thermocouple input	go to step 5								

*Continued next page*



Step	Operation	Press	Result
4	Check the Cold Junction Temperature	FUNCTION	<p>The calculations for zero and span are now stored and you will see:</p> <p><i>Upper Display</i> = The cold junction temperature at the rear terminals</p> <p><i>Lower Display</i> = <b>CJTEMP (10004)</b></p> <p>The value in the upper display is in tenths of a degree. It is the current reading of the temperature as measured at the thermocouple terminals and recognized by the controller. You can change this value, if it is in error, using the [▲] [▼] keys.</p> <p>NOTE: The accuracy of the controller is directly affected by the accuracy of this value. Change this value only if the zero and span calibration procedures did not bring the controller within the specified accuracy requirements.</p>
5	Exit the Calibration Mode	FUNCTION then DISPLAY	<p>The controller stores the calibration constants and exits the calibration mode.</p>

## 8.6 Input 2 Set Up Wiring

### 0 to 20 mA or 4 to 20 mA Inputs

- Use the copper leads and connect the calibrator to the rear terminals of Input #2 (see Figure 8-7).
- Make sure jumper at S201 is set for mA (position 1). See Figure 2-2 Jumper Placements.

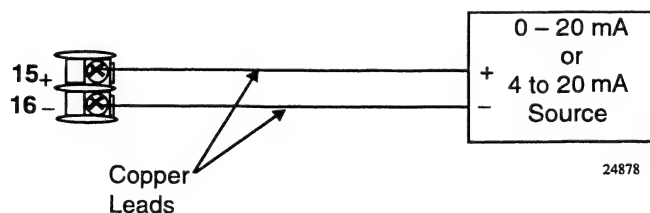


Figure 8-7 Wiring Connections for 4 to 20 mA Input – Input 2

### 0 to 2 Volts, 0 to 5 Volts, or 1 to 5 Volt Inputs

- Use the copper leads and connect the calibrator to the rear terminals of Input #2 (see Figure 8-8).
- Make sure the jumper of S201 is set for Volts (position 2). See Figure 2-2 Jumper Placements.

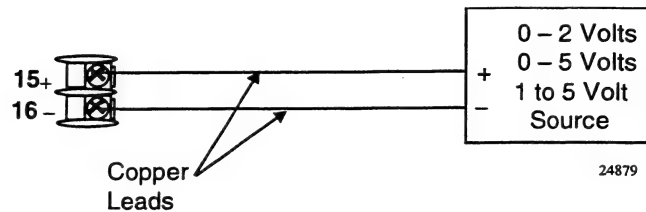


Figure 8-8 Wiring Connections for 1 to 5 Volt Input – Input 2

## 8.7 Input 2 Calibration Procedure

### Preliminary Steps

- Apply power and allow the controller to warm up for 30 minutes before you calibrate.
- Please read "Subsection 0 –
- *Input 2 Set Up Wiring*" before beginning the procedure.
- Make sure you have LOCK set to NONE. See *Section 4.5 - Tuning Set Up Group*.

---

### CAUTION

- Make sure that the input 1 is shorted.
- 

*Continued next page*

## Procedure

The calibration procedure for Input #2 is listed in Table 8-9. The numeric codes are also listed.

**Table 8-9 Input 2 Calibration Procedure (Numeric Code 20000)**

Step	Operation	Press	Result
1	Enter Calibration Mode	<b>SET UP</b> until you see <b>FUNCTION</b>  <b>▲</b>	<i>Upper Display = CAL ( - - - )</i> <i>Lower Display = INPUT2 (20000)</i>  You will see: <i>Upper Display = DIS ( 0 )</i> <i>Lower Display = CALIN2 (20001)</i>  You will see: <i>Upper Display = BEGN ( 1 )</i> <i>Lower Display = CALIN2 (20001)</i>
2	Calibrate 0%	<b>FUNCTION</b>	You will see: <i>Upper Display = APLY ( 2 )</i> <i>Lower Display = IN2ZRO (20002)</i> <ul style="list-style-type: none"><li>Adjust your calibration device to an output signal equal to the 0% range value for your particular input sensor.</li><li>Wait 15 seconds, then go to the next step.</li></ul>
3	Calibrate 100%	<b>FUNCTION</b>	You will see: <i>Upper Display = APLY ( 2 )</i> <i>Lower Display = IN2SPN (20003)</i> <ul style="list-style-type: none"><li>Adjust your calibration device to an output signal equal to the 100% range value for your particular input sensor.</li><li>Wait 15 seconds, then go to the next step.</li></ul>
4	Exit the Calibration Mode	<b>FUNCTION</b>  <b>DISPLAY</b>	The controller stores the calibration constants.  To store the calibration constants and exit the calibration mode.

## 8.8 Restore Factory Calibration

### Introduction

The factory calibration constants for all the input actuation types that can be used with the controller are stored in its nonvolatile memory. Thus, you can quickly restore the “Factory Calibration” for a given input actuation type by simply changing the actuation type to another type and then changing it back to the original type.

*Refer to Table 8-10 Restore Factory Calibration for procedure.*

**ATTENTION:** A restored factory calibration overwrites any previous field calibration done for the input and may change the High and Low Range Limits.

Be sure to protect any field calibration from accidental overwrites by configuring the appropriate LOCKOUT selection after calibration.

See the *Section 4 - Configuration* for specific instructions to set the lockout.

**Table 8-10 Restore Factory Calibration**

Step	Operation	Press	Result
1	Set LOCKOUT to NONE	<div>SET UP</div> <div>FUNCTION</div>	<p>until you see:  <i>Upper Display</i> = <b>SET UP</b>  <i>Lower Display</i> = <b>TUNING</b></p> <p>Until you see:  <i>Upper Display</i> = <b>one of the following:</b>  <b>NONE</b> – all parameters are read/write  <b>CAL</b> – all parameters are read/write except Calibration  <b>CONF</b> – configuration parameters are Read Only; no writes permitted  <b>VIEW</b> – Tuning and Setpoint Ramp parameters are read/write. No other parameters can be viewed.  <b>ALL</b> – Tuning and Setpoint Ramp parameters are available for read only. No other parameters can be viewed.  <i>Lower Display</i> = <b>LOCK</b></p> <p>[▲] [▼] Until <b>NONE</b> is in the upper display</p>
2	Enter INPUT 1 Setup Group	<div>SET UP</div> <div>FUNCTION</div>	<p>until you see:  <i>Upper Display</i> = <b>SET UP</b>  <i>Lower Display</i> = <b>INPUT 1 or 2</b></p> <p>until you see:  <i>Upper Display</i> = the current selection  <i>Lower Display</i> = <b>INxTYP</b></p> <p>[▲] [▼] to change the current selection to another selection</p>
3	Scroll through Functions	<div>FUNCTION</div> <div>[▲] [▼]</div>	<p>until the lower display rolls through the rest of the functions and returns to:  <i>Upper Display</i> = the new selection  <i>Lower Display</i> = <b>INxTYP</b></p> <p>until you change the input selection in the upper display back to the proper selection. You will see:  <i>Upper Display</i> = Original Input Selection that matches your type of sensor.  <i>Lower Display</i> = <b>INxTYP</b></p>
4	Return to Normal Operation	<div>DISPLAY</div>	<p>to return to Normal operating mode.</p> <p>The factory calibration will be restored. If the problem is not corrected, contact the Honeywell Technical Assistance Center.</p> <p>1-800-423-9883 USA and Canada</p>

## 9 Output Calibration

### 9.1 Overview

#### Introduction

This section describes the field calibration procedures for the following types of outputs:

- Current Proportional Output
- Auxiliary Output
- Motor Travel Time Setting for Three Position Step

#### What's in this section?

The following topics are covered in this section.

TOPIC	See Page
9.1 Overview	109
0 Current Proportional Output Calibration	110
9.3 Auxiliary Output Calibration	112
9.4 Three Position Step Control Output Calibration	114



**WARNING—SHOCK HAZARD**



OUTPUT CALIBRATION MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE CALIBRATION.

## 9.2 Current Proportional Output Calibration

### Introduction

Calibrate the controller so that the output provides the proper amount of current over the desired range. The controller can provide an output current range of from 0 to 21 milliamperes and can be calibrated at 4 mA for 0% of output and 20 mA for 100% of output, or any other values between 0 and 21 mA.

### Equipment Needed


You will need a standard shop type milliammeter, with whatever accuracy is required, capable of measuring 0 to 20 milliamps.

### Calibrator Connections

Refer to Figure 9-1 and wire the controller according to the procedure given in Table 9-1.

**Table 9-1 Set Up Wiring Procedure for Current Proportional Output**

Step	Action
1	Apply power and allow the controller to warm up 30 minutes before you calibrate.
2	Set LOCK in the Tuning Set Up group to NONE.
3	Tag and disconnect the field wiring, at the rear of the controller, from terminals 4 (-) and 5 (+). See Figure 9-1.
4	Connect a milliammeter across these terminals.

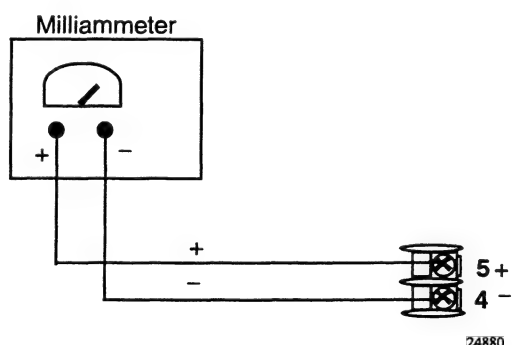

**Figure 9-1 Wiring Connections for Calibrating Current Proportional Output**

## Procedure

The procedure for calibrating the Current Proportional Output is listed in Table 9-2. The numeric codes are also listed. Make sure LOCK in the Tuning Set Up group is set to **NONE**. (see Subsection 4.5 – Tuning Set Up Group).

**Table 9-2 Current Proportional Output Calibration Procedure  
(Numeric Code 30000)**

Step	Operation	Press	Result
1	Enter Calibration Mode	<b>SET UP</b> until you see	Upper Display = <b>CAL ( - - - )</b> Lower Display = <b>CURRENT (30000)</b>
2	Calibrate 0%	<b>FUNCTION</b>  <b>[▲] [▼]</b>	You will see:  Upper Display = A Value Lower Display = <b>ZROVAL (30001)</b>  Until the desired 0% output is read on the milliammeter, use the values shown below depending on the action of your controller. <ul style="list-style-type: none"> <li>• 0 mA For 0 to 20 mA Direct Action</li> <li>• 4 mA For 4 to 20 mA Direct Action</li> <li>• 20 mA For 4 to 20 mA Reverse Action or 0 to 20 mA Reverse Action</li> </ul>
3	Calibrate 100%	<b>FUNCTION</b>  <b>[▲] [▼]</b>	This stores the 0% value and you will see:  Upper Display = A Value Lower Display = <b>SPNVAL (30002)</b>  Until the desired 100% output is read on the milliammeter, use the values shown below depending on the action of your controller. <ul style="list-style-type: none"> <li>• 20 mA For 0 to 20 mA Direct Action</li> <li>• 20 mA For 4 to 20 mA Direct Action</li> <li>• 4 mA For 4 to 20 mA Reverse Action</li> <li>• 0 mA For 0 to 20 mA Reverse Action</li> </ul>
4	Exit the Calibration Mode	<b>FUNCTION</b>  <b>DISPLAY</b>	The controller stores the span value.  To exit the calibration mode.

## 9.3 Auxiliary Output Calibration

### Introduction

Calibrate the controller so that the auxiliary output provides the proper amount of current over the desired range. The controller can provide an auxiliary current output range of from 0 to 20 mA and can be calibrated at 4 mA for 0% of output and 20 mA for 100% of output or any other values between 0 and 21 mA.

### Equipment Needed


You will need a calibrating device with whatever accuracy is required, capable of measuring 0 to 20 mA.

### Calibrator Connections

Refer to Figure 9-2 and wire the controller according to the procedure given in Table 9-3.

**Table 9-3 Set Up Wiring Procedure for Auxiliary Output**

Step	Action
1	Apply power and allow the controller to warm up 30 minutes before you calibrate.
2	<b>Set LOCK in the Tuning Set Up group to NONE.</b>
3	Tag and disconnect the field wiring, at the rear of the controller, from terminals 13 (+) and 14 (-). See Figure 9-2.
4	Connect a milliammeter across these terminals.

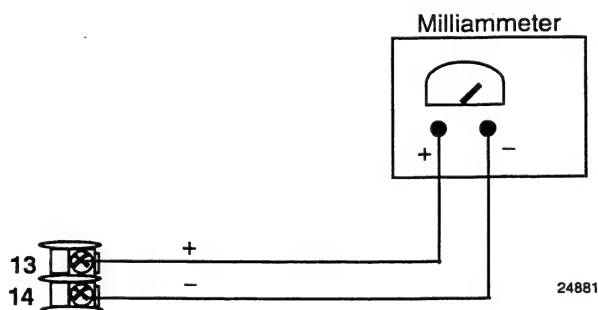

**Figure 9-2 Wiring Connections for Calibrating Auxiliary Output**



## Procedure

The procedure for calibrating the auxiliary output is listed in Table 9-4 Auxiliary Output Calibration Procedure. The numeric codes are also listed.

Make sure "LOCK" in the Tuning Set Up group is set to "NONE" (see *Subsection 4.5*).

**Table 9-4 Auxiliary Output Calibration Procedure  
(Numeric Code 50000)**

Step	Operation	Press	Result
1	Enter Calibration Mode	SET UP until you see	Upper Display = CAL ( - - - - ) Lower Display = AUXOUT (50000)
2	Calibrate 0%	FUNCTION  [▲] [▼]	You will see: Upper Display = A Value Lower Display = ZROVAL (50001)  until the desired 0% output is read on the milliammeter, use the values shown below depending on the action of your controller.
3	Calibrate 100%	FUNCTION  [▲] [▼]	To store the 0% value you will see: Upper Display = A Value Lower Display = SPNVAL (50002)  until the desired 100% output is read on the milliammeter.
4	Exit the Calibration Mode	FUNCTION DISPLAY	The controller stores the span value. To exit the calibration mode.

## 9.4 Three Position Step Output Calibration

### Three position step control

*Three Position Step Control Output Models without Motor Position Indication*

*(Model Numbers 230B-EE-XX-X0, DC230B-AA-XX-X0)*

This model only requires that the “Motor Time” be entered as shown in the calibration procedure.

### Equipment needed

None.

### Connections

Apply power and allow the controller to warm up 30 minutes before you calibrate.  
Leave all field wiring connected to the rear terminals.

### Procedure

The procedure for calibrating the 3 Position Step control output is listed in Table 9-5. The numeric codes are also listed. Make sure LOCKOUT in Tuning Set Up group is set to NONE. See *Section 3.5*.

**ATTENTION** These prompts *only* appear when “TPSC” is selected in the algorithm group function prompt.

**Table 9-5 3 Position Step Output Calibration Procedure  
(Numeric Code 40000)**

Step	Description	Press	Action
1	Enter Calibration Mode	SET UP	Until you see  Upper Display = <b>CAL ( - - - - )</b> Lower Display = <b>TPSC (40000)</b>
2	Set Motor Traverse Time  NOTE: This is the time it takes the motor to travel from 0 to 100%.	FUNCTION	Until you see  Upper Display = a value Lower Display = <b>MTR TI (40001)</b>
		[▲] [▼]	until the proper motor stroke time is reached (see the motor specs or measure the time)  Range of setting = 5 to 1800 Seconds
3	Exit the Calibration Mode	FUNCTION	The controller will store the 100% value.
		DISPLAY	To exit the calibration mode.
		Or	
		SET UP	

# 10 Troubleshooting/Service

## 10.1 Overview

### Introduction

Instrument performance can be adversely affected by installation and application problems as well as by hardware problems. We recommend that you investigate the problems in the following order:

- installation related problems
- application related problems
- hardware and software related problems

and use the information presented in this section to solve them.

### What's in this section?

The following topics are covered in this section.

TOPIC		See Page
10.1	Overview	115
10.2	Troubleshooting Aids <ul style="list-style-type: none"> <li>• Overall Error Messages</li> <li>• Controller Failure Symptoms</li> <li>• Customer Support</li> <li>• Determining the Software Version Number</li> </ul>	116
10.3	Power-up Tests	118
10.4	Status Tests	118
10.5	Background Tests	119
10.6	Controller Failure Symptoms	121
10.7	Troubleshooting Procedures <ul style="list-style-type: none"> <li>• Power Failure</li> <li>• Current Proportional Output Failure</li> <li>• Time Proportional Output Failure</li> <li>• Time/Current - Current/Time Proportional Output Failure</li> <li>• Alarm Relay Output Failure</li> <li>• Keyboard Failure</li> </ul>	122

## Installation related problems

Read the Installation section in this manual to make sure the UDC 2300 has been properly installed. The installation section provides information on protection against electrical noise, connecting external equipment to the controller, and shielding and routing external wiring.

**ATTENTION** System noise induced into the controller will result in diagnostic error messages recurring. If the diagnostic error messages can be cleared, it indicates a “soft” failure and is probably noise related.

If system noise is suspected, completely isolate the controller from all field wiring. Use calibration sources to simulate PV and check all controller functions; i.e. Gain, Rate, Reset, Output, Alarms, etc.

## Application related problems

Review the application of the controller; then, if necessary, direct your questions to the local sales office.

## Hardware and software related problems

Use the troubleshooting error message prompts and controller failure symptoms to identify typical failures which may occur in the controller. Follow the troubleshooting procedures to correct them.

## 10.2 Troubleshooting Aids

### Overall error messages

An error message can occur

- at power-up, see Subsection 10.3
- when the Status Tests are requested. See Subsection 10.4
- during continuous background tests while in normal operation. See Subsection 10.5

### Controller failure symptoms

Other failures may occur that deal with the Power, Output, or Alarms. Refer to the controller failure symptom in Table 10-4 to determine what is wrong and the troubleshooting procedures to use to correct the problem.

### Check installation

If a set of symptoms still persists, refer to *Section 2 - Installation* and ensure proper installation and proper use of the controller in the system.

## Customer support

If you cannot solve the problem using the troubleshooting procedures listed in this section, you can get **technical assistance** by dialing 1-800-423-9883 USA and Canada.

An engineer will discuss your problem with you. **Please have your complete model number, serial number, and Software version available.** The model and serial numbers can be found on the chassis nameplate. The software version can be viewed under Setup Group "Status." See Table 10-1

If it is determined that a hardware problem exists, a replacement controller or part will be shipped with instructions for returning the defective unit.

Do not return your controller without authorization from Honeywell's Technical Assistance Center or until the replacement has been received.

For a list of frequently asked questions and their answers, dial Honeywell's **Faxback** 24 hour Service:

1-888-423-9883 USA

Or check out Honeywell's **web site** at <http://support.totalplant.honeywell.com>.

## Determining the software version

Table 10-1 lists the procedure for identifying the software version number.

**Table 10-1 Procedure for Identifying the Software Version**

Step	Operation	Press	Result
1	Select STATUS Set Up Group	SET UP	Upper Display = <b>READ</b> Lower Display = <b>STATUS (1200)</b>
2	Read the software version	FUNCTION	You will see: Upper Display = Software version number  <b>A1xx Basic Controller and Indicator</b> <b>A2xx Limit Controller</b>  Lower Display = <b>VERSION (1201)</b>

Please give this number to the Customer Support person. It will indicate which version of UDC 2300 you have and help them determine a solution to your problem.

## 10.3 Power-up Tests

### What happens at power-up

When power is applied, the controller will run three diagnostic tests. After these tests are completed, "TEST DONE" is displayed.

### Test Failures

If one or more of these tests fail, the controller will go to the Failsafe Manual Mode, and FAILSF will flash in the lower display and a message indicating which test failed will appear in the lower display. Then, "DONE" will appear in the lower display.

### 3 position step test failures

For controller configured for 3 Position Step control with motor position indication and Auto-cal has never been done, a prompt CAL MTR will appear suggesting that the controller be calibrated. Refer to Subsection 9.4- Three Position Step Output Calibration.

## 10.4 Status Tests

### Introduction

When required, the results of these tests can be checked to determine the reason the controller has gone to Failsafe.

### How to check the status tests

The procedure in Table 10-2 tells you how to display the results of the status tests.

**Table 10-2 Procedure for Displaying the Status Test (Numeric Code 1200) Results**

Step	Operation	Press	Result
1	Select STATUS Set Up Group	SET UP	Upper Display = READ Lower Display = STATUS (1200)
2	Read the test results	FUNCTION	You will see:  Upper Display = NO ( 0 ) or YES ( 1 ) YES indicates a failure Lower Display = FAILSF ( 1202)
		FUNCTION	Upper Display = PASS ( 0 ) or FAIL ( 1 ) Lower Display = TEST (1203)

## 10.5 Background Tests

### Introduction

The UDC2300 performs ongoing background tests to verify data and memory integrity. If there is a malfunction, an error message will be displayed (blinking) in the lower display.

In the case of simultaneously malfunctions, the messages will appear in sequence in the lower display. Table 10-3 lists these background tests, the reason for their failure, and how to correct the problem.

**Table 10-3 Background Tests**

Lower Display	Reason for Failure	How to Correct the Problem
<b>EE FAIL</b>	Unable to write to non-volatile memory. Anytime you change a parameter and it is not accepted, you will see EE FAIL.	<ol style="list-style-type: none"> <li>1. Check the accuracy of the parameter and re-enter.</li> <li>2. Try to change something in configuration.</li> <li>3. Run through STATUS tests to re-write to EEPROM.</li> </ol>
<b>FAILSF</b>	This error message shows whenever the controller goes into a failsafe mode of operation. This will happen if: <ul style="list-style-type: none"> <li>• RAM test failed</li> <li>• Configuration test failed</li> <li>• Calibration test failed</li> <li>• Burnout configured for none and the input failed.</li> </ul>	<ol style="list-style-type: none"> <li>1. Run through STATUS check to determine the reason for the failure.</li> <li>2. Press the <b>[SET UP]</b> key until STATUS appears in the lower display.</li> <li>3. Press the <b>[FUNCTION]</b> key to see whether the tests pass or fail, then run through the STATUS codes a second time to see if the error cleared.</li> </ol>
<b>IN1FL</b>	Two consecutive failures of input 1 integration. i.e., cannot make analog to digital conversion. This will happen if: <ul style="list-style-type: none"> <li>• Upscale or Downscale burnout is selected</li> <li>• Input not configured correctly</li> </ul>	<ol style="list-style-type: none"> <li>1. Make sure the actuation is configured correctly. See <i>Section 4 - Configuration</i>.</li> <li>2. Make sure the input is correct.</li> <li>3. Check for gross over-ranging. Check S101 jumper position. See Figure 2-2 Jumper Placements</li> <li>4. Restore factory calibration. See <i>Section 8.8</i></li> </ol>
<b>IN2FL</b>	Two consecutive failures of input 2 integration. i.e., cannot make analog to digital conversion.	Same as IN1FL above.
<b>CNFERR</b>	<ul style="list-style-type: none"> <li>• PV low limit is &gt; PV high limit</li> <li>• SP low limit is &gt; SP high limit</li> <li>• Output low limit &gt; Output high limit</li> </ul>	<ol style="list-style-type: none"> <li>1. Check the configuration for each item and reconfigure if necessary.</li> </ol>

*continued*

Lower Display	Reason for Failure	How to Correct the Problem
IN1RNG	Input 1 out of range. The process input is outside the range limits.	<ol style="list-style-type: none"> <li>1. Make sure the range and actuation are configured properly.</li> <li>2. Check the input source.</li> <li>3. Restore the factory calibration. (See Section 8.8.)</li> <li>4. Field calibrate. See Section 8 - Input Calibration.</li> </ol>
IN2RNG	Input 2 out of range. The remote input is outside the range limits.	Same as IN1RNG above.
PV LIM	PV out of range. $PV = INP1 \times \text{RATIO1} + INP1 \text{ BIAS}$	<ol style="list-style-type: none"> <li>1. Make sure the input signal is correct.</li> <li>2. Make sure the Ratio and Bias settings are correct.</li> <li>3. Recheck the calibration. Use Bias of 0.0</li> </ol>
RV LIM	The result of the formula shown below is beyond the range of the remote variable. $RV = INP2 \times \text{RATIO} + \text{BIAS}$	<ol style="list-style-type: none"> <li>1. Make sure the input signal is correct.</li> <li>2. Make sure the Ratio2 and Bias2 settings are correct.</li> <li>3. Recheck the calibration. Use a Ratio2 of 1.0 and a Bias2 of 0.0.</li> </ol>
SEGERR	Setpoint Program start segment number is less than ending segment number.	<ol style="list-style-type: none"> <li>1. Check SP Program configuration, subsection 4.6 Set up Group SPPROG function prompts "STRSEG" and "ENDSEG".</li> </ol>



## 10.6 Controller Failure Symptoms

### Introduction

In addition to the error message prompts, there are failure symptoms that can be identified by noting how the controller displays and indicators are reacting.

### Symptoms

Compare your symptoms with those shown in Table 10-4.

**Table 10-4 Controller Failure Symptoms**

Upper Display	Lower Display	Indicators	Controller Output	Probable Cause	Trouble-shooting Procedure
Blank	Blank	Off	None	Power Failure	1
OK	Displayed Output disagrees with Controller Output	OK	Controller Output disagrees with Displayed Output	Current Proportional Output	2
OK		OK		Time Proportional Output	3
OK		OK		Current/Time Proportional Output	4
OK		OK			5
OK	OK	OK	External Alarm function does not operate properly	Malfunction in alarm output	6
Display does not function when a key is pressed				Keyboard Malfunction	7

### Other symptoms


If a set of symptoms or prompts other than the one you started with appears while troubleshooting, re-evaluate the symptoms. This may lead to a different troubleshooting procedure.

If the symptom still persists, refer to the installation section in this manual to ensure proper installation and proper use of the controller in your system.

## 10.7 Troubleshooting Procedures

### Introduction

The troubleshooting procedures are listed in numerical order as they appear in Table 10-4. Each procedure lists what to do if you have that particular failure and how to do it or where to find the data needed to accomplish the task.

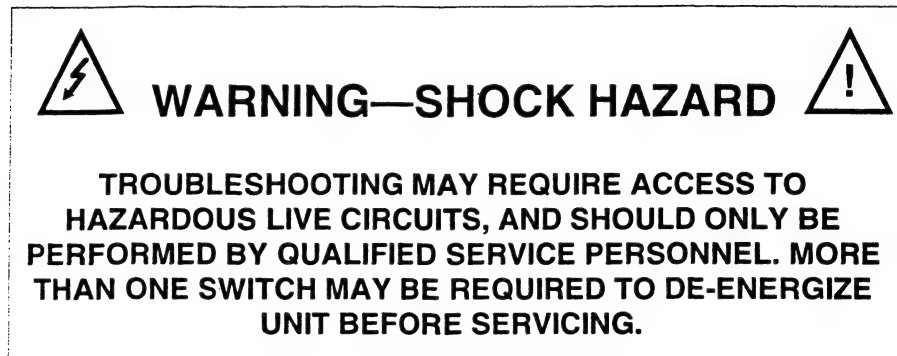

### Equipment needed

You will need the following equipment in order to troubleshoot the symptoms listed in the tables that follow:

- DC Milliammeter – mA<sub>dc</sub>
- Calibration sources – T/C, mV, Volt, etc.
- Voltmeter

## Procedure #1

Table 10-5 explains how to troubleshoot power failure symptoms.

**Table 10-5 Troubleshooting Power Failure Symptoms**

Step	What to do	How to do it
1	Check the AC line voltage.	Use a voltmeter to measure the AC voltage across terminals L1 and L2 on the rear terminal panel of the controller.  Check the earth ground connection.
2	Make sure the chassis plugs into the rear of the case properly.	Withdraw the chassis and visually inspect the controller board and the inside of the case.
3	Check the system for Brown-outs, heavy load switching, etc., and conformance to installation instructions.	Refer to <i>Section 2 - Installation</i> .
4	Change Main board.	Installation instructions supplied with new board.

## Procedure #2

Table 10-6 explains how to troubleshoot Current Proportional Output failure symptoms.

**Table 10-6 Troubleshooting Current Proportional Output Failure**

Step	What to do	How to do it
1	Make sure the controller is configured for Current output.	Make Algorithm Set Up group function prompt OUT ALG = CUR.  Refer to <i>Section 4 - Configuration</i> .
2	Check the field wiring.	Output impedance must be less than or equal to 750 ohms.
3	Check the output.	Put the controller into Manual mode and change the output from 0 to 100% (4-20 mA). Use a DC milliammeter at the rear terminals to verify the output.
4	Recalibrate the Current Proportional output.	Refer to <i>Section 9 - Output Calibration</i> for details.
5	Change Main board.	Installation instructions provided with new board.
6	Change Controller	

### Procedure #3

Table 10-7 explains how to troubleshoot Time Proportional Output failure.

**Table 10-7 Troubleshooting Time Proportional Output Failure**

Step	What to do	How to do it
1	Make sure the controller is configured for Time Proportional output.	Make Output Algorithm Set Up group function prompt OUTALG = RLY or RLYD.  Refer to <i>Section 4 - Configuration</i> .
2	Check the field wiring.	Make sure the NO or NC contact selection is correct.  Refer to <i>Section 2 - Installation</i> for details.
3	Check the output (control) relay jumper position.	Refer to <i>Section 2 – Installation</i> for relay jumper placement and relay contact information.
4	Check the output.	Put the controller into Manual mode. Vary the output above and below the present value. Observe OUT indicator on the operator interface. Contact should change state. 1E 0% open, 100% closed.
5	Check relay.	Change relay.
6	Change Main board.	Installation instructions supplied with the new board.

**Procedure #4**

Table 10-8 explains how to troubleshoot Current/Time or Time/Current Proportional Output failure.

**Table 10-8 Troubleshooting Current/Time or Time/Current Proportional Output Failure**

Step	What to do	How to do it
1	Make sure the controller is configured for Time/Current or Current/Time Proportional output.	Make Output Algorithm Set Up group function prompt OUT ALG = TCUR or CURT. Refer to <i>Section 4 – Configuration</i> .
2	Check the field wiring.	Make sure the NO or NC contact wiring selection is correct. Refer to <i>Section 2 - Installation</i> for details.
3	1. Check the output (control) relays jump position. 2. Check the relay output.	1. Refer to <i>Section 2 – Installation</i> for relay jumper placement and relay contact information. 2. Put the controller into Manual mode. Vary the output above and below the present value. Observe OT indicator on the operator interface.
4	Check the Current Proportional Output.	Put the controller into Manual mode and change the output from 0 to 100% (4-20 mA). Use a DC milliammeter at the rear terminals to verify the output.
5	Recalibrate the controller.	Refer to <i>Section 9 - Output Calibration</i> for details.
6	Change Main board.	Installation instructions supplied with new board.

## Procedure #5

Table 10-9 explains how to troubleshoot Alarm Relay Output failure.

**Table 10-9 Troubleshooting Alarm Relay Output Failure**

Step	What to do	How to do it
1	Check the alarm configuration data. If it is correct, check the field wiring.	Reconfigure if necessary. Refer to <i>Section 4 - Configuration</i> for details.
2	Check that the applicable alarm relay actuates properly depending on what you have set at prompt AxSxTYPE.  If it does, check the field wiring.	If the alarm type is set for PV, place the controller in manual mode. Vary the input to raise and lower the PV around the setpoint. Listen for a click from the relay as the PV moves in either direction and note that the proper ALM1 or ALM2 is lit.  EXAMPLE: If the alarm is set for MAN, put the controller into manual mode. The alarm light is ON. Put the controller into automatic mode and the alarm light is OFF.
3	Check the contacts.	Make sure the NO or NC contact wiring is correct.  Refer to <i>Section 2 - Installation</i> for relay jumper placement and relay contact information.
4	Change Main board.	Installation instructions supplied with new board.

## Procedure #6

Table 10-10 explains how to troubleshoot a Keyboard failure.

**Table 10-10 Troubleshooting a Keyboard Failure**

Step	What to do	How to do it
1	Make sure the keyboard is connected properly.	Withdraw the chassis from the case and visually inspect the connection.
2	Controller Keyboard or specific keys may be LOCKED OUT via the security code.	Use your four-digit security code number to change the lockout level. Refer to <i>Section 4 – Configuration</i> .  <b>ATTENTION</b> Using “1000” as a security code number will override the 4-digit code previously entered.
3	Replace the display/keyboard if any keys are not functioning.	Installation instructions supplied with new display/keyboard.






## 11 Parts List

### 11.1 Exploded View

#### Introduction

Figure 11-1 is an exploded view of the UDC2300 Controller. Each part is labeled with a key number. The part numbers are listed by key number in Table 11-1.

Parts not shown are listed in Table 11-2.

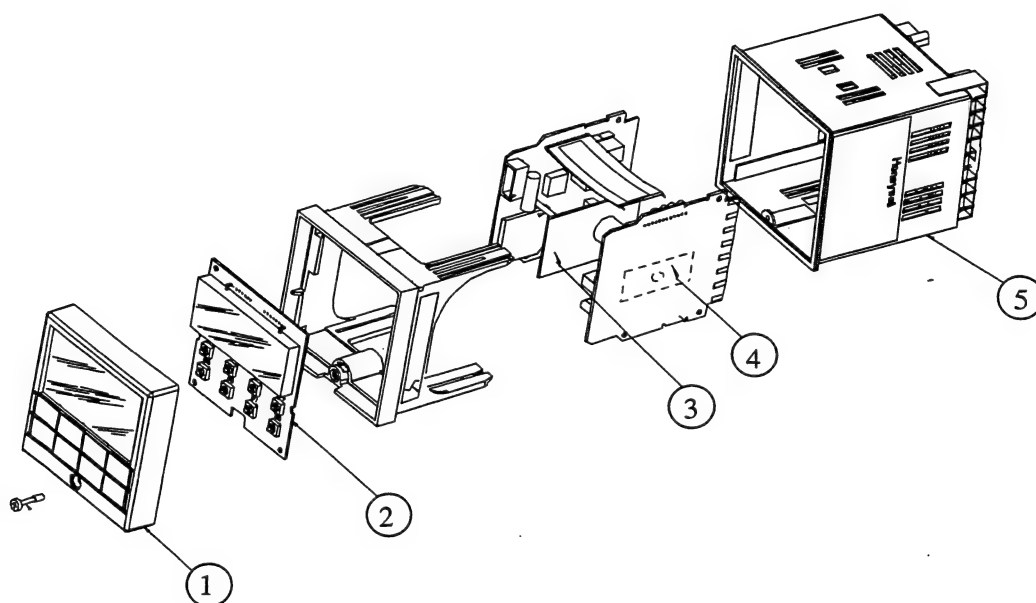

**Figure 11-1 UDC2300 Exploded View**

**Table 11-1 Parts Identification**

Key Number	Part Number	Description
1	30756667-503	Bezel Assembly (Gray)
2	51309766-501	Display/Keyboard
3	51309796-501	Current Output PWA
4	51309782-501 51309831-501	Auxiliary Output/Digital Input PWA RS-422/485 Communications PWA
5	51404896-501	Case Assembly (includes 30755050-001 Mounting Kit)

**11.1 Exploded View,** *continued***Table 11-2 Parts Not Shown**

<b>Part Number</b>	<b>Description</b>
30755223-003	DIN Adaptor (Gray)
30756683-001	NEMA 3 Gasket (Panel to Case)
30755050-001	Mounting Kit
30757215-001	NEMA 4 Adaptor Kit
30756679-501	Open Collector Output printed Wiring Jumper
30756764-002	Rear Terminal Cover Kit
30756018-001	SS Relay 10 Amp (external)
30756725-501	SS Relay 1 Amp (internal)
30754465-501	0-10 Volt Input resistor Assy (100K pair)
30754142-003	Terminal Strip Assy
30755306-501	Electro-mechanical Relay (5 Amp)

## 12 Function Parameter Reference Guide

### 12.1 Overview

#### Purpose of this section

This Reference Guide presents detailed reference data for each function parameter in the UDC 2300 Controller. The reference data is organized in **alphabetical** order by the Function Parameter identification label.

The presented data covers each Function Parameter's:

- Label,
- Name,
- Description,
- Definition of parameter selections or range of setting

#### Reader assumptions

It is assumed that you are familiar with the operation of the UDC 2300 controller, and that you have read the Configuration Section - Section 4

#### In this section

Refer to Table 12-1 for a listing of each function parameter and respective reference subsection.

Table 12-1 Function Parameter Look-up Table

Prompt	Section	Prompt	Section	Prompt	Section	Prompt	Section
0 PCT	12.2.1	DICOM	12.2.29	LSP'S	12.2.57	SGx TI	12.2.85
100 PCT	12.2.2	DIGIN	12.2.30	MANRST	12.2.58	SDMODE	12.2.86
4-20RG	12.2.3	DISPLY	12.2.31	MINRPM	12.2.59	SHD_SP	12.2.87
A TUNE	12.2.4	EMISS	12.2.32	OUTALG	12.2.60	SHDTIM	12.2.88
ACTION	12.2.5	ENDSEG	12.2.33	OUT HI	12.2.61	SOKDEV	12.2.89
ALARM1	12.2.6	EUHRDN	12.2.34	OUT Lo	12.2.62	SP HI	12.2.90
ALHYST	12.2.7	EUHRUP	12.2.35	PARITY	12.2.63	SP Lo	12.2.91
AT ERR	12.2.8	FAILSF	12.2.36	PB or GAIN	12.2.64	SPPROG	12.2.92
AUTOMA	12.2.9	FILTR1	12.2.37	PB 2 or GAIN 2	12.2.65	SPRAMP	12.2.93
AUXOUT	12.2.10	FILTR2	12.2.38	PBorGN	12.2.66	SPRATE	12.2.94
AxSxEV	12.2.11	FINLSP	12.2.39	PERIOD	12.2.67	SP SEL	12.2.95
AxSxHL	12.2.12	FREQ	12.2.40	PG END	12.2.68	SP TRK	12.2.96
AxSxTY	12.2.13	FSMODE	12.2.41	PIDSET	12.2.69	START	12.2.97
AxSxVA	12.2.14	FUZZY	12.2.42	PIDSET	12.2.69	STATE	12.2.98
BAUD	12.2.15	HYST	12.2.43	PWROUT	12.2.70	STRSEG	12.2.99
BIAS 1	12.2.16	I MIN or I RPM	12.2.44	PWR UP	12.2.71	SW VAL	12.2.100
BIAS 2	12.2.17	I2 MIN or I2 RPM	12.2.45	RATE T	12.2.72	TI MIN	12.2.101
BLOCK	12.2.18	INCRMT	12.2.46	RATE2T	12.2.73	TIMER	12.2.102
BRNOUT	12.2.19	IN1 HI	12.2.47	RATIO1	12.2.74	ToBEGN	12.2.103
ComADD	12.2.20	IN1 LO	12.2.48	RATIO2	12.2.75	TUNE	12.2.104
ComSTA	12.2.21	IN1TYP	12.2.49	RECYCL	12.2.76	TX DLY	12.2.105
CSP BI	12.2.22	IN2 HI	12.2.50	RLY TY	12.2.77	UNITS	12.2.106
CTRALG	12.2.23	IN2 LO	12.2.51	RESET	12.2.78	UNITS	12.2.107
CSRATO	12.2.24	IN2TYP	12.2.52	RN HLD	12.2.79	XMITR1	12.2.108
CYC T1 or CT1 X3	12.2.25	L DISP	12.2.53	RPUNIT	12.2.80	XMITR2	12.2.109
CYC2T2 or CT2 X3	12.2.26	LNGUAG	12.2.54	RSPSRC	12.2.81		
D BAND	12.2.27	LOCK	12.2.55	SECUR	12.2.82		
DECIMAL	12.2.28	LOOPBACK	12.2.56	SGx RP	12.2.83		
				SGx SP	12.2.84		

## 12.2 Function Prompts

### Introduction

The reference data is organized in **alphabetical** order by the Function Parameter identification label and referenced by a subsection number.

#### 12.2.1 0 PCT (AUXILIARY OUTPUT LOW SCALING FACTOR)

This prompt is part of the *Options Set Up* Group.

This selection uses a value in engineering units to represent AUXOUT except output which is in percent (%).

**Range of setting:** within the range of the selected variable to represent 4 mA.

#### 12.2.2 100 PCT (AUXILIARY OUTPUT HIGH SCALING FACTOR)

This prompt is part of the *Options Set Up* Group.

This selection uses a value in engineering units to represent AUXOUT except output which is in percent (%).

**Range of setting:** within the range of the selected variable to represent 20 mA.

#### 12.2.3 4-20 RG (CURRENT DUPLEX RANGE)

This prompt is part of the *Algorithm Set up* group.

Used with Output Algorithm selections CURD, CURT, or TCUR.

##### *Selections*

##### *Definitions*

**50 CURRENT DUPLEX RANGE (SPLIT)**—This setting should be used for Relay/Current and Current/Relay Duplex Outputs. It can also be used for Current Duplex when an Auxiliary Output board is present. This enables the normal control current output to provide heat control and the auxiliary current output to provide cool control. To enable this:

- AUX OUT in the Options Set Up group must be selected for Out.
- The Auxiliary Current Output is scaled as desired for 0-50% controller output.
- Deadband for this configuration only applies to the Current Output. The Auxiliary Output must have the Deadband scaled in.

FOR EXAMPLE: If a 2% Deadband is desired, then enter **2.0** for the Deadband selection in the Control Algorithm group. This will apply Deadband to the Current Output. In the Options group, set the Auxiliary Output 4mA VAL selection to **49.0** and the 20mA VAL selection to **0.0**.

**100 CURRENT DUPLEX RANGE (FULL)** enables the Current Output to provide both heat and cool functions for control over 0-100% of the controller output. The PID heat parameters apply when the output is greater than 50% and the PID cool parameters apply when the output is less than 50%. The second current output is not required for this type of duplex operation.

**12.2.4 A TUNE** (AUTOTUNE KEY LOCKOUT)

This prompt is part of the *Tuning* Set up group.

This selection allows you to disable the **AUTOTUNE** key. "*LOCK*" must be set to "*None*".

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Disable the <b>AUTOTUNE</b> key
<b>ENAB</b>	Enables the <b>AUTOTUNE</b> key

---

**12.2.5 ACTION** (CONTROL OUTPUT DIRECTION)

This prompt is part of the *Control* Set up group.

This selection allows you to select the direction you want the controller output to go when the process variable increases.

<i>Selections</i>	<i>Definitions</i>
<b>DIR</b>	<b>DIRECT ACTING CONTROL</b> —The controller's output <i>increases</i> as the process variable increases.
<b>REV</b>	<b>REVERSE ACTING CONTROL</b> —The controller's output <i>decreases</i> as the process variable increases.

---

**12.2.6 ALARM1** (LATCHING ALARM FOR OUTPUT)

This prompt is part of the *Alarms* Set up group.

Each alarm output can be configured to be Latching or Non-latching.

---

**ATTENTION**

When configured for latching, the alarm will stay on, after the alarm condition ends, until the **RUN/HOLD** key is pressed.

---

<i>Selections</i>	<i>Definitions</i>
<b>NO L</b>	Non-Latching
<b>LACH</b>	Latching

---

**12.2.7 ALHYST** (ALARM HYSTERESIS)

This prompt is part of the *Alarms* Set up group.

A single adjustable hysteresis is provided on alarms such that when the alarm is OFF it activates at exactly the alarm setpoint; when the alarm is ON, it will not deactivate until the variable is 0.0% to 100% away from the alarm setpoint.

Configure the hysteresis of the alarms based on INPUT signals as a % of input range span.

Configure the hysteresis of the alarm based on OUTPUT signals as a % of the full scale output range.

**Range of Setting:** 0.0 to 100.0% of span or full output as appropriate

---

**12.2.8 AT ERR** (ACCUTUNE ERROR CODES)

This prompt is part of the *ATUNE* Set up group.

ACCUTUNE ERROR STATUS—When an error is detected in the Accutune process, an error prompt will appear.

***Selections******Definitions***

<b>RUN</b>	<b>RUNNING</b> —An Accutune process is still active checking process gain, even though “TUNE” is not displayed. It does not affect keyboard operation.
<b>NONE</b>	<b>NONE</b> —No errors occurred during last Accutune procedure.
<b>IDFL</b>	<b>IDENTIFICATION PROCESS FAILED</b> —An illegal value for Gain, Rate, or Reset was calculated.
<b>ABRT</b>	<b>CURRENT ACCUTUNE PROCESS ABORTED</b> —Caused by one of the following conditions: <ul style="list-style-type: none"><li>• changing to manual mode</li><li>• digital input detected</li><li>• in heat region of output but a cool output is calculated, or vice versa.</li></ul>

---

**12.2.9 AUTOMA** (AUTO/MANUAL KEY LOCKOUT)

This prompt is part of the *Tuning* Set up group.

This selection allows you to disable/enable the **AUTO/MANUAL** key.

*“LOCK” must be set to “None” for the prompt to be displayed.*

***Selections******Definitions***

<b>DIS</b>	Disable the <b>AUTO/MANUAL</b> key
<b>ENAB</b>	Enables the <b>AUTO/MANUAL</b> key

---

**12.2.10 AUX OUT** (AUXILIARY OUTPUT)

This prompt is part of the *Options* Set Up Group.

This selection provides an MA output representing one of several control parameters. The display for auxiliary output viewing will be in engineering units for all but output. Output will displayed in percent.

***Selections******Definitions***

<b>DIS</b>	No Auxiliary Output
<b>IN 1</b>	This represents the configured range of Input 1 For example: Type J Thermocouple (0 to 1600°F) 0°F display = 0% output 1600°F display = 100% output
<b>IN 2</b>	This represents the configured range of Input 2
<b>PROC</b>	Process Variable
<b>DEV</b>	Deviation (Process Variable minus Setpoint) – Represents – 100 to +100% of the selected PV span in engineering units. For Example: Type T Thermocouple PV range = -300 to +700°F PV span = 1000°F Deviation Range = -1000 to +1000°F If PV = 500°F and SP = 650°F then Deviation Display= -150°F Auxiliary Output = 42.5%  When Deviation is selected, only one operating parameter will be entered. This value represents the deviation level that will produce 20 mA (100%) output Zero deviation will produce a center scale (12 mA or 50%) output. A negative deviation equal in magnitude to the auxiliary output high value will produce a low end (4 mA or 0%) output.
<b>OUTPUT</b>	OUTPUT – represents the displayed controller output in percent (%). Cannot be used with 3 Position Step Control.
<b>SP</b>	SETPOINT – represents the value of the setpoint in units of PV.
<b>LSP1</b>	Local Setpoint One – Auxiliary output represents local setpoint one regardless of active setpoint.



**12.2.11    AxSxEV** (ALARMx SETPOINTx EVENT - X = 1 OR 2)

This prompt is part of the *Alarms* Set up group.

Select whether you want the alarm type chosen in prompt AxSxTY to alarm the beginning or end of a segment in setpoint Ramp/Soak programming.

---

**ATTENTION**

Select if Setpoint Programming is *enabled* and if the Alarm Type is configured for Event On/Off. Alarms configured for events will not operate on Setpoint Program segments of zero length.

---

***Selections******Definitions***

**BEGN**    Beginning of Segment

**END**     End of Segment

---

**12.2.12    AxSxHL** (ALARMx SETPOINTx STATE - X = 1 OR 2)

This prompt is part of the *Alarms* Set up group.

Select whether you want the alarm type chosen in prompt AxSxTY to alarm High or Low

---

**ATTENTION**

Select if Setpoint Programming is *disabled* or if the Alarm Type is not configured for Event On/Off.

---

***Selections******Definitions***

**HIGH**    High Alarm

**LOW**     Low Alarm

---

**12.2.13    AxSxTY**    (ALARM<sub>x</sub> SETPOINT<sub>x</sub> TYPE - X = 1 OR 2)

This prompt is part of the *Alarms* Set up group.

Select what you want Setpoint *x* of Alarm *x* to represent. It can represent the Process Variable, Deviation, Input 1, Input 2, Output, Remote Setpoint, PV rate of Change, Loop Break, or Failsafe, and if you have a model with communications, you can configure the controller to alarm on SHED. If you have setpoint programming, you can alarm when a segment goes ON or OFF.

***Selections******Definitions***

<b>NONE</b>	Disables the alarms.
<b>IN 1</b>	Input 1
<b>IN 2</b>	Input 2
<b>PV</b>	Process Variable
<b>DE</b>	Deviation
<b>OUT</b>	Output (note 1)
<b>SHED</b>	Shed from Communications
<b>EVON</b>	Event ON (Setpoint Programmer)
<b>EVOF</b>	Event OFF (Setpoint Programmer)
<b>MAN</b>	Alarm on Manual mode (note 2)
<b>RSP</b>	Remote Setpoint
<b>FSAF</b>	Failsafe
<b>PVRT</b>	PV Rate of Change
<b>DI</b>	Alarm on Digital Input
<b>DE II</b>	Deviation Alarm based on deviation from 2 <sup>nd</sup> Local Setpoint or Remote SP regardless of which SP is active.
<b>BRAK</b>	Loop Break (note 3)

---

**NOTE 1** *When the controller is configured for Three Position Step Control, alarms set for Output will not function.*

**NOTE 2** *Not available if Timer is enabled because Alarm 1 is dedicated to Timer output.*

**NOTE 3** *When enabled, the control output is checked for minimum and maximum limits. When this occurs, a timer begins and, if the output has not caused the PV to be corrected by a pre-determined amount and time, the alarm activates. For loop break alarms, the timer value may be changed only for controllers configured for On-Off control.*

---

**12.2.14    AxSxVA**    (ALARMx SETPOINTx VALUE - X = 1 OR 2)

This prompt is part of the *Alarms* Set up group.

This is the value at which you want the alarm type chosen in Prompt “AxSxTY” to actuate. The value depends on what the alarm setpoint has been configured to represent.

For **SP Programming**, the value is the segment number for which the event applies.

For **PV Rate of Change**, the value is the amount of PV rate of change in one minute in engineering units.

This prompt does not appear for “Alarm on Manual” type alarm (i.e., AxSxTY is set to MAN).

*Range of Setting:*        *within the range of the selected parameter or  
of the PV Span for Deviation configurations.*

---

**12.2.15    BAUD**    (BAUD RATE)

This prompt is part of the *Communications* Set up group.

**BAUD RATE** is the transmission speed in bits per second.

<i>Selections</i>	<i>Definitions</i>
<b>2400</b>	2400 BAUD
<b>4800</b>	4800 BAUD
<b>9600</b>	9600 BAUD
<b>19200</b>	19200 BAUD

---

**12.2.16    BIAS 1**    (INPUT 1 BIAS)

This prompt is part of the *Input 1* Set up group.

Bias is used to compensate the input for drift of an input value due to deterioration of a sensor, or some other cause. Select the bias value you want on Input 1.

*Range of Setting:* -999 to 9999

---

**12.2.17    BIAS 2**    (INPUT 2 BIAS)

This prompt is part of the *Input2* Set up group.

Bias is used to compensate the input for drift of an input value due to deterioration of a sensor, or some other cause. Select the bias value you want on Input 2.

*Range of Setting:* -999 to 9999

---

**12.2.18 BLOCK** (ALARM BLOCKING)

This prompt is part of the *Alarms Set up* group.

Prevent nuisance alarms when the controller is first powered up. The alarm is suppressed until the parameter gets to the non-alarm limit or band. Alarm blocking affects both alarm setpoints.

---

**ATTENTION**

When enabled on power up or initial enabling via configuration, the alarm will not activate unless it has not been in alarm for one cycle (167 ms).

---

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Disable Blocking
<b>BK1</b>	Blocks Alarm 1 only
<b>BK2</b>	Blocks Alarm 2 only
<b>BK12</b>	Blocks Alarm 1 and Alarm 2

---

**12.2.19 BRNOUT** (BURNOUT PROTECTION - SENSOR BREAK)

This prompt is part of the *Input 1 Set up* group.

BURNOUT PROTECTION (SENSOR BREAK) provides most input types with upscale or downscale protection if the input fails. 1-5V, 0-10V, or 4-20 mA inputs require no burnout or NONE selection.

<i>Selections</i>	<i>Definitions</i>
<b>NONE</b>	<b>NO BURNOUT</b> —Pre-configured Failsafe output applied if failed input is detected (does not apply for an input out of range). Error message IN 1 FAIL is flashed on the lower display intermittently every 10 seconds.
<b>UP</b>	<b>UPSCALE BURNOUT</b> —will make the PV signal increase to full scale, +10%, when a sensor fails, and flash IN 1 FAIL on the lower display intermittently every 10 seconds. The controller remains in Automatic control mode and adjusts the controller output signal in response to the full scale PV signal developed by the Burnout circuitry.
<b>DOWN</b>	<b>DOWNSCALE BURNOUT</b> —will make the PV signal decrease to the lower range value, -10%, when a sensor fails, and flash INPUT 1 FAIL on the lower display intermittently every 10 seconds. The controller remains in Automatic control mode and adjusts the controller output signal in response to the zero percent PV signal developed by the Burnout circuitry.
<b>NOFS</b>	<b>NO FAILSAFE</b> —This selection does not provide input failure detection and should only be used when a absolute accuracy is the most important criteria. (For this selection, no burnout signal is sent to the sensor.)

---

**12.2.20 ComADD** (STATION ADDRESS)

This prompt is part of the *Communications* Set up group.

This is a number that is assigned to a controller that is to be used with the communications option. This number will be its address.

*Range of Setting: 1 to 99*

**12.2.21 ComSTA** (COMMUNICATIONS STATE)

This prompt is part of the *Communications* Set up group.

This prompt lets you select the type of communications protocol.

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Disable
<b>R422</b>	RS-422/485 ASCII - Allows RS422/485 ASCII communication prompts.
<b>MODB</b>	MODBUS - Allows Modbus RTU communication prompts

**12.2.22 CSP BI** (COMPUTER SETPOINT BIAS)

This prompt is part of the *Communications* Set up group.

Computer setpoint bias

*Range of Setting: -999 to 9999 in Engineering Units*

**12.2.23 CTRALG** (CONTROL ALGORITHM)

This prompt is part of the *Algorithm* Set up group.

This prompt lets you select the type of control that is best for your process.

<i>Selections</i>	<i>Definitions</i>
<b>ONOF</b>	<p><b>ON/OFF</b> is the simplest control type. The output can be either ON (100%) or OFF (0%). The Process Variable (PV) is compared with the setpoint (SP) to determine the sign of the error (<math>ERROR = PV - SP</math>). The ON/OFF algorithm operates on the sign of the error signal.</p> <p>In Direct Acting Control, when the error signal is positive, the output is 100%; and when the error signal is negative, the output is 0%. If the control action is reverse, the opposite is true. An adjustable overlap (Hysteresis Band) is provided between the on and off states.</p> <p>Other prompts affected: "HYST"</p> <p><b>DUPLEX ON/OFF</b> is an extension of this algorithm when the output is configured for Duplex. It allows the operation of a second ON/OFF output. There is a deadband between the operating ranges of the two inputs and an</p>

adjustable overlap (hysteresis) of the on and off states of each output. Both Deadband and Hysteresis are separately adjustable. With no relay action the controller will read 50%.

Other prompts affected: "HYST" and "D BAND"

#### **PIDA**

PID A is normally used for three-mode control. This means that the output can be adjusted somewhere between 100% and 0%. It applies all three control actions—Proportional (P), Integral (I), and Derivative (D)—to the error signal.

*Proportional (Gain)*—Regulates the controller's output in proportion to the error signal (the difference between Process Variable and Setpoint).

*Integral (Reset)*—Regulates the controller's output to the size of the error and the time the error has existed. (The amount of corrective action depends on the value of proportional Gain.)

*Derivative (Rate)*—Regulates the controller's output in proportion to the rate of change of the error. (The amount of corrective action depends on the value of proportional Gain.)

**NOTE:** PID A should not be used for Proportional only action (that is, no integral (reset) action). Instead, use PD+MR with rate set to 0.

#### **PIDB**

Unlike the PID A equation, the controller gives only an integral response to a setpoint change, with no effect on the output due to the gain or rate action, and it gives full response to PV changes. Otherwise controller action is as described for the PID A equation. See note on PID A

#### **PDMR**

**PD WITH MANUAL RESET** is used whenever integral action is not wanted for automatic control. The equation is computed with no integral contribution. The MANUAL RESET, which is operator adjustable, is then added to the present output to form the controller output. Switching between manual and automatic mode will not be bumpless.

If you select PD with Manual Reset you can also configure the following variations

- PD (Two Mode) control,
- P (Single Mode) control.

Set Rate (D) to 0.

Other prompts affected: "MANRST" in the *TUNING* Set Up Group.

#### **TPSC**

The **THREE POSITION STEP** algorithm allows the control of a valve (or other actuator), with an electric motor driven by two controller relay outputs; one to move the motor upscale, the other downscale without a feedback slidewire linked to the motor shaft. The deadband and hysteresis are adjustable in the same manner as the relay duplex output algorithm.

The Three Position Step Control algorithm provides an output display (OUT) which is an estimated motor position since the motor is not using any feedback. Although this output indication is only an approximation, it is

“corrected” each time the controller drives the motor to one of its stops (0% or 100%). It avoids all the control problems associated with the feedback slidewire (wear, dirt, noise). When operating in this algorithm, the estimated “OUT” display is shown to the nearest percent (that is, no decimal).

Other prompts affected: D BAND

---

#### 12.2.24    **CSRATO**    (COMPUTER SETPOINT RATIO)

This prompt is part of the *Communications* Set up group.

**RATIO**—Computer setpoint ratio

*Range of Setting:* -20.0 to 20.0

---

#### 12.2.25    **CYC T1 or CT1 X3**    (CYCLE TIME - HEAT)

This prompt is part of the *Tuning* Set up group.

CYCLE TIME (HEAT) determines the length of one time proportional output relay cycle. Defined as “HEAT” Cycle time for Heat/Cool applications.

CYC T1—Electromechanical relays (seconds)

CTIX3—Solid state relays (1/3 seconds)

Cycle times are in either second or 1/3 second increments depending upon the configuration of RLY TY in the Output Algorithm Set Up group.

*Range of Setting:* 1 to 120

---

##### ATTENTION

If 1/3 second increments are used, 1 = .33 seconds and 120 = 40 seconds.

---

**12.2.26 CYC2T2 or CT2 X3** (CYCLE TIME2 - COOL)

This prompt is part of the *Tuning* Set up group.

**CYCLE TIME2 (COOL)** determines the length of one time proportional output relay cycle. Defined as "COOL" Cycle time for Heat/Cool applications.

**CYC2TI**—Electromechanical relays (seconds)

**CT2X3**—Solid state relays (1/3 seconds)

Cycle times are in either second or 1/3 second increments depending upon the configuration of RLY TY in the Output Algorithm Set Up group.

*Range of Setting: 1 to 120*

---

**ATTENTION**

If 1/3 second increments are used, 1 = .33 seconds and 120 = 40 seconds.

---

---

**12.2.27 DBAND** (DEADBAND)

This prompt is part of the *Control* Set up group.

DEADBAND is an adjustable gap between the operating ranges of output 1 and output 2 in which neither output operates (positive value) or both outputs operate (negative value). It is the difference between the nominal trip points of relays 1 and 2.

Shows when only Time Duplex or Three Position Step is selected.

*Range of Setting:   -5.0 to 25.0% (Time Duplex)  
                          0.5 to 5.0 % (Three Position Step)*

---

**12.2.28 DECMAL** (DECIMAL POINT LOCATION)

This prompt is part of the *Input 1* Set up group.

This selection determines where the decimal point appears in the display.

<i>Selections</i>	<i>Definitions</i>
<b>8888</b>	None
<b>888.8</b>	One Place
<b>88.88</b>	Two Places (range is only $\pm 99.99$ )

---



### 12.2.29 DI COM (DIGITAL INPUT COMBINATIONS)

This prompt is part of the *Options* Set Up Group

There are 5 selection available for combination with any digital input selection.

<i><b>Selections</b></i>	<i><b>Definitions</b></i>
<b>DIS</b>	DISABLE-Disables combination function.
<b>+PD2</b>	Any Digital Input Selection PLUS PID2-Contact closure selects PID Set 2.
<b>+DIR</b>	Any Digital Input Selection PLUS DIRECT ACTION – Contact closure selects direct controller action.
<b>+SP2</b>	Any Digital Input Selection PLUS SETPOINT 2 – Contact closure puts the controller into setpoint 2.
<b>+SP1</b>	Any Digital Input Selection PLUS SETPOINT 1 – Contact closure puts the controller into setpoint 1.
<b>+RUN</b>	Any Digital Input Selection PLUS RUN SETPOINT PROGRAM/RAMP – Contact closure starts SP Program/Ramp if enabled.

### 12.2.30 DIG IN (DIGITAL INPUT)

This prompt is part of the *Options* Set Up Group

This selection allows remote selection of various parameters.

<i><b>Selections</b></i>	<i><b>Definitions</b></i>
<b>NONE</b>	NO DIGITAL INPUT SELECTIONS
<b>MAN</b>	TO MANUAL – Contact closure puts the affected loop into manual mode. Contact open returns controller to former mode.
<b>LSP</b>	TO LOCAL SETPOINT – When a remote setpoint is configured, contact closure puts the controller into local setpoint 1. When contact opens, the controller returns to former operation – local or remote setpoint – unless <b>SETPOINT SELECT</b> key is pressed while digital input is active. If this happens, the controller will stay in the local setpoint mode when contact opens.
<b>SP2</b>	TO LOCAL SETPOINT TWO - Contact closure puts the controller into local setpoint 2.
<b>DIR</b>	TO DIRECT ACTION - Contact closure selects direct controller action.
<b>HOLD</b>	TO HOLD – Contact closure suspends Setpoint Program or Setpoint Ramp. When contact reopens, the controller starts from the Hold point of the Ramp/Program unless the Ramp/Program was not previously started via the <b>RUN/HOLD</b> key.

This selection applies to either loop.

<b>PID2</b>	TO PID2 - Contact closure selects PID Set 2.
<b>RUN</b>	RUN – Contact closure starts a stopped SP Ramp or Program. Upper left characters blinks "R". Reopening the contact puts controller in HOLD mode.
<b>BEGN</b>	EXTERNAL SP PROGRAM RESET – Contact closure resets SP Program back to the beginning of the first segment in the program and places the program in HOLD mode. Program cycle number is not affected. Reopening switch has not effect.  This selection applies to either loop.  <b>ATTENTION</b> Once the last segment of the setpoint program has timed out, the controller enters the mode of action specified in the configuration data and the program cannot be reset to the beginning of the first segment by digital input closure.
<b>NO_I</b>	INHIBIT INTEGRAL (RESET) – Contact closure disables PID Integral (Reset) action.
<b>MANFS</b>	MANUAL FAILSAFE OUTPUT – Controller goes to Manual mode, output goes to the Failsafe value.  <b>ATTENTION</b> This will cause a bump in the output when switching from Automatic to Manual. The switch back from Manual to Automatic is bumpless. When the switch is closed, the output can be adjusted from the keyboard after pressing the <b>MANUAL/AUTO</b> key to the put the controller in the Manual mode.
<b>LOCK</b>	KEYBOARD LOCKOUT – Contact closure disables all keys. Lower display shows LOCKED if a key is pressed.
<b>TIMR</b>	TIMER – Contact closure starts timer, if enabled. Reopening the switch has no effect.
<b>TUNE</b>	INITIATE LIMIT CYCLE TUNING – Contact closure starts the tuning process. The lower display shows TUNE ON. Opening the contact has no effect.
<b>INIT</b>	SETPOINT INITIALIZATION – Contact closure forces the setpoint to the current PV value. Opening the contact has no effect.
<b>RSP</b>	TO REMOTE SETPOINT – Contact closure selects the Remote setpoint.
<b>MNLT</b>	MANUAL LATCHING – Contact closure transition forces the loop to Manual mode. Opening the switch has no effect. If the <b>MANUAL/AUTO</b> key is pressed while the switch is closed, the loop will return to Automatic mode.

---

**12.2.31    DISPLAY** (SINGLE DISPLAY DEFAULT)

This prompt is part of the *Input 1* Set Up Group on single display models.

Pressing the **DISPLAY** key will cycle through all applicable values. One minute after the last press of the display key, the display will revert to the display configured here.

*Selections**Definitions*

<b>SP</b>	Active Setpoint
<b>PRY</b>	Process Variable with lower display prompt.
<b>PRn</b>	Process Variable with <b>no</b> lower display prompt.

---

**12.2.32    EMISS** (EMISSIVITY)

This prompt is part of the *Input 1* Set up group.

**EMISSIVITY** is a correction factor applied to the Radiamatic input signal that is the ratio of the actual energy emitted from the target to the energy which would be emitted if the target were a perfect radiator. Available only for “Radiamatic” inputs.

*Range of Setting: 0.01 to 1.00*

---

**12.2.33    ENDSEG** (END SEGMENT)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

The end segment number designates the number of the last segment, it must be a soak segment (even number).

*Range of Setting: 2 to 12*

---

**12.2.34    EUHRDN** (RATE DOWN VALUE)

This prompt is part of the *Setpoint Rate* Set up group.

When making a setpoint change, this is the rate at which the controller will change from the original setpoint down to the new one. The ramping (current) setpoint can be viewed as SPn in the lower display.

Entering a 0 will imply an immediate change in Setpoint (i.e., no rate applies).

*Range of Setting: 0 to 9999 in Engineering Units per Hour*

---

**12.2.35    EUHRUP** (RATE UP VALUE)

This prompt is part of the *Setpoint Rate* Set up group.

When making a setpoint change, this is the rate at which the controller will change from the original setpoint up to the new one. The ramping (current) setpoint can be viewed as SPn in the lower display.

Entering a 0 will imply an immediate change in Setpoint (i.e., no rate applies).

*Range of Setting: 0 to 9999 in Engineering Units per Hour*

---

**12.2.36 FAILSF** (FAILSAFE OUTPUT VALUE)

This prompt is part of the *Control Set up* group.

The value used here will also be the output level when Input 1 fails for all inputs except T/C, or when NO BURNOUT is configured and input 1 fails for T/C Inputs.

**Range of Setting:** 0 to 100%

**For 3 Position Step**

100 - Motor position set to 100% output position (open)

0 - Motor position set to 0% output position (closed)

---

**12.2.37 FILTR1** (INPUT 1 FILTER)

This prompt is part of the *Input 1 Set up* group.

A software digital filter is provided for input 1 to smooth the input signal. You can configure the first order lag time constant from 1 to 120 seconds. If you do not want filtering, enter 0.

**Range of Setting:** 1 to 120

0 = No Filter

---

**12.2.38 FILTR2** (INPUT 2 FILTER)

This prompt is part of the *Input 2 Set up* group.

A software digital filter is provided for input 2 to smooth the input signal. You can configure the first order lag time constant from 1 to 120 seconds. If you do not want filtering, enter 0.

**Range of Setting:** 1 to 120

0 = No Filter

---

**12.2.39 FINLSP** (SINGLE SETPOINT RAMP FINAL SETPOINT)

This prompt is part of the *Setpoint Ramp/Program Set up* group.

Enter the value desired for the final setpoint. The controller will operate at the setpoint set here when ramp is ended.

---

**ATTENTION**

If the ramp is on HOLD, the held setpoint can be changed by the increment or decrement keys. However, the ramp time remaining and original ramp rate is not changed. Therefore, when returning to RUN mode, the setpoint will ramp at the same rate as previous to the local setpoint change and will stop if the final setpoint is reached before the time expires. If the time expires before the final setpoint is reached, it will jump to the final setpoint.

---

**Range of Setting:** within the setpoint limits

---

**12.2.40    FREQ**      (POWER LINE FREQUENCY)

This prompt is part of the *Input 1* Set up group.

At what power line frequency are you going to operate?

<i><b>Selections</b></i>	<i><b>Definitions</b></i>
--------------------------	---------------------------

<b>60</b>	60 Hertz
-----------	----------

<b>50</b>	50 Hertz
-----------	----------

---

**12.2.41    FSMODE** (FAILSAFE MODE)

This prompt is part of the *Control* Set Up group.

This selection determines what state the controller will revert to if it goes into Failsafe.

<i><b>Selections</b></i>	<i><b>Definitions</b></i>
--------------------------	---------------------------

<b>NO L</b>	Controller stays in last mode (automatic or manual); output goes to Failsafe value.
-------------	---

<b>LACH</b>	Controller goes to manual mode; output goes to Failsafe value.
-------------	--

---

**12.2.42    FUZZY**      (FUZZY OVERSHOOT SUPPRESSION)

This prompt is part of the *Accutune* Set up group.

The UDC will use Fuzzy Logic to inherently suppress or minimize any overshoot that may occur, when PV approaches SP, as a result of the existing tuning parameters. It does NOT change the parameters.

Can be enabled or disabled independently of whether Demand Tuning is enabled or disabled.

<i><b>Selections</b></i>	<i><b>Definitions</b></i>
--------------------------	---------------------------

<b>DIS</b>	Disable the Fuzzy Overshoot Suppression.
------------	--

<b>ENAB</b>	Enables the Fuzzy Overshoot Suppression.
-------------	--

---

**12.2.43    HYST**      (HYSTERESIS - OUTPUT RELAY ONLY)

This prompt is part of the *Control* Set up group.

HYSTERESIS is an adjustable overlap of the ON/OFF states of each control output. This is the difference between the value of the process variable at which the control outputs energize and the value at which they de-energize. Only applicable for ON-OFF control.

***Range of Setting:**    0.0 to 100.0% of PV (On/Off Control)*

**12.2.44 I MIN or I RPM** (RESET - INTEGRAL TIME)

This prompt is part of the *Tuning Set up* group.

**I MIN** = RESET TIME IN MINUTES / REPEAT

**I RPM** = RESET TIME IN REPEATS PER MINUTE

**RESET RATE** or **INTEGRAL TIME** adjusts the controller's output in accordance with both the size of the deviation (SP-PV) and the time it lasts. The amount of the corrective action depends on the value of Gain. The Reset adjustment is measured as how many times proportional action is repeated/minute.

*Used with control algorithm PID-A.*

*Defined as "HEAT" Reset on Duplex models for variations of Heat/Cool applications. The selection of minutes per repeat or repeats per minute is made in the Control parameters group under prompt "MINRPM."*

**Range of Setting:** 0.02 to 50.00

---

**12.2.45 I2 MIN or I2 RPM** (RESET2 - INTEGRAL TIME)

This prompt is part of the *Tuning Set up* group.

**I2 MIN** = RESET IN MINUTES / REPEAT

**I2 RPM** = RESET IN REPEATS PER MINUTE

**RESET RATE 2** or **INTEGRAL TIME 2** adjusts the controller's output in accordance with both the size of the deviation (SP-PV) and the time it lasts. The amount of the corrective action depends on the value of Gain. The Reset adjustment is measured as how many times proportional action is repeated/minute.

*Used with control algorithm PID-A.*

*Defined as "COOL" Reset on Duplex models for variations of Heat/Cool applications or for a Second Set of PID constants.*

*The selection of minutes per repeat or repeats per minute is made in the Control parameters group under prompt "MINRPM."*

**Range of Setting:** 0.02 to 50.00

---

**12.2.46 INCRMT** (TIME COUNT INCREMENT)

This prompt is part of the *Timer Set Up* group.

This selection determines how the timer's count will increment.

***Selections******Definitions***

<b>MIN</b>	Counts in hours:minutes.
<b>SEC</b>	Counts in minutes:seconds.

---

**12.2.47 IN1 HI** (INPUT 1 HIGH RANGE VALUE)

This prompt is part of the *Input 1* Set up group.

This selection lets you the Input 1 high range value in engineering units.

**Linear or Square Root Inputs only.**

Scale the #1 input signal to the display value you want for 100%.

**EXAMPLE:**

Actuation (Input) = 4 to 20 mA  
Process Variable = Flow  
Range of Flow = 0 to 250 Gal/Min  
High Range display value = 250  
Then 20 mA = 250 Gal/Min

The control setpoint will be limited by the range of units selected here.

**Range of Setting:** -999 to 9999 (*floating*) in Engineering Units

---

**12.2.48 IN1 LO** (INPUT 1 LOW RANGE VALUE)

This prompt is part of the *Input 1* Set up group.

This selection lets you the Input 1 Low range value in engineering units.

**Linear or Square Root Inputs only.**

Scale the #1 input signal to the display value you want for 0%.

**EXAMPLE:**

Actuation (Input) = 4 to 20 mA  
Process Variable = Flow  
Range of Flow = 0 to 250 Gal/Min  
Low Range display value = 0  
Then 4 mA = 0 Gal/Min

The control setpoint will be limited by the range of units selected here.

**Range of Setting:** -999 to 9999 (*floating*) in Engineering Units

---

**12.2.49 IN1TYP** (INPUT 1 ACTUATION TYPE)

This prompt is part of the *Input 1* Set up group.

This selection determines what actuation you are going to use for Input 1.

---

**ATTENTION**

Changing the input type will result in the loss of Field Calibration values and will restore Factory Calibration values.

---

<i>Selections</i>	<i>Definitions</i>
<b>B</b>	<b>B</b> —B Thermocouple
<b>E H</b>	<b>E H</b> —E Thermocouple High
<b>E L</b>	<b>E L</b> —E Thermocouple Low
<b>J H</b>	<b>J H</b> —J Thermocouple High
<b>J L</b>	<b>J H</b> —J Thermocouple Low
<b>K H</b>	<b>K H</b> —K Thermocouple High
<b>K L</b>	<b>K H</b> —K Thermocouple Low
<b>NNMH</b>	<b>NNMH</b> —Ni-Ni-Moly Thermocouple High
<b>NNML</b>	<b>NNML</b> —Ni-Ni-Moly Thermocouple Low
<b>N90H</b>	<b>N90H</b> —NiMo-NiCo Thermocouple High
<b>N90L</b>	<b>N90L</b> —NiMo-NiCo Thermocouple Low
<b>NIC</b>	<b>NIC</b> —Nicrosil-Nisil Thermocouple
<b>R</b>	<b>R</b> —R Thermocouple
<b>S</b>	<b>S</b> —S Thermocouple
<b>T H</b>	<b>T H</b> —T Thermocouple High
<b>T L</b>	<b>T L</b> —T Thermocouple Low
<b>W H</b>	<b>W H</b> —W5W26 Thermocouple High
<b>W L</b>	<b>W L</b> —W5W26 Thermocouple Low
<b>100H</b>	<b>100H</b> —100 Ohm RTD High
<b>100L</b>	<b>100L</b> —100 Ohm RTD Low
<b>200</b>	<b>200</b> —200 Ohm RTD
<b>500</b>	<b>500</b> —500 Ohm RTD
<b>RADH</b>	<b>RADH</b> —Radamatic RH
<b>RADI</b>	<b>RADI</b> —Radamatic RI
<b>0-20</b>	<b>0-20</b> —0 to 20 Milliamperes
<b>4-20</b>	<b>4-20</b> —4 to 20 Milliamperes
<b>10m</b>	<b>10m</b> —0 to 10 Millivolts
<b>50m</b>	<b>50m</b> —0 to 50 Millivolts
<b>0-5</b>	<b>0-5</b> —0 to 5 Volts
<b>1-5</b>	<b>1-5</b> —1 to 5 Volts
<b>0-10</b>	<b>0-10</b> —0 to 10 Volts
<b>100m</b>	<b>100m</b> —0 to 100 Millivolts



**12.2.50 IN2 HI** (INPUT 2 HIGH RANGE VALUE)

This prompt is part of the *Input2* Set up group.

This selection lets you the Input2 high range value in engineering units.

**Linear or Square Root Inputs only.**

Scale the #2 input signal to the display value you want for 100%.

EXAMPLE:

Actuation (Input) = 4 to 20 mA  
Process Variable = Flow  
Range of Flow = 0 to 250 Gal/Min  
High Range display value = 250  
Then 20 mA = 250 Gal/Min

The control setpoint will be limited by the range of units selected here.

**Range of Setting:** -999 to 9999 (floating) in Engineering Units

---

**12.2.51 IN2 LO** (INPUT 2 LOW RANGE VALUE)

This prompt is part of the *Input2* Set up group.

This selection lets you the Input 2 Low range value in engineering units.

**Linear or Square Root Inputs only.**

Scale the #2 input signal to the display value you want for 0%.

EXAMPLE:

Actuation (Input) = 4 to 20 mA  
Process Variable = Flow  
Range of Flow = 0 to 250 Gal/Min  
Low Range display value = 0  
Then 4 mA = 0 Gal/Min

The control setpoint will be limited by the range of units selected here.

**Range of Setting:** -999 to 9999 (floating) in Engineering Units

---

**12.2.52 IN2TYP** (INPUT 2 ACTUATION TYPE)

This prompt is part of the *Input2* Set up group.

This selection determines what actuation you are going to use for Input 2.

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	<b>DIS</b> —Disable Input 2
<b>0-20</b>	<b>0-20</b> —0 to 20 Milliamperes
<b>4-20</b>	<b>4-20</b> —4 to 20 Milliamperes
<b>0-5</b>	<b>0-5</b> —0 to 5 Volts
<b>1-5</b>	<b>1-5</b> —1 to 5 Volts
<b>0-2</b>	<b>0-2</b> —0 to 2 Volts

---

**12.2.53 L DISP** (DISPLAY FOR TIMER OPTION)

This prompt is part of the *Timer* Set up group.

This selection allows you to select what is displayed for the timer option. The time is shown on the lower display in hh:mm or mm:ss format along with a rotating “clock” character.

<i>Selections</i>	<i>Definitions</i>
<b>TREM</b>	If the “clock” rotation is counterclockwise, <b>time remaining</b> is indicated.
<b>ET</b>	If the “clock” rotation is clockwise, <b>elapsed time</b> is indicated.

---

**12.2.54 LENGUAG** (LANGUAGE)

This prompt is part of the *Input 1* Set up group.

Select what the language will be for the displays.

<i>Selections</i>	<i>Definitions</i>
<b>ENGL</b>	English
<b>FREN</b>	French
<b>GERM</b>	German
<b>SPAN</b>	Spanish
<b>ITAL</b>	Italian
<b>NUMB</b>	Numeric

---

**12.2.55 LOCK** (LOCKOUT)

This prompt is part of the *Tuning* Set up group.

LOCKOUT applies to one of the functional groups: Configuration, Calibration, Tuning, Accutune.

**DO NOT CONFIGURE UNTIL ALL CONFIGURATION IS COMPLETE.**

<i>Selections</i>	<i>Definitions</i>
<b>NONE</b>	No lockout; all groups are read/write
<b>CAL</b>	All groups are available for read/write except for the Calibration and Keyboard Lockout groups.
<b>CONF</b>	Timer, Tuning, SP Ramp, and Accutune groups are read/write. All other groups are read only. Calibration and Keyboard Lockout groups are not available.
<b>VIEW</b>	Tuning and Setpoint Ramp parameters are read/write. No other parameters can be viewed.
<b>ALL</b>	Tuning and Setpoint Ramp parameters are available for read only. No other parameters can be viewed.

**12.2.56 LOOPBACK** (LOCAL LOOPBACK TEST)

This prompt is part of the *Communications* Set up group.

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Disables the Loopback test
<b>ENAB</b>	Allows loopback test. The UDC goes into Loopback mode in which it sends and receives its own message. The UDC displays PASS or FAIL status in the upper display and LOOPBACK in the lower display while the test is running. The UDC will go into manual mode. The test will run until the operator disables it here, or until power is turned off and on.

**ATTENTION** The UDC does not have to be connected to the RS-485 link to perform this test. If it is connected, only one UDC 2300 should run the loopback test at a time. The computer should not be transmitting on the link while the loopback test is active.

**12.2.57 LSP'S** (LOCAL SETPOINT SOURCE)

This prompt is part of the *Control* Set up group.

This selection determines what your local setpoint source will be.

<i>Selections</i>	<i>Definitions</i>
<b>ONE</b>	LOCAL SETPOINT 1—The setpoint entered from the keyboard.
<b>TWO</b>	TWO LOCAL SETPOINTS—This selection lets you switch between two local setpoints using the <b>FUNCTION</b> key.

**12.2.58 MANRST** (MANUAL RESET)

This prompt is part of the *Tuning* Set up group.

**MANUAL RESET** is only applicable if you have control algorithm PD WITH MANUAL RESET (**PD + MR**). Because a proportional controller will not necessarily line out at setpoint, there will be a deviation (offset) from setpoint. This eliminates the offset and lets the PV line out at setpoint.

**NOTE:** This Manual Reset value is also available as a lower display parameter, BI.

*Range of Setting: -100 to +100 (in % of output)*

---

**12.2.59 MINRPM** (RESET UNITS)

This prompt is part of the *Control* Set up group.

Selects units of minutes or repeat per minutes for the I term of the PID algorithm.

20 Repeats per Minute = 0.05 Minutes per Repeat.

*Selections**Definitions*

- |            |   |
|------------|---|
| <b>RPM</b> | <b>REPEATS PER MINUTE</b> — The number of times per minute that proportional action is repeated by reset. |
| <b>MIN</b> | <b>MINUTES PER REPEAT</b> — The time between each repeat of the proportional action by reset.             |
- 

**12.2.60 OUTALG** (OUTPUT ALGORITHM)

This prompt is part of the *Algorithm* Set up group.

The **OUTPUT ALGORITHM** lets you select the type of output you want.

Not applicable with Control Algorithm prompt "TPSC."

*Selections are model dependent. For example, current output models cannot be configured for Time Proportioning Simplex Output.*

*Selections**Definitions*

- |             |  |
|-------------|--|
| <b>RLY</b>  | <b>TIME SIMPLEX</b> — Type of output using one SPDT relay. Its normally open (NO) or normally closed (NC) contacts are wired at the rear terminals.<br><br>Other prompts affected: "HYST"  |
| <b>CUR</b>  | <b>CURRENT SIMPLEX</b> — Type of output using one 4 to 20 mA signal that can be fed into a positive or negative grounded load of 0 to 750 ohms. The signal can be recalibrated for any desired range from 4 to 20 mA for 0 to 100% output. |
| <b>RLYD</b> | <b>TIME DUPLEX</b> — Type of output using two SPST relays. Its normally open (NO) or normally closed (NC) contacts are wired at the rear terminals.<br><br>Other prompts affected: "D BAND" and "HYST"                                     |
-

- CURD**     **CURRENT DUPLEX** — is similar to current simplex but uses a second current output. The second output is usually scaled so that zero and span correspond with 0% and 50% output (cool zone). When the output is 0 to 50%, the controller uses tuning parameter set #2, when the output is 50 to 100% it uses set #1.  
Other prompts affected: 4-20RG
- CURT**     **CURRENT/TIME DUPLEX** — is a variation of duplex with current active for 0 to 50% output (tuning set 2) and time is active 50 to 100% output (tuning set 1). Relay controls heat, current controls cool.  
Other prompts affected: 4-20RG
- TCUR**     **TIME CURRENT DUPLEX** — is similar to CUR TI except that current is active for 50 to 100% and time is active for 0 to 50%. Relay controls cool, current controls heat.  
Other prompts affected: 4-20RG
- 

#### **12.2.61     OUT Hi     (HIGH OUTPUT LIMIT)**

This prompt is part of the *Control* Set up group.

This is the highest value of output beyond which you do not want the controller automatic output to exceed. Use 0 to 100% for time proportional output type.

*Range of Setting:*     -5.0 to 105% of Output (Current)  
                                 0.0 to 100.0 % of Output (Relay)

---

#### **12.2.62     OUT Lo     (LOW OUTPUT LIMIT)**

This prompt is part of the *Control* Set up group.

This is the highest value of output below which you do not want the controller automatic output to exceed. Use 0 to 100% for time proportional output type.

*Range of Setting:*     -5.0 to 105% of Output (Current)  
                                 0.0 to 100.0 % of Output (Relay)

---

#### **12.2.63     PARITY     (PARITY)**

This prompt is part of the *Communications* Set up group.

**PARITY** pertains to the use of a self-checking code employing binary digits in which the total number of ONE's (or ZERO's) in each permissible code expression is either **ODD** or **EVEN**

---

**12.2.64 PB or GAIN** (PROPORTIONAL BAND or GAIN)

This prompt is part of the *Tuning* Set up group.

**PROPORTIONAL BAND** is the percent of the range of the measured variable for which a proportional controller will produce a 100% change in its output.

**GAIN** is the ratio of output change (%) over the measured variable change (%) that caused it.

$$G = \frac{100\%}{PB\%}$$

where PB is the proportional band (in %)

If the PB is 20%, then the Gain is 5. Likewise, a 3% change in the error signal (SP-PV) will result in a 15% change in the controller's output due to proportional action. If the gain is 2, then the PB is 50%.

*Defined as "HEAT" Gain on Duplex models for variations of Heat/Cool applications.*

*The selection of Prop. Band or Gain is made in the Control parameter group under prompt "PB or GN."*

**Range of Setting:** PB = 0.1 to 1000%

GAIN = 0.01 to 1000

---

**12.2.65 PB 2 or GAIN 2** (PROPORTIONAL BAND 2 or GAIN 2)

This prompt is part of the *Tuning* Set up group.

**PROPORTIONAL BAND 2** is the percent of the range of the measured variable for which a proportional controller will produce a 100% change in its output.

**GAIN 2** is the ratio of output change (%) over the measured variable change (%) that caused it.

$$G = \frac{100\%}{PB\%}$$

where PB is the proportional band (in %)

If the PB is 20%, then the Gain is 5. Likewise, a 3% change in the error signal (SP-PV) will result in a 15% change in the controller's output due to proportional action. If the gain is 2, then the PB is 50%.

*Defined as "COOL" Gain on Duplex models for variations of Heat/Cool applications or for a Second Set of PID constants.*

*The selection of Prop. Band or Gain is made in the Control parameter group under prompt "PB or GN."*

**Range of Setting:** PB 2 = 0.1 to 1000%

GAIN 2 = 0.01 to 1000

---

**12.2.66 PBorGN** (PROPORTIONAL BAND UNITS)

This prompt is part of the *Control* Set up group.

Select one of the following for the Proportional (P) term of the PID algorithm:

***Selections******Definitions***

**PB**      **PROPORTIONAL BAND** — Selects units of percent proportional band for the P term of the PID algorithm.

Where:  $PB\% = \frac{100\%}{GAIN}$

**GAIN**      **GAIN**— selects the unitless term of gain for the P term of the PID algorithm.

Where:  $GAIN = \frac{100\%}{PB\%}$

---

**12.2.67 PERIOD** (TIMEOUT PERIOD)

This prompt is part of the *Timer* Set up group.

This selection allows you to configure a Time-out period

*Range of Setting:* 0.00 to 99:59 (Hours:Minutes)

---

**12.2.68 PG END** (PROGRAM TERMINATION STATE)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

The program termination state function determines the status of the controller upon completion of the program.

***Selections******Definitions***

**LAST**      Hold at last Setpoint in program

**FSAF**      Manual Mode/Failsafe Output

---

**12.2.69 PIDSET** (NUMBER OF TUNING PARAMETER SETS)

This prompt is part of the *Control Set up* group.

This selection lets you choose one or two sets of tuning constants (gain, rate, and reset).

***Selections******Definitions***

- ONE**      **ONE SET ONLY**—Only one set of tuning parameters is available. Configure the values for:  
    Gain (proportional band),  
    Rate,  
    Reset Time, and  
    Cycle Time (if time proportional is used).
- 2KBD**      **TWO SETS KEYBOARD SELECTABLE**—Two sets of tuning parameters can be configured and can be selected at the operator interface or by using the Digital Inputs.
- Press **DISPLAY** key until you see PID SET1 or PID SET2 to switch between sets. Configure the values for:  
    Gain, Rate, Reset, Cycle Time  
    Gain #2, Rate #2, Reset #2, Cycle #2 Time
- 2 PV**      **TWO SETS PV AUTOMATIC SWITCHOVER**—When the process variable is GREATER than the value set at prompt SW VAL (Switchover Value), the controller will use Gain, Rate, Reset, and Cycle Time. The active PID SET can be read in the lower display.
- When the process variable is LESS than the value set at prompt SW VAL, the controller will use Gain #2, Rate #2, Reset #2, and Cycle #2 Time. The active PID SET can be read in the lower display.
- Other prompts affected: SW VAL
- 2 SP**      **TWO SETS SP AUTOMATIC SWITCHOVER**—When the setpoint is GREATER than the value set at prompt SW VAL (Switchover Value), the controller will use Gain, Rate, Reset, and Cycle.
- When the setpoint is LESS than the value set at prompt SW VAL, the controller will use Gain #2, Rate #2, Reset #2, and Cycle #2.
- Other prompts affected: SW VAL
-



**12.2.70 PWROUT** (THREE POSITION STEP CONTROL OUTPUT START-UP MODE)

This prompt is part of the *Control Set up* group.

This selection determines what position the motor will be in when powered up (the last one prior to shutdown or in the failsafe position).

***Selections******Definitions***

- |             |   |
|-------------|---|
| <b>LAST</b> | <b>LAST OUTPUT</b> —At power-up in automatic mode, the motor position will be the last one prior to power down. When the unit goes into FAILSAFE, it will stay in automatic mode; motor will <b>not</b> be driven to the configured failsafe position.  |
| <b>FSAF</b> | <b>FAILSAFE OUTPUT</b> —At power-up in manual mode, the motor will be driven to either the 0% or 100% output position, whichever is selected at prompt FAILSF. For Burnout/None, when the unit goes into FAILSAFE, it will go to manual mode; motor will be driven to the configured failsafe position. |

**12.2.71 PWR UP** (POWER UP CONTROLLER MODE RECALL)

This prompt is part of the *Control Set up* group.

This selection determines which mode and setpoint the controller will use when the controller restarts after a power loss.

***Selections******Definitions***

- |             |  |
|-------------|--|
| <b>MAN</b>  | <b>MANUAL, LSP, FAILSAFE OUTPUT</b> —At power-up, the controller will use manual mode with the local setpoint displayed.                             |
| <b>ALSP</b> | <b>AUTOMATIC MODE, LAST LSP</b> —At power-up, the controller will use automatic mode with the last local setpoint used before power down displayed.  |
| <b>ARSP</b> | <b>AUTOMATIC MODE, LAST RSP</b> —At power-up, the controller will use automatic mode with the last remote setpoint used before power down displayed. |
| <b>AMSP</b> | <b>LAST MODE/LAST SETPOINT</b> used before power down  |
| <b>AMLS</b> | <b>LAST MODE/LAST LOCAL SETPOINT</b> on power down.  |

### 12.2.72    **RATE T**    (RATE TIME)

This prompt is part of the *Tuning* Set up group.

**RATE** Time affects the controller's output whenever the deviation is changing; and affects it more when the deviation is changing faster.

*Defined as "HEAT" Rate on Duplex models for variations of Heat/Cool applications.*

**Range of Setting:** 0.08 to 10.00 minutes

0.08 or less = OFF

---

### 12.2.73    **RATE2T**    (RATE2 TIME)

This prompt is part of the *Tuning* Set up group.

**RATE 2** Time affects the controller's output whenever the deviation is changing; and affects it more when the deviation is changing faster.

*Defined as "COOL" Rate on Duplex models for variations of Heat/Cool applications or for a Second Set of PID constants.*

**Range of Setting:** 0.08 to 10.00 minutes

0.08 or less = OFF

---

### 12.2.74    **RATIO1**    (INPUT 1 RATIO)

This prompt is part of the *Input 1* Set up group.

Select the Ratio value you want on Input 1.

**Range of Setting:** -20.0 to 20.0

---

### 12.2.75    **RATIO2**    (INPUT 2 RATIO)

This prompt is part of the *Input 2* Set up group.

Select the Ratio value you want on Input 2.

**Range of Setting:** -20.0 to 20.0

---

### 12.2.76    **RECYCL**    (RECYCLES)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

The recycle number allows the program to recycle a specified number of times from beginning to end.

**Range of Setting:** 0 to 99

---

**12.2.77 RLY TY** (RELAY CYCLE TIME INCREMENT)

This prompt is part of the *Algorithm* Set up group.

**RELAY CYCLE TIME INCREMENT** selection is used only for Time Simplex and Duplex output configurations. This configuration sets the increment size of the relay cycle times in the Tuning Set Up group. The Lockout selection must be set to NONE in order to view this selection.

**Selections****Definitions**

<b>MECH</b>	<b>ELECTROMECHANICAL RELAY</b> —Cycle time in one-second increments.
<b>S S</b>	<b>SOLID STATE RELAY</b> —Cycle time in 1/3 second increments. This is useful for solid state relay applications that require shorter cycle times. DO NOT use this setting unless cycle times of less than 1 second are required.

---

**12.2.78 RESET** (TIMER RESET CONTROL)

This prompt is part of the *Timer* Set Up group.

This selection determines how the timer will be reset.

**Selections****Definitions**

<b>KEY</b>	Run/Hold key.
<b>AL1</b>	Alarm 1

---

**12.2.79 RN HLD** (RUN/HOLD KEY LOCKOUT)

This prompt is part of the *Tuning* Set up group.

This selection allows you to disable/enable the Setpoint Ramp/Program RUN/HOLD key.

*"LOCK" must be set to "None".*

**Selections****Definitions**

<b>DIS</b>	Disable the RUN/HOLD key
<b>ENAB</b>	Enables the RUN/HOLD key

---

**12.2.80 RPUNIT** (ENGINEERING UNITS FOR RAMP SEGMENTS)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

This selection determines the engineering units for ramp segments.

<i>Selections</i>	<i>Definitions</i>
<b>TIME</b>	Hours:Minutes
<b>EU-M</b>	Rate - Engineering units per minute
<b>EU-H</b>	Rate - Engineering units per hour

---

**12.2.81 RSPSRC** (REMOTE SETPOINT SOURCE)

This prompt is part of the *Control* Set up group.

This selection determines what your Remote setpoint source will be when toggled by the **FUNCTION** key or Digital Input.

<i>Selections</i>	<i>Definitions</i>
<b>NONE</b>	<b>NONE</b> —No remote setpoint.
<b>INP2</b>	<b>INPUT 2</b> —Remote Setpoint is Input 2.

---

**12.2.82 SECUR** (SECURITY CODE)

This prompt is part of the *Tuning* Set up group.

**SECURITY CODE**—The level of keyboard lockout may be changed in the Set Up mode. Knowledge of a “Security code” may be required to change from one level to another. Select this number here, copy it, and keep it in a secure location.

*Entering “0” disables the security code feature.*

NOTE: The Security Code is for keyboard entry only and is not available via communications.

*Can only be changed if LOCK selection is NONE.*

*.Range of Setting: 0 to 4095 (Default = 1000)*

---

**12.2.83 SGx RP** (SEGMENT RAMP - x = Segment Number 1 THROUGH 12)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

A ramp segment is the time it takes to change the setpoint to the next setpoint value in the program.

- Ramps are odd number segments. Segment #1 will be the initial ramp time.

---

**ATTENTION**

The selection of time or rate is made at prompt "RP UNIT".

---

**• Range of Setting:**

TIME - Hours:Minutes    Range = 0-99 hrs:59 min or

EU-M - Degrees/Minute    Range = 0 to 999

EU-H - Degrees/Hour    Range = 0 to 999

---

**12.2.84 SGx SP** (SEGMENT SETPOINT - x = Segment Number 1 THROUGH 12)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

A soak segment is a combination of soak setpoint (value) and a soak duration (see SGx TI).

This is Segment x Soak Setpoint Value

*.Range of Setting: within the setpoint limits*

---

**12.2.85 SGx TI** (SEGMENT DURATION - x = Segment Number 1 THROUGH 12)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

A soak segment is a combination of soak setpoint (see SGx SP) and a soak duration.

This is the Soak Setpoint Duration (Time) of Segment x.

*.Range of Setting:        0-99 hrs:59 min*

---

**12.2.86 SDMODE** (SHED MODE)

This prompt is part of the *Communications* Set up group.

SHED CONTROLLER MODE AND OUTPUT LEVEL—Determines the mode of local control you want when the controller is shed from the communications link.

***Selections******Definitions***

<b>LAST</b>	SAME MODE AND OUTPUT—The controller will return to the same mode (manual or automatic) at the same output level that it had before shed.
<b>Man_</b>	MANUAL MODE, SAME OUTPUT—The controller will return to manual mode at the same output level that it had before shed.
<b>FSAF</b>	MANUAL MODE, FAILSAFE OUTPUT—The controller will return to manual mode at the output value selected at Control prompt FAILSAFE.
<b>AUTO</b>	AUTOMATIC MODE, LAST SP—The controller will return to the automatic mode and the last setpoint used before shed.

---

**12.2.87 SHD\_SP** (SHED SETPOINT RECALL)

This prompt is part of the *Communications* Set up group.

The setpoint to be used after Shed is recalled.

***Selections******Definitions***

<b>LSP</b>	Controller will use last local or remote setpoint used.
<b>CSP</b>	When in “slave” mode, the controller will store the last host computer setpoint and use it at the Local setpoint. When in “monitor” mode, the controller will shed to the last UDC Local or Remote setpoint used, and the LSP is unchanged.

---

**12.2.88 SHDTIM** (SHED TIME)

This prompt is part of the *Communications* Set up group.

The number that represents how many sample periods there will be before the controller sheds from communications. Each period equals 1/3 seconds; 0 equals No shed.

***Range of Setting:*** 0 to 255 Sample Periods

---

**12.2.89 SOKDEV** (GUARANTEED SOAK DEVIATION)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

Each soak segment can have a deviation value of from 0 to  $\pm 99$  which guarantees the value for that segment.

**Guaranteed** soak segment values  $>0$  guarantee that the segment's process variable is within the  $\pm$  deviation for the configured soak time. Whenever the  $\pm$  deviation is exceeded, soak timing is frozen.

There are no guaranteed soaks whenever the deviation value is configured to 0 (that is, soak segments start timing soak duration as soon as the soak setpoint is first reached, regardless of where the process variable remains relative to the soak segment).

The value is the number in engineering units, above or below the setpoint, outside of which the timer halts.

**Range of Setting:** 0 to  $\pm 99$ . The decimal location corresponds to input 1 decimal selection.

---

**12.2.90 SP Hi** (SETPOINT HIGH LIMIT)

This prompt is part of the *Control* Set up group.

This selection prevents the local and remote setpoints from going above the value selected here. The setting must be equal to or less than the upper range of input 1 and input 2. Input 2, when configured for remote setpoint, will be restricted to this upper limit.

**Range of Setting:** 0 to 100% of span input in engineering units with decimal place

---

**12.2.91 SP Lo** (SETPOINT LOW LIMIT)

This prompt is part of the *Control* Set up group.

This selection prevents the local and remote setpoints from going below the value selected here. The setting must be equal to or greater than the lower range of input 1 and input 2. Input 2, when configured for remote setpoint, will be restricted to this lower limit.

**Range of Setting:** 0 to 100% of span input in engineering units with decimal place

---

**12.2.92 SPPROG** (SETPOINT RAMP/SOAK PROGRAM)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

This selection allows you to disable/enable the Setpoint Ramp/Soak Program function.

*“SPRAMP” and “SPRATE” must be disabled.*

**Selections****Definitions**

**DIS** Disables the Ramp/Soak Program Function. Allows “SPRAMP” or “SPRATE” option to be selected.

**ENAB** Enables the setpoint Ramp/Soak Program Function.

---

**12.2.93 SPRAMP** (SINGLE SETPOINT RAMP)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

This selection allows you to disable/enable the Setpoint Ramp function.

*Make sure you configure a ramp time (TI MIN) and a final setpoint value (FINLSP).*

*“SPPROG” and “SPRATE” must be disabled.*

**Selections****Definitions**

**DIS** Disables the Setpoint Select Function. Allows “SPPROG” or “SPRATE” option to be selected.

**ENAB** Enables the Setpoint Select Function.

---

**12.2.94 SPRATE** (SETPOINT RATE)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

This selection allows you to configure a specific rate of change for any local setpoint change.

*“SPRAMP” and “SPPROG” must be disabled*

**Selections****Definitions**

**DIS** Disables the Setpoint Rate option.

**ENAB** Enables the Setpoint Rate option. SP Rate parameters (EUHRUP, EUHRDN) appear when Rate is enabled.

---



**12.2.95 SP SEL** (SETPOINT SELECT FUNCTION LOCKOUT)

This prompt is part of the *Tuning* Set up group.

This selection allows you to disable/enable the Setpoint Select function.

*"LOCK" must be set to "NONE".*

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Disables the Setpoint Select Function.
<b>ENAB</b>	Enables the Setpoint Select Function.

**12.2.96 SP TRK** (SETPOINT TRACKING)

This prompt is part of the *Control* Set up group.

The local setpoint can be configured to track either PV or RSP as listed below.

**ATTENTION**

For selections other than NONE, LSP is stored in nonvolatile memory only when there is a mode change; i.e., when switching from RSP to LSP or from Manual to Automatic. If power is lost, then the current LSP value is also lost.

<i>Selections</i>	<i>Definitions</i>
<b>NONE</b>	<b>NO TRACKING</b> —If local setpoint tracking is not configured, the LSP will not be altered when transfer from RSP to LSP is made.
<b>PV</b>	<b>PROCESS VARIABLE</b> —Local setpoint tracks the PV when in manual.
<b>RSP</b>	<b>REMOTE SETPOINT</b> —Local setpoint tracks remote setpoint when in automatic. When the controller transfers out of remote setpoint, the last value of the remote setpoint (RSP) is inserted into the local setpoint.

**12.2.97 START** (TIMER START SELECTION)

This prompt is part of the *Timer* Set up group. This selection allows you to select whether the Timer starts with the keyboard **RUN/HOLD** key or Alarm 2.

<i>Selections</i>	<i>Definitions</i>
<b>KEY</b>	Starts with <b>RUN/HOLD</b> key.
<b>AL2</b>	Starts on Alarm 2.

**12.2.98 STATE** (PROGRAM STATE AT PROGRAM END)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

The program state selection determines the program state after completion.

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Program disabled at program end.
<b>HOLD</b>	Program held at program end.

---

**12.2.99 STRSEG** (START SEGMENT)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

The start segment number designates the number of the first segment.

**Range of Setting:** 1 to 11

---

**12.2.100 SW VAL** (AUTOMATIC SWITCHOVER VALUE)

This prompt is part of the *Control* Set up group.

This is the value of Process Variable or Setpoint at which the controller will switch from Tuning Constant Set #2 to Set #1.

Only appears when PIDSET selection is configured for either 2 PV or 2 SP.

**Range of Setting:** Value in engineering units within PV or SP range limits

---

**12.2.101 TI MIN** (SINGLE SETPOINT RAMP TIME)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

Enter the number of minutes desired to reach the final setpoint of a single setpoint ramp.

•A ramp time of “0” implies an immediate change of setpoint to the final setpoint.

**Range of Setting:** 0 to 255 minutes

---

**12.2.102 TIMER** (TIMER OPTION)

This prompt is part of the *Timer* Set up group.

This selection enables or disables a configured Time-out period.

<b>Selections</b>	<b>Definitions</b>
-------------------	--------------------

<b>ENAB</b>	Enables the Timer option.
-------------	---------------------------

<b>DIS</b>	Disables the Timer option.
------------	----------------------------

---

**12.2.103 ToBEGN** (RESET PROGRAMMING TO BEGINNING)

This prompt is part of the *Setpoint Ramp/Program* Set up group.

This selection enables or disables programming reset.

<b>Selections</b>	<b>Definitions</b>
-------------------	--------------------

<b>DIS</b>	Disables programming reset.
------------	-----------------------------

<b>KEY</b>	Allows programming reset from the keyboard.
------------	---

---

**12.2.104 TUNE** (ACCUTUNE - DEMAND TUNING)

This prompt is part of the *Accutune* Set up group.

If **TUNE** is selected, and tuning is initiated through the operator interface or digital input (if configured), the algorithm calculates new tuning parameters and enters them into the tuning group. This tuning requires no process knowledge and does not require line out for initialization.

<i>Selections</i>	<i>Definitions</i>
<b>DIS</b>	Disable Accutune.
<b>ENAB</b>	Enables Accutune.

---

**12.2.105 TX DLY** (RESPONSE DELAY)

This prompt is part of the *Communications* Set up group.

**TX DELAY**—Configurable response-delay timer allows you to force the UDC to delay its response for a time period of from 1 to 500 milliseconds compatible with the host system hardware/software.

*Range of Setting: 1 to 500 milliseconds*

---

**12.2.106 UNITS** (COMMUNICATION OVERRIDE UNITS)

This prompt is part of the *Communications* Set up group.

This selection determines how the controller values are expressed during communications.

<i>Selections</i>	<i>Definitions</i>
<b>PCT</b>	Percent
<b>ENG</b>	Engineering units

---

**12.2.107 UNITS** (TEMPERATURE UNITS)

This prompt is part of the *Input 1* Set up group.

This selection will be indicated on the annunciator—what display of temperature you want.

<i>Selections</i>	<i>Definitions</i>
<b>F</b>	Degrees Fahrenheit
<b>C</b>	Degrees Centigrade
<b>NONE</b>	None

**12.2.108 XMITR1** (TRANSMITTER CHARACTERIZATION)

This prompt is part of the *Input 1* Set up group.

This selection lets you instruct the controller to characterize a linear input to represent a non-linear one.

---

**ATTENTION**

Prompt only appears when a linear actuation is selected at prompt IN1TYP.

**FOR EXAMPLE:**

If input 1 is a 4 to 20 mA signal, but the signal represents a type K thermocouple, select K H and the controller will characterize the 4 to 20 mA signal so that it is treated as a type K thermocouple input (high range).

---

<i>Selections</i>	<i>Definitions</i>
<b>B</b>	<b>B</b> —B Thermocouple
<b>E H</b>	<b>E H</b> —E Thermocouple High
<b>E L</b>	<b>E L</b> —E Thermocouple Low
<b>J H</b>	<b>J H</b> —J Thermocouple High
<b>J L</b>	<b>J L</b> —J Thermocouple Low
<b>K H</b>	<b>K H</b> —K Thermocouple High
<b>K L</b>	<b>K L</b> —K Thermocouple Low
<b>NNMH</b>	<b>NNMH</b> —Ni-Ni-Moly Thermocouple High
<b>NNML</b>	<b>NNML</b> —Ni-Ni-Moly Thermocouple Low
<b>N90H</b>	<b>N90H</b> —NiMo-NiCo Thermocouple High
<b>N90L</b>	<b>N90L</b> —NiMo-NiCo Thermocouple Low
<b>NIC</b>	<b>NIC</b> —Nicrosil-Nisil Thermocouple
<b>R</b>	<b>R</b> —R Thermocouple
<b>S</b>	<b>S</b> —S Thermocouple
<b>T H</b>	<b>T H</b> —T Thermocouple High
<b>T L</b>	<b>T L</b> —T Thermocouple Low
<b>W H</b>	<b>W H</b> —W5W26 Thermocouple High
<b>W L</b>	<b>W L</b> —W5W26 Thermocouple Low
<b>100H</b>	<b>100H</b> —100 Ohm RTD High
<b>100L</b>	<b>100L</b> —100 Ohm RTD Low
<b>200</b>	<b>200</b> —200 Ohm RTD
<b>500</b>	<b>500</b> —500 Ohm RTD
<b>RADH</b>	<b>RADH</b> —Radiamatic RH
<b>RADI</b>	<b>RADI</b> —Radiamatic RI
<b>LIN</b>	<b>LIN</b> —Linear
<b>SrT</b>	<b>SrT</b> —Square Root

---

**12.2.109 XMITR2** (TRANSMITTER CHARACTERIZATION)

This prompt is part of the *Input 2* Set up group.

This selection lets you instruct the controller to characterize a linear input to represent a non-linear one.

**ATTENTION**

Prompt only appears when a linear actuation is selected at prompt IN2TYP.

**FOR EXAMPLE:**

If input 2 is a 4 to 20 mA signal, but the signal represents a type K thermocouple, select K H and the controller will characterize the 4 to 20 mA signal so that it is treated as a type K thermocouple input (high range).

<i><b>Selections</b></i>	<i><b>Definitions</b></i>
<b>B</b>	<b>B</b> —B Thermocouple
<b>E H</b>	<b>E H</b> —E Thermocouple High
<b>E L</b>	<b>E L</b> —E Thermocouple Low
<b>J H</b>	<b>J H</b> —J Thermocouple High
<b>J L</b>	<b>J L</b> —J Thermocouple Low
<b>K H</b>	<b>K H</b> —K Thermocouple High
<b>K L</b>	<b>K L</b> —K Thermocouple Low
<b>NNMH</b>	<b>NNMH</b> —Ni-Ni-Moly Thermocouple High
<b>NNML</b>	<b>NNML</b> —Ni-Ni-Moly Thermocouple Low
<b>N90H</b>	<b>N90H</b> —NiMo-NiCo Thermocouple High
<b>N90L</b>	<b>N90L</b> —NiMo-NiCo Thermocouple Low
<b>NIC</b>	<b>NIC</b> —Nicrosil-Nisil Thermocouple
<b>R</b>	<b>R</b> —R Thermocouple
<b>S</b>	<b>S</b> —S Thermocouple
<b>T H</b>	<b>T H</b> —T Thermocouple High
<b>T L</b>	<b>T L</b> —T Thermocouple Low
<b>W H</b>	<b>W H</b> —W5W26 Thermocouple High
<b>W L</b>	<b>W L</b> —W5W26 Thermocouple Low
<b>100H</b>	<b>100H</b> —100 Ohm RTD High
<b>100L</b>	<b>100L</b> —100 Ohm RTD Low
<b>200</b>	<b>200</b> —200 Ohm RTD
<b>500</b>	<b>500</b> —500 Ohm RTD
<b>RADH</b>	<b>RADH</b> —Radiamatic RH
<b>RADI</b>	<b>RADI</b> —Radiamatic RI
<b>LIN</b>	<b>LIN</b> —Linear
<b>SrT</b>	<b>SrT</b> —Square Root



## 13 Index

### A

Aborting Accutune, 63  
Accuracy, 4  
Accutune - Demand Tuning, 155  
Accutune Error Codes, 31, 63, 119  
Accutune II, 61  
Accutune Set Up Group, 31  
Alarm And Duplex Output Connections, 17, 19  
Alarm Blocking, 41, 124  
Alarm Hysteresis, 41, 119  
Alarm Relay Action., 6  
Alarm Relay Output Failure, 110  
Alarm Relays, 8  
Alarm Setpoints, 66  
Alarm Setpoints Display, 66  
Alarms Set Up Group, 40  
Alarmx Segment Event X, 41  
Alarmx Setpoint X State, 41  
Alarmx Setpointx Event, 121  
Alarmx Setpointx State, 121  
Alarmx Setpointx Type, 40, 122  
Alarmx Setpointx Value, 40, 123  
Algorithm Set Up Group, 32  
Ambient Temperature, 4  
Annunciators, 49  
Application Related Problems, 100  
Atune Group, 31  
Auto/Manual Key, 48  
Auto/Manual Key Lockout, 28, 119  
Automatic Switchover Value, 36, 154  
Automatic With Local Setpoint, 57  
Automatic With Remote Setpoint, 57  
Auto-Only Mode, 54  
Autotune Is Complete, 63  
Autotune Key, 48  
Autotune Key Lockout, 28, 118  
Auxiliary Output, 38, 120  
Auxiliary Output Calibration, 96  
Auxiliary Output Calibration Procedure, 97  
Auxiliary Output High Scaling Factor, 117  
Auxiliary Output Low Scaling Factor, 117

### B

Background Tests, 103  
Baud Rate, 39, 123  
Bias On Input 1, 34  
Bias On Input 2, 35  
Burnout Protection, 34, 124

### C

Calibration Mode, 92  
Calibration Steps, 82  
CE Conformity, 2, 4  
Changing Control Modes, 58  
Changing The Local Setpoints, 58  
Communication Override Units, 39, 155  
Communications State, 39, 125  
Composite Wiring Diagram, 13  
Computer Setpoint Bias, 39, 125  
Computer Setpoint Ratio, 39, 127  
Configuration, 23  
Configuration Procedure, 25  
Configuration Prompt Hierarchy, 24  
Control Algorithm, 32, 125  
Control And Alarm Relay Contact Information, 8  
Control Modes, 57  
Control Output Direction, 36, 118  
Control Relays, 1, 2, 6, 8  
Control Set Up Group, 36  
Control/Alarm Circuit Wiring, 11  
Controller Failure Symptoms, 105  
Controller Grounding, 11  
Current Duplex Range, 32, 117  
Current Output, 6, 16  
Current Proportional Output Calibration, 94  
Current Proportional Output Failure, 107  
Current/Time Or Time/Current Proportional Output Failure, 109  
Customer Support, 101  
Cycle Time - Heat, 127  
Cycle Time (Cool), 28  
Cycle Time (Heat), 28  
Cycle Time2 - Cool, 128

**D**

Deadband, 37,128  
Decimal Point Location, 33,128  
Demand Tuning, 31  
Digital Input, 38,129  
Digital Input (Remote) Operation, 80  
Digital Input Combinations, 38,129  
Dimensions, 9  
Display For Timer Option, 138  
Downscale Burnout, 124  
Duplex Control, 62

**E**

Elapsed Time, 60  
Electrical Considerations, 11  
Electrical Noise Precautions, 11  
Electromechanical Relay Output, 14  
Emissivity, 34,131  
End Segment, 131  
End Segment Number, 29, 75  
Engineering Units For Ramp Segments, 30, 148  
Equipment You Will Need To Calibrate, 84  
Error Codes, 63  
Error Messages, 51  
Estimated Motor Position, 67  
External Interface Option Connections, 18  
External Solid State Relay Option, 16  
External Wiring, 11

**F**

Factory Calibration, 91  
Failsafe Function Prompt, 68, 69  
Failsafe Manual Mode, 21, 102  
Failsafe Mode, 37, 69, 133  
Failsafe Output Value, 37, 68, 132  
Failsafe Output Value For Restart After A Power Loss, 68  
Features, 1  
Field Wiring, 83  
Filter For Input 1, 34  
Filter For Input 2, 35  
Function Parameter Reference Guide, 115  
Function Prompts, 24  
Fuzzy Overshoot Suppression, 31, 64, 133

**G**

Guaranteed Soak, 75  
Guaranteed Soak Deviation, 151  
Guaranteed Soak Deviation Value, 30

**H**

High Output Limit, 37, 141  
High Scaling Factor, 38  
Hysteresis, 37  
Hysteresis - Output Relay Only, 133

**I**

Initial Start-Up, 21  
Input 1 Actuation Type, 33, 136  
Input 1 And Input 2 Wiring Terminals, 83  
Input 1 Bias, 123  
Input 1 Calibration Procedure, 87  
Input 1 Connections, 14  
Input 1 Filter, 132  
Input 1 High Range Value, 34, 135  
Input 1 Low Range Value, 34, 135  
Input 1 Ratio, 146  
Input 1 Set Up Group, 33  
Input 1 Set Up Wiring, 85  
Input 2 (Rsp) Jumper Placement, 6  
Input 2 Actuation Type, 138  
Input 2 Bias, 123  
Input 2 Calibration Procedure, 90  
Input 2 Connections, 14  
Input 2 Filter, 132  
Input 2 High Range Value, 35, 137  
Input 2 Low Range Value, 33, 137  
Input 2 Ratio, 146  
Input 2 Set Up Group, 35  
Input 2 Set Up Wiring, 89  
Input 2 Type, 35  
Input Calibration, 81  
Input I Jumper Placement, 6  
Installation, 3  
Installation Related Problems, 100  
Internal Open Collector Output, 16



**J**

Jumper For Input 1, 84  
Jumper For Input 2, 84  
Jumper Placement, 7

**K**

Key Error, 48  
Key Error Message, 22  
Key Functions, 22  
Key Lockout, 48  
Keyboard Failure, 111

**L**

Language, 138  
Language Selection, 34  
Latching, 69  
Latching Alarm For Output, 41, 118  
Local Loopback Test, 39, 139  
Local Setpoint Source, 36, 139  
Lockout, 28, 139  
Lockout Feature, 47  
Lockout Levels, 47  
Low Output Limit, 37, 141  
Low Scaling Factor, 38  
Lower Display Key Parameter Prompts, 50

**M**

Mains Power Supply, 11, 13  
Manual, 57  
Manual Reset, 27, 140  
Mechanical Shock, 4  
Minimum And Maximum Range Values, 82  
Model Number Interpretation, 5  
Monitoring T, 45  
Motor Position Display, 67  
Motor Time, 98  
Mounting, 9  
Mounting Method, 10  
Mounting Procedure, 10

**N**

Non-Latching, 69  
Number Of Program Recycles, 30  
Number Of Tuning Parameter Sets, 36, 144

**O**

Open Collector Relay Output, 15  
Operating Limits, 4  
Operating Parameters, 50  
Operation, 53  
Operator Interface, 1, 22, 46  
Output Algorithm, 32, 140  
Output Calibration, 93

**P,Q**

Parity, 39, 141  
Parts Identification, 113  
Permissible Wiring Bundling, 12  
Physical Considerations, 9  
Position Proportional Or 3 Position Step Test Failures, 102  
Power Consumption, 4  
Power Failure Symptoms, 107  
Power Line Frequency, 34, 133  
Power Outage, 73, 80  
Power Up Controller Mode Recall, 36, 145  
Powering Up, 21  
Power-Up Tests, 102  
Pre-Installation Information, 4  
Preliminary Checks, 6  
Program Contents, 74  
Program Record Sheet, 78  
Program State, 76  
Program State At Program End, 30, 153  
Program Termination State, 30, 76, 143  
Proportional Band 2 Or Gain 2, 27, 142  
Proportional Band Or Gain, 27, 142  
Proportional Band Units, 37, 143  
Pv Hot Start, 71

**R**

Ramp Time Or Rate Segments, 75  
Ramp Unit, 75  
Ramp/Soak Profile Example, 76  
Rate 2 In Minutes, 27  
Rate Down, 29  
Rate Down Value, 131  
Rate In Minutes, 27  
Rate Time, 146  
Rate Up, 29  
Rate Up Value, 131  
Rate2 Time, 146

**R, CONTINUED**

Ratio On Input 1, 34  
Ratio On Input 2, 35  
Recycle Number, 75  
Recycles, 146  
Relative Humidity, 4  
Relay Cycle Time Increment, 32,147  
Remote Setpoint Source, 36, 148  
Reset - Integral Time, 134  
Reset In Minutes/Repeat, 27  
Reset In Repeats/Minute, 27  
Reset Program To The Beginning, 30, 76, 154  
Reset Units, 37, 140  
Reset2 - Integral Time, 134  
Response Delay, 39, 155  
Restore Factory Calibration, 91  
Rtd Inputs, 86  
Run/Hold Key, 48,71  
Run/Hold Key Lockout, 28,147  
Run/Monitor The Program, 79

**S**

Security Code, 28, 46, 148  
Segment Duration, 149  
Segment Ramp, 149  
Segment Ramp Or Rate Time, 30  
Segment Setpoint, 149  
Segment Soak Duration, 30  
Segment Soak Setpoint Value, 30  
Set Point Select Function Key, 48  
Set Up Group, 23, 24  
Set Up Wiring Procedure For Auxiliary Output, 96  
Setpoint High Limit, 36, 151  
Setpoint Low Limit, 36, 151  
Setpoint Ramp, 29, 72  
Setpoint Ramp Final Setpoint, 29  
Setpoint Ramp/Soak Program, 152  
Setpoint Ramp/Soak Programming, 29, 74  
Setpoint Rate, 29, 72, 152  
Setpoint Rate/Ramp/Program Operation, 71  
Setpoint Select Function Lockout, 28, 153  
Setpoint Tracking, 36, 153  
Setpoints, 58  
Shed Mode, 150  
Shed Output Mode, 39  
Shed Setpoint Recall, 39

Shed Setpoint Recall, 150  
Shed Time, 39,150  
Shock Hazard Warning, 106  
Single Display Default, 131  
Single Display Functionality, 54  
Single Display Parameters, 55  
Single Setpoint Ramp, 152  
Single Setpoint Ramp Final Setpoint, 132  
Single Setpoint Ramp Time, 29,154  
Soak Segments, 75  
Software Version Number, 101  
Solid State Relay Output, 15  
SP Ramp Set Up Group, 29  
Specifications, 4  
SPProg, 29  
SPRate, 29  
Start Segment, 29,75,154  
Start Up, 21  
Start Up Procedure For Operation, 56  
Station Address, 39,125  
Status Tests, 102  
Suppression Devices, 11  
Switch Between Two Sets Via Keyboard, 65  
Switching Between Setpoints, 59

**T**

Temperature Units, 33,155  
Test Failures, 21, 102  
Thermocouple Inputs Using T/C Source, 85  
Thermocouple Inputs Using An Ice Bath, 85  
Three Position Step Control, 36,98  
Three Position Step Control Algorithm, 17,67  
Three Position Step Control Start-Up Mode, 145  
Time Count Increment, 134  
Time Proportional Output Failure, 108  
Time Remaining, 60  
Time-Out, 60  
Timeout Period, 26,143  
Timer, 59  
Timer Count Increment, 26  
Timer Display, 26  
Timer Function Start, 26  
Timer Option, 154  
Timer Reset Control, 26,147  
Timer Set Up Group, 26  
Timer Start Selection, 153  
Transmitter Characterization, 33

**T,CONTINUED**

Transmitter Characterization, 35, 156, 157  
Troubleshooting Aids, 100  
Troubleshooting Procedures, 106  
Troubleshooting/Service, 99  
Tune, 31, 61  
Tune For Duplex (Heat/Cool), 62  
Tuning, 27  
Tuning Indicators, 61  
Tuning Set Up Group, 27  
Two Sets Of Tuning Constants, 64

**U**

Universal Output Functionality And Restrictions, 12  
Upscale Burnout, 124

**V**

Vibration, 4  
Voltage And Resistance Equivalents For 0% And 100% Range Values, 82

**W,X,Y,Z**

Warning—Shock Hazard, 106  
Wiring, 11  
Wiring Bundling, 12  
Wiring Connections For 1 -5 Volt Input/Input 2, 90  
Wiring Connections For 4 -20 MA Input/Input 2, 89  
Wiring Connections For Calibrating Auxiliary Output, 96  
Wiring Connections For Calibrating Current Proportional Output, 94  
Wiring Connections For Radiamatic, Milliampere, Millivolts, Or Volts (Except 0 To 10 Volts), 87  
Wiring Connections For Rtd (Resistance Thermometer Device), 86  
Wiring Diagrams, 12  
Wiring The Controller, 13  
Worksheet, 74





For at reducere risikoen for elektrisk stød og dermed forbundet personskaade er det nødvendigt at følge sikkerhedsforskrifterne i følgende dokumentation.



Dette symbol advarer brugeren om en potentiel berøringsfare, såfremt der kan være adgang til den livsfarlige netspænding.



Klemme til beskyttelsesjord. Til tilslutning af ledning til forsyningssystemets jordforbindelse.

- \* Såfremt udstyret anvendes på anden måde end den, producenten har angivet, kan det betyde en forringelse af udstyrets sikkerhed.
- \* Udskift ikke nogen komponent (eller del), som leverandøren ikke specifikt har angivet er udskiftelig.
- \* Al ledningsføring skal være i overensstemmelse med nationale standarder og skal udføres af autoriseret personale med behørig erfaring.
- \* Jordklemmen skal tilsluttes inden andre ledninger (og skal afmonteres sidst).
- \* Det er nødvendigt med en afbryder til strømforsyningen nær udstyret og i umiddelbar nærhed af operatøren.

### UDSTYRETS MÆRKEVÆRDIER

Netspænding	90 til 264 V~
Frekvens	50/60 Hz
Nominel effekt	12VA

### MILJØFORHOLD

Brug ikke instrumentet i nærheden af brandfarlige væsker eller dampe. Anvendelse af elektriske instrumenter i et sådant miljø udgør en sikkerhedsrisiko.

Temperatur	0 til 55° C
Fugtighed	5 til 90%

### INSTALLATION AF UDS TYR

Styreenheden skal monteres i en plade eller et panel for at begrænse operatørens adgang til de bageste klemmer.

## TURVALLISUUSMÄÄRÄYKSET

FI2I-6060



Noudata kaikkia näitä turvaohjeita vammoja aiheuttavien sähköiskujen välttämiseksi



Tämä merkki varoittaa käyttäjää sähköiskun vaarasta paikassa, missä voi koskettaa vaarallisia jännitteitä.



Suojaavan maadoitusjärjestelmän kytkinnapa maadoitetulle käyttövirralle.

- \* Laitteeseen kuuluva suojaus voi heikentyä, jos sitä käytetään valmistajan osoittaman tavan vastaisesti
- \* Älä korvaa mitään komponenttia (tai osaa), ellei jälleenmyyjä ole ilmoittanut sen korvauskelpoisuutta.
- \* Kaikkien johdotusten on oltava paikallisten standardien mukaiset ja kokeneen, valtuutetun asentajan tekemät.
- \* Maadoituspiste on kytkettävä ensimmäisenä ennen muita kytkentöjä (ja irrotettava viimeisenä).
- \* Virtaverkossa tulee olla katkaisija lähellä laitetta.

### LAITTEEN NIMELLISARVOT

Käyttöjännite	90 - 264 V~
Taajuus	50/60 Hz
Teho	12 W

### KÄYTTÖOLOSUHTEET

Älä käytä laitetta tulenarkojen nesteiden tai kaasujen lähistöllä. Jokainen sähkölaite muodostaa vaaratekijän sellaisessa ympäristössä.

Lämpötila	0 - 55°C
Kosteus	5 % - 90 %

### LAITTEEN ASENNUS

Säätötoiminnot on asennettava paneelille, jotta käyttäjällä olisi rajoitettu pääsy taustakytkentöihin.



Για να αποφυγείτε τον χιυδυνο ηλεκτροπληξιας που μπορεί να προχαλεσει τραυματ ιομο ατομων, αχολουθηοτε ολες πς οδηγιες υσφαλειας του φυλλαδιου.



Αυτο το συμβολο προειδοποιει το χρηστη για δυνατοτητα χινδυνου ηλεκτροπληξι ας οτυν μπορεί να υπορχει προσβαση σε επιχινδυνες τασεις.



Αχροδεχτης προστυτευτιχης γειωωσης. Π ροσφερεται για συνδεση του χαλωδιου τρο φοδοσιας.

\*

Ευν ο εξοπλισμος χρησιμοποιοιτυι χατα τροπο που δεν περιγραφεται υπο τον χατασχευαστη, η προστασια που προσφερεται απο το προιον μπορεί να αλλοιωθει.

\*

Μην αλλαφετε χανένα ανταλλαχτιχο (ή μέας) που δεν αναφέρεται χαθαρά ότι μπορεί να αν τιχατασταθεί από τον παρομηθευτή μας.

\*

Ολες οι χαλωδιώσεις πάέτει να είναι ούμφνες με τιστοπιχές παροδιαγαφές και ναγίνονται απ ό ειδικευμένο παροσωτιχο.

\*

Η γείωση πάέπει να συνδεθεί παιν υτό οποιοοήποτε άλλο χαλώδιο (και να αποσυνδέεται τελε υταίο).

\*

Ενας διαχοπίης στην χεντιχιή τροφοδοσία είναι απααίτητος χοντά οτον εξοπλισμό, εύχολη ς παόσβασης για τον / ειαιοτή.

### ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ ΕΞΟΠΛΙΣΜΟΥ

Τύοη τροφοδουίας	90/264 V~
Συχνότητα	50/60 Hz
Ιοχύς αεύματος	12 VA

### ΣΥΝΘΗΚΕΣ ΠΕΡΙΒΑΛΛΟΝΤΟΣ

Μη βάζετε σε λειτουαγίν το όαγασία εύφλεχτων υγαών η ατμών. Λειτουαγία σε τέτοιο πεαιβ άλλον είναι επιχινδυνο για την ασφαλεία.

θεαμοχασία	0 έως 55°C
Υγγασία	5 έως 90 %

### ΕΓΚΑΤΑΣΤΑΣΗ

Ο ελεγχτής πάέπει να συναμολογηθεί σε πίναχα για να παριοαισθεί η παόσβαση του χειαισ τή στους πίσω αχροδέχτες.

## VEILIGHEIDSVEREISTEN

NL2I-6060



Teneinde het gevaar voor elektrische schokken die verwondingen kunnen veroorzaken te verminderen, alle instructies van deze documentatie navolgen.



Dit symbool waarschuwt de gebruiker voor een potentieel schokgevaar wanneer toegang bestaat tot onderdelen die onder gevaarlijke spanning staan.



Aansluitklem voor de beveiligingsbeaarding. Voorzien voor de verbinding van de geleider van het systeem voor beveiligingsbeaarding.

- \* Wanneer de apparatuur op een manier wordt gebruikt die niet door de fabrikant is aanbevolen kan de beveiliging van de apparatuur haar doeltreffendheid verliezen.
- \* Geen onderdelen vervangen die niet als vervangbaar zijn aangeduid door onze leverancier.
- \* Alle bedrading dient conform te zijn aan lokale normen en te worden aangelegd door bevoegd ervaren personeel.
- \* De beaarding dient vóór elke andere bedrading te worden aangesloten (en als laatste te worden ontkoppeld).
- \* Een hoofdnetschakelaar is in de nabijheid van deze apparatuur vereist.

### TECHNISCHE GEGEVENS

Voedingsspanning	90 tot 264 V~
Frequentie	50/60 Hz
Vermogen of stroomvermogen	12 VA

### OMGEVING

Gebruik het apparaat niet bij brandbare vloeistoffen of dampen. Het gebruik van elektrische apparatuur in zo'n omgeving is gevaarlijk.

Omgevingstemperatuur	0 tot 55°C
Vochtigheidsgraad	5 % - 90%

### INSTALLATIE VAN DE APPARATUUR

De controle-eenheid dient op een paneel te worden gemonteerd om toegang door de operateur tot de achter aansluitklemmen te verhinderen.



## INSTRUÇÕES DE SEGURANÇA

PO2I-6060



Para reduzir o risco de choque eléctrico que pode causar danos físicos, siga todas as instruções de segurança contidas nesta documentação.



Este símbolo avisa o utilizador sobre um eventual perigo de choque quando são acessíveis tensões sob tensão perigosas.



Terminal de terra de protecção. Fornecido para a conexão do condutor do sistema de alimentação de terra de protecção.

- \* Se o equipamento for utilizado de uma forma não especificada pelo fabricante, a protecção normalmente facultada pode falhar.
- \* Não se deve substituir qualquer componente (ou peça) que não seja explicitamente especificado como substituível pelo nosso revendedor.
- \* Todos os fios devem estar em conformidade com as normas locais e instalados por profissionais autorizados.
- \* O terminal de terra deve ser ligado antes de qualquer outro fio (e desligado em último lugar).
- \* É necessário um interruptor na alimentação principal perto do equipamento.

### ESPECIFICAÇÕES DO EQUIPAMENTO

Voltagem	90 - 264 V~
Frequência	50/60 Hz
Potência	12 VA

### CONDIÇÕES DO MEIO AMBIENTE

Não colocar o equipamento em funcionamento na presença de líquidos ou vapores inflamáveis. A utilização de qualquer equipamento eléctrico num ambiente deste tipo comporta riscos de segurança.

Temperatura	0 a 55°C
Humidade	5 % a 90%

### INSTALAÇÃO DO EQUIPAMENTO

O controlador deve ser montado num painel para limitar o acesso do operador aos terminais traseiros.

## SÄKERHETSFÖRESKRIFTER

SW2I-6060



Följ noga handbokens samtliga säkerhetsföreskrifter för att undvika elstötar och åtföljande personskador.



Denna symbol varnar användaren för risk för elchock vid tillfällig åtkomst av spänningsförande del.



Skyddat jorduttag. Avsedd för anslutning av skyddande jordnätets ledare.

- \* Om utrustningen används på ett sätt som ej förutsetts av tillverkaren kan säkerhetsskyddet visa sig vara otillräckligt.
- \* Byt inte ut någon komponent (eller del) om denna inte klart angivits som utbytbar av tillverkaren.
- \* All kabeldragning skall följa de lokala föreskrifterna och utföras av en kompetent och erfaren fackman.
- \* Jorduttaget måste anslutas innan all annan kabeldragning (och kopplas från sist).
- \* En nätströmbrytare skall finnas i närheten av utrustningen, inom bekvämt räckhåll för operatören.

### UTRUSTNINGENS MÄRKDATA

Nätspänning	90 till 264 V~
Frekvens	50/60 Hz
Effekt eller märkström	12 VA

### MILJÖVILLKOR

Använd inte utrustningen i närheten av lättantändliga vätskor eller ångor. Drift av elektriska instrument i en sådan omgivning är att leka med säkerheten.

Temperatur	0 till 55°C
Fuktighet	5 - 90 %

### INSTALLERING AV UTRUSTNING

Kontrollern skall monteras i en panel för att minska operatörens åtkomst till de bakre terminalerna.

# HONEYWELL SERVICE CENTERS

**ARGENTINA**

HONEYWELL S.A.I.C.  
BELGRANO 1156  
BUENOS AIRES  
ARGENTINA  
Tel. : 54 1 383 9290

**AUSTRALIA**

HONEYWELL LIMITED  
5 Thomas Holt Drive  
North Ryde Sydney  
NSW AUSTRALIA 2113  
Tel. : 61 2 353 7000

**BELGIUM**

HONEYWELL S.A.  
Avenue de Schipol, 3  
1140 BRUSSELS  
BELGIUM  
Tel. : 32 2 728 27 11

**CANADA**

HONEYWELL LIMITED  
THE HONEYWELL CENTRE  
529 Mc Nicoll Avenue  
M2H 2C9 NORTH YORK, ONTARIO  
CANADA  
Tel. : 416 502 5200

**DENMARK**

HONEYWELL A/S  
Lyngby Hovedgade 98  
2800 LYNGBY  
DENMARK  
Tel. : 45 45 93 56 56

**FRANCE**

HONEYWELL S.A.  
Bâtiment "le Mercury"  
Parc technologique de St Aubin  
Route de l'Orme  
91190 SAINT-AUBIN  
FRANCE  
Tel. from France: 01 60 19 80 00  
From other countries: 33 1 60 19 80 00

**HUNGARY**

HONEYWELL Kft  
Volgy U 30  
H-1026 BUDAPEST  
HUNGARY  
Tel. : 36 1 116 76 59

**MEXICO**

HONEYWELL S.A. DE CV  
AV. CONSTITUYENTES 900  
COL. LOMAS ALTAS  
11950 MEXICO CITY  
MEXICO  
Tel. : 52 5 259 1966

**ASIA PACIFIC**

HONEYWELL ASIA PACIFIC Inc.  
Room 3213-3225  
Sun Kung Kai Centre  
No 30 Harbour Road  
WANCHAI  
HONG KONG  
Tel. : 852 829 82 98

**AUSTRIA**

HONEYWELL AUSTRIA G.m.b.H.  
Handelskai 388  
A1023 VIENNA  
AUSTRIA  
Tel. : 43 1 727 800

**BRAZIL**

HONEYWELL DO BRASIL AND CIA  
Rua Jose Alves Da Chunha  
Lima 172  
BUTANTA  
05360.050 SAO PAULO SP  
BRAZIL  
Tel. : 55 11 819 3755

**CZECH REPUBLIC**

HONEYWELL, spol.s r.o.  
Budejovicka 1  
140 00 Praha 4  
Czech Republic  
Tel. : 42-2-6112-2777

**FINLAND**

HONEYWELL OY  
Ruukintie 8  
FIN-02320 ESPOO 32  
FINLAND  
Tel. : 358 0 3480101

**GERMANY**

HONEYWELL AG  
Kaiserleistrasse 39  
Postfach 10 08 65  
D-63067 OFFENBACH/MAIN  
GERMANY  
Tel. : 49 69 80 640

**ITALY**

HONEYWELL S.p.A.  
Via P. Gobetti, 2/b  
20063 Cernusco Sul Naviglio  
ITALY  
Tel. : 39 02 92146 1

**NETHERLANDS**

HONEYWELL BV  
Laaderhoogtweg 18  
NL-1101 EA AMSTERDAM ZO  
THE NETHERLANDS  
Tel. : 31 20 56 56 911

# HONEYWELL SERVICE CENTERS

**NORWAY**

HONEYWELL A/S  
Askerveien 61  
PO Box 263  
N-1371 ASKER  
NORWAY  
Tel. : 47 66 90 20 30

**PORTUGAL**

HONEYWELL PORTUGAL LDA  
Edifício Suecia II  
Av. do Forte nr 3 - Piso 3  
CARNAXIDE  
2795 LINDA A VELHA  
PORTUGAL  
Tel. : 351 1 4172 602

**REP. OF SINGAPORE**

HONEYWELL PTE LTD.  
BLOCK 750E CHAI CHEE ROAD  
06-01 CHAI CHEE IND. PARK  
1646 SINGAPORE  
REP. OF SINGAPORE  
Tel. : 65 2490 100

**SLOVAK REPUBLIC**

HONEYWELL  
Trnavska 3  
831 04 BRATISLAVA  
SLOVAKIA  
Tel. : 42 7 526 1409

**SPAIN**

HONEYWELL  
Josefa Valcarcel, 24  
PO Box 29106  
28027 MADRID  
SPAIN  
Tel. : 34 91 32 02 112

**SWITZERLAND**

HONEYWELL A.G.  
Hertistrasse 2  
8304 WALLISELLEN  
SWITZERLAND  
Tel. : 41 1 839 2525

**U.S.A.**

HONEYWELL INC.  
INDUSTRIAL CONTROLS DIV.  
1100 VIRGINIA DRIVE  
PA 19034-3260 FT. WASHINGTON  
U.S.A.  
Tel. : 215 641 3000

**POLAND**

HONEYWELL Ltd  
Ul Augustowska 3  
PL-02981 WARSAW  
POLAND  
Tel. : 48 2 642 25 70

**REPUBLIC OF IRELAND**

HONEYWELL  
Unit 5  
Long Mile Road  
DUBLIN 12  
Republic of Ireland  
Tel. : 353 1 4565944

**RUSSIA**

HONEYWELL INC  
Tryokhprundny Pereulok 11.13  
SU 10 3001 MOSCOW  
Tel. : 7095 29 92 531

**SOUTH AFRICA**

HONEYWELL LTD  
34 Harry Street  
Robertsham  
JOHANNESBURG 2091  
REPUBLIC OF SOUTH AFRICA  
Tel. : 27 11 680 3440

**SWEDEN**

HONEYWELL A.B.  
Storsatragrand 5  
S-127 86 Skarholmen STOCKHOLM  
SWEDEN  
Tel. : 46 8 775 55 00

**UNITED KINGDOM**

HONEYWELL HOUSE  
Arlington Business Park  
BRACKNELL  
Berkshire RG12 1EB  
UNITED KINGDOM  
Tel. : 44 344 826 000

**VENEZUELA**

HONEYWELL CA  
APARTADO 61314  
1060 CARACAS  
VENEZUELA  
Tel. : 58 2 239 0211



